



FORM PTO-1390 (REV. 11-2000)		U.S. DEPARTMENT OF COMMERCE PATENT AND TRADEMARK OFFICE	ATTORNEY'S DOCKET NUMBER HRCMP002USNP
TRANSMITTAL LETTER TO THE UNITED STATES DESIGNATED/ELECTED OFFICE (DO/EO/US) CONCERNING A FILING UNDER 35 U.S.C. 371			U.S. APPLICATION NO. (if known, see 37 CFR 1.5) 09/763250
INTERNATIONAL APPLICATION NO. PCT/US99/27771	INTERNATIONAL FILING DATE 22.11.99	PRIORITY DATE CLAIMED 15.06.99	
TITLE OF INVENTION Apparatus for Calculating Time Periods			
APPLICANT(S) FOR DO/EO/US Craig, H. Randall			
Applicant herewith submits to the United States Designated/Elected Office (DO/EO/US) the following items and other information:			
<p>1. <input checked="" type="checkbox"/> This is a FIRST submission of items concerning a filing under 35 U.S.C. 371.</p> <p>2. <input type="checkbox"/> This is a SECOND or SUBSEQUENT submission of items concerning a filing under 35 U.S.C. 371.</p> <p>3. <input checked="" type="checkbox"/> This is an express request to begin national examination procedures (35 U.S.C. 371(f)). The submission must include items (5), (6), (9) and (21) indicated below.</p> <p>4. <input type="checkbox"/> The US has been elected by the expiration of 19 months from the priority date (Article 31).</p> <p>5. <input checked="" type="checkbox"/> A copy of the International Application as filed (35 U.S.C. 371(c)(2))</p> <p>a. <input type="checkbox"/> is attached hereto (required only if not communicated by the International Bureau).</p> <p>b. <input checked="" type="checkbox"/> has been communicated by the International Bureau</p> <p>c. <input checked="" type="checkbox"/> is not required, as the application was filed in the United States Receiving Office (RO/US).</p> <p>6. <input type="checkbox"/> An English language translation of the International Application as filed (35 U.S.C. 371(c)(2)).</p> <p>a. <input type="checkbox"/> is attached hereto.</p> <p>b. <input type="checkbox"/> has been previously submitted under 35 U.S.C. 154(d)(4).</p> <p>7. <input checked="" type="checkbox"/> Amendments to the claims of the International Application under PCT Article 19 (35 U.S.C. 371(c)(3))</p> <p>a. <input type="checkbox"/> are attached hereto (required only if not communicated by the International Bureau).</p> <p>b. <input type="checkbox"/> have been communicated by the International Bureau.</p> <p>c. <input type="checkbox"/> have not been made; however, the time limit for making such amendments has NOT expired.</p> <p>d. <input checked="" type="checkbox"/> have not been made and will not be made.</p> <p>8. <input type="checkbox"/> An English language translation of the amendments to the claims under PCT Article 19 (35 U.S.C. 371(c)(3)).</p> <p>9. <input checked="" type="checkbox"/> An oath or declaration of the inventor(s) (35 U.S.C. 371(c)(4)).</p> <p>10. <input type="checkbox"/> An English language translation of the annexes of the International Preliminary Examination Report under PCT Article 36 (35 U.S.C. 371(c)(5)).</p> <p>Items 11 to 20 below concern document(s) or information included:</p> <p>11. <input type="checkbox"/> An Information Disclosure Statement under 37 CFR 1.97 and 1.98.</p> <p>12. <input type="checkbox"/> An assignment document for recording. A separate cover sheet in compliance with 37 CFR 3.28 and 3.31 is included.</p> <p>13. <input type="checkbox"/> A FIRST preliminary amendment.</p> <p>14. <input type="checkbox"/> A SECOND or SUBSEQUENT preliminary amendment.</p> <p>15. <input type="checkbox"/> A substitute specification.</p> <p>16. <input type="checkbox"/> A change of power of attorney and/or address letter.</p> <p>17. <input type="checkbox"/> A computer-readable form of the sequence listing in accordance with PCT Rule 13ter.2 and 35 U.S.C. 1.821 - 1.825.</p> <p>18. <input type="checkbox"/> A second copy of the published international application under 35 U.S.C. 154(d)(4).</p> <p>19. <input type="checkbox"/> A second copy of the English language translation of the international application under 35 U.S.C. 154(d)(4).</p> <p>20. <input type="checkbox"/> Other items or information:</p>			
EL556131513US			

U.S. APPLICATION NO. 09/763250 INTERNATIONAL APPLICATION NO.		ATTORNEY'S DOCKET NUMBER HRCM P002USNP					
21. <input checked="" type="checkbox"/> The following fees are submitted: BASIC NATIONAL FEE (37 CFR 1.492 (a) (1) - (5)): Neither international preliminary examination fee (37 CFR 1.482) nor international search fee (37 CFR 1.445(a)(2)) paid to USPTO and International Search Report not prepared by the EPO or JPO. \$1000.00 International preliminary examination fee (37 CFR 1.482) not paid to USPTO but International Search Report prepared by the EPO or JPO \$860.00 International preliminary examination fee (37 CFR 1.482) not paid to USPTO but international search fee (37 CFR 1.445(a)(2)) paid to USPTO \$710.00 International preliminary examination fee (37 CFR 1.482) paid to USPTO but all claims did not satisfy provisions of PCT Article 33(1)-(4) \$690.00 International preliminary examination fee (37 CFR 1.482) paid to USPTO and all claims satisfied provisions of PCT Article 33(1)-(4) \$100.00 ENTER APPROPRIATE BASIC FEE AMOUNT =		CALCULATIONS PTO USE ONLY <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: right;">\$ 710.00</td> <td style="width: 50%;"></td> </tr> <tr> <td></td> <td></td> </tr> </table>		\$ 710.00			
\$ 710.00							
Surcharge of \$130.00 for furnishing the oath or declaration later than <input type="checkbox"/> 20 <input type="checkbox"/> 30 months from the earliest claimed priority date (37 CFR 1.492(e)).		\$					
CLAIMS	NUMBER FILED	NUMBER EXTRA	RATE				
Total claims	127 - 20 =	107	x \$18.00				
Independent claims	11 - 3 =	8	x \$80.00				
MULTIPLE DEPENDENT CLAIM(S) (if applicable)			+ \$270.00				
TOTAL OF ABOVE CALCULATIONS =		\$ 3276.00					
<input type="checkbox"/> Applicant claims small entity status. See 37 CFR 1.27. The fees indicated above are reduced by 1/2.		+ \$ 1638.00					
SUBTOTAL =		\$ 1638.00					
Processing fee of \$130.00 for furnishing the English translation later than <input type="checkbox"/> 20 <input type="checkbox"/> 30 months from the earliest claimed priority date (37 CFR 1.492(f)).		\$					
TOTAL NATIONAL FEE =		\$					
Fee for recording the enclosed assignment (37 CFR 1.21(h)). The assignment must be accompanied by an appropriate cover sheet (37 CFR 3.28, 3.31). \$40.00 per property +		\$					
TOTAL FEES ENCLOSED =		\$ 1638.00					
		Amount to be refunded:	\$				
		charged:	\$				
a. <input checked="" type="checkbox"/> A check in the amount of \$ <u>1638.00</u> to cover the above fees is enclosed. check #7215 b. <input type="checkbox"/> Please charge my Deposit Account No. _____ in the amount of \$ _____ to cover the above fees. A duplicate copy of this sheet is enclosed. c. <input checked="" type="checkbox"/> The Commissioner is hereby authorized to charge any additional fees which may be required, or credit any overpayment to Deposit Account No. <u>15-0610</u> . A duplicate copy of this sheet is enclosed. d. <input type="checkbox"/> Fees are to be charged to a credit card. WARNING: Information on this form may become public. Credit card information should not be included on this form. Provide credit card information and authorization on PTO-2038.							
NOTE: Where an appropriate time limit under 37 CFR 1.494 or 1.495 has not been met, a petition to revive (37 CFR 1.137 (a) or (b)) must be filed and granted to restore the application to pending status.							
SEND ALL CORRESPONDENCE TO  021121 PATENT TRADEMARK OFFICE		 SIGNATURE <u>Carl Oppedahl</u> NAME <u>32,746</u> REGISTRATION NUMBER					

Apparatus for Calculating Time Periods and Future Dates

BACKGROUND

1. Field of the Invention

The present invention relates generally to calendars, especially to a single axis rotatable disc calendar, and to methods of calculating time periods and future dates based on current or past events. More particularly, the invention relates to calculators for determining fertility timing, testing and treatment time periods and future event dates.

2. Description of the Prior Art

Many professions require the calculation of time periods in days, weeks and months, either forwards or backwards, for purposes of establishing a date or dates at some increment of time from a given start date, or from a particular event. Such calculations often require knowing the day of the week a calculated date falls on, or planning a schedule of events so that particular events fall on certain days of the week, or to avoid weekends. These calculations are often critical in terms of deadlines imposed by laws, rules or contracts. These calculations are complicated when time periods run for several months, which have different numbers of days, and especially for time periods running over February in a leap year. Professions requiring these types of calculations include law, banking, insurance, construction and medicine. In particular, the field of human fertility medicine involves many complex time period calculations.

Human fertility, infertility, and contraception evaluations are characterized by a large number of basic tests, the majority of which require accurate timing relative to the female menstrual cycle or ovulation cycle. Many contraceptive methods, fertility therapies, or infertility treatments are also dependent on menstrual cycle or ovulation timing.

Human fertility physiology is unique among the mammals, especially regarding the female system. The male system is a relatively simple design

consisting of a continuous "conveyor belt" sperm production factory under the control of a non-cyclic hormone, testosterone, itself under the control of a non-cyclic central axis of lutenizing hormone (LH), follicular stimulating hormone (FSH), and GnRH hormones. In contrast, the female system is much more complex, consisting primarily of interdependent physiologic cycles designed to release a fertilizable egg cell at an optimal point in time to maximize successful reproductive potential. This system is characterized by endocrine negative and positive feedback cycles utilizing changes in the concentrations of estrogen and progesterone under the control of cyclic LH, FSH, and GnRH central axis hormones. The final product of these cyclic control systems is the female menstrual cycle. Hormone levels, anatomic changes, ovulation (and thus fertile periods), and embryo implantation patterns are integral parts of the menstrual cycle, and occur at specified points or ranges within the cycle. Pathologic alterations in the female reproductive systems also follow repeated patterns in the menstrual cycle, including hormone imbalances, abnormal (or absent) ovulation, uterine lining preparation problems, or embryo implantation difficulties. Because the normal and the pathologic components of the menstrual cycle occur in a predictable, repetitive temporal pattern, they can be described by algorithms, with each component tied to a relatively fixed landmark event in the cycle.

Several devices are known for calculating a variety of time periods and timing various things. U.S. Patent No. 4,751,373 to Ivey discloses a time period calculator in which a wheel with 365 divisions for days of the year is further divided into weeks and months. A cursor is provided to accommodate a leap year.

U.S. Patent No. 5,313,723 to Cregg discloses a perpetual calendar comprising two discs. One disc has a window with adjacent marks indicating the days of the week, and other marks indicating months and years. The second disc contains year tables and day grids. The user adjusts the two wheels to show the monthly calendar for any month of any year, including leap years.

Gestational calculating wheels are simple calculating devices used to determine the gestation age of a pregnancy for any calendar date, and to determine landmark events of a pregnancy such as the expected delivery date. These circular rotating scale calculators are made in a large variety of design formats. The basic design consists of a calendar date scale of one year length wrapped once around a circular scale containing 365 days. A single independently rotating scale attached to the center pin contains gestational week markings, along with other printed pregnancy information, tests, and treatments that are dependent upon gestational age. The gestational age circular scale always contains a label for the first day of the last menstrual period (LMP), and some have a label for ovulation or conception day. These gestational calculating wheels are used only for displaying pregnancy related information, not for fertility test or treatment information, and they have no markings for cycle days.

A Depo-Provera calculating wheel is often distributed to medical personnel who dispense the contraceptive drug Depo-Provera, which is administered as an injection given once every 12 weeks. This device is similar to the gestational calculating wheel, using the same calendar date scale, but its single independently rotating medication day wheel ranges over the entire circumference instead of a nine-month circumference. The medication day wheel contains four approximately equal spaced markings (12 weeks apart) indicating the times to schedule Depo-Provera injections during the year.

U.S. Patent No. 4,092,521 to Weisshaar discloses a circular scale coaxial device made of 3 or 4 independently rotating scales that determine the fertile time periods and the "sterile" time periods during a menstrual cycle. The first disk displays a fixed 31-day calendar month wrapped around the entire circumference of a circular scale. The other disks display 31 cycle days, fertility periods, and sterility periods. An optional fourth disk is used to display a reverse cycle backward from the next following menstrual cycle. No labels for fertility tests or treatments are included.

U.S. Patent No. 4,465,077 to Schneider discloses an electronic computer with keypad data entry which stores information from a patient's medical history,

including past menstrual cycle dates, basal body temperature (BBT) charts, gynecologic disorders, and ovulation prediction indicators. It then statistically calculates the patient's fertility status and estimated chance of achieving pregnancy. This device is not used to time specific fertility tests or treatments.

5 U.S. Patent No. 4,625,099 to Freedom discloses a circular scale coaxial device made of a 365-day calendar date scale and an independently rotating cycle day scale. The entire calendar year is wrapped once around the calendar date scale. An overlying cycle day scale is also divided into 365 equal days, with several menstrual cycles displayed as marked domains separated from each other by small "spacer" segments. The cycle domains have as few as 23
10 days or as many as 35 consecutive days each, with the remaining cycle domains having an incrementally larger number of days between these two extremes. Within each cycle domain, the cycle days are numbered consecutively from the first day of the last menstrual period. The only other labeled indicator marks
15 "fertile" days for two days prior and two days after expected ovulation, and alerts the user to the optimum fertility period of the cycle. Presumably, the user will ignore all the other cycle domains and use only the one that contains her average cycle length.

20 U.S. Patent No. 4,737,619 to Freedom discloses the addition of "non-fertility" labels to the device described above, and extends the range of cycle lengths in domains from 20 days to 35 days, instead of 23 days to 35 days.

25 U.S. Patent No. 4,752,880 to Aeschlimann discloses an electronic calculator designed to store the patient's basal body temperature (BBT) data during a menstrual cycle. The calculator contains counters which allow entry of BBT data only at 24-hour intervals in order to improve accuracy.

30 U.S. Patent No. 5,310,994 to Thabet discloses a non-complex circular scale device containing a calendar scale displaying the days of the month, and an independently rotating circular scale displaying the average number of days in the user's menstrual cycle. The simple design is intended for use in Third World countries, to identify fertile and non-fertile times of the menstrual cycle.

US Design Patent No. D389,587 to Porrazzo discloses an ornamental design for a slide device to display fertile times of the menstrual cycle.

U.S. Patent No. 3,964,674 to Van der Gaast discloses a circular scale coaxial device containing a basic plate with "longest period" scale printed as a portion of the circumference, and two independently rotating middle and top plates onto which "shortest period" and "LMP day of month" pointers are printed. Data windows cut into the top plate reveal the first and last days of the fertile period for that cycle. Operation of this device is complicated due to confusing labeling and the use of three sets of date windows to be used with three sets of calendar months.

U.S. Patent No. 4,350,878 to Schwarz discloses a circular scale coaxial device containing a base plate with menstrual period - basal temperature - ovulation scale printed on a portion of the circumference, a middle plate with a reversed single cycle day scale on a portion of its circumference, and a top plate circumferentially divided into two generic months, a 30-day and a 31-day, around the entire circumference. The middle plate is transparent to allow visualization of the alignment with the other plates. An optional second transparent plate can be added between the base plate and middle plate, upon which another ovulation range marked is printed to extend the use of the calculator for users with variable cycle lengths. This device is severely limited by its "two generic months" for calendar date application because it does not allow for 31 day-to-31 day transitions or for February/leap February transitions. The LMP and ovulation range markers are also severely limited by their fixed distance because they are both printed on the same scale and plate, although the optional second ovulation plate can partially overcome this problem.

U.S. Patent No. 4,752,674 to Rosenwaks discloses a circular and spiral scale coaxial device containing a base plate with its circumference evenly divided into a 28-day scale, a transparent middle plate containing a spiral scale with over 4 turns upon which 3 generic months are printed (30-day then 31-day then 30-day), and a transparent top plate containing a 14-day "Donor" scale on half of the circumference along with rectangular arc data windows for reading

results on the base plate scales. An In Vitro Fertilization egg donor cycle hCG ovulation trigger injection day can be rotated on the top plate to correspond with the recipient's LH surge cycle day, to determine the optimal day of subsequent embryo transfer into the recipient's uterus. This device also has a severely
5 restricted calendar day scale that cannot accommodate a 31 day-to-31 day transition or February/leap February transition.

None of the prior art devices provide a simple, accurate, easy to read device for calculating time periods and future dates, which takes into account leap years and the varying month-to-month transitions. In particular, none of the
10 prior art devices provides a device for easily and accurately determining and displaying the calendar date, weekday, and cycle day of nearly all fertility and family planning tests and therapies, which takes into account leap years and the varying month-to-month transitions. It is an object of the instant invention to provide such devices.

SUMMARY OF THE INVENTION

The calculating apparatus and methods of the invention provide a simple, accurate, easy-to-read means for calculating time periods and future dates, which take into account leap years and the varying month-to-month transitions.
20 In accordance with an embodiment of the instant invention, the apparatus comprises a base with a circular display of first markings. The markings are divided into 153 equiangular parts disposed along substantially the entire periphery of the circular display, the 153 equiangular parts grouped into five segments disposed in clockwise fashion around the circular display. The first
25 segment has 31 equiangular parts, the second segment has 30 equiangular parts and is labeled "April" and "September", the third segment has 31 equiangular parts and is labeled "May" and "October", the fourth segment has 30 equiangular parts and is labeled "June" and "November", and the fifth
30 segment has 31 equiangular parts and is labeled "July" and "December". The first segment may be labeled "March" and "August", "August" and "January",

"March", "August" and "January", or "February", "September" and "April". The base of the apparatus is preferably substantially planar and opaque.

In an alternative embodiment, the base comprises a circular display of first markings divided into at least 150 equiangular parts disposed along substantially the entire periphery of the circular display, the at least 150 equiangular parts grouped into at least five segments. The segments are arranged in either of two sequences. In one sequence, the first segment has 31 equiangular parts and is labeled "January", the second segment has 28 equiangular parts and is labeled "February", the third segment has 31 equiangular parts and is labeled "March" and "Leap January", the fourth segment has 29 equiangular parts and is labeled "Leap February", and the fifth segment has 31 equiangular parts and is labeled "Leap March". In the second sequence, the first segment has 31 equiangular parts and is labeled "Leap January", the second segment has 29 equiangular parts and is labeled "Leap February", the third segment has 31 equiangular parts and is labeled "Leap March" and "January", the fourth segment has 28 equiangular parts and is labeled "February", and the fifth segment has 31 equiangular parts and is labeled "March", respectively, in clockwise fashion around the circle. In an alternative embodiment, the circular display of markings is divided into 153 equiangular parts grouped into six segments, wherein a sixth segment comprising three equiangular parts is located between the first and fifth segment.

In a further embodiment, the apparatus has both of the above circular calendar displays, either on the same side of the base or on opposite sides of the base.

In another embodiment of the invention, one or more discs are rotatably joined at a central axis to the circular display portion of the base. The discs have a circular display of markings disposed along at least a section of the periphery thereof, the markings representing activities or events of interest. The events of interest may be related to a series of medical treatments, banking, law, construction or insurance.

In one embodiment in which the events are medical, the apparatus is adapted to determine physiologic phases and optimum time for fertility tests, treatments, and protocols based on menstrual or ovulation physiology. The apparatus comprises first and second discs adapted to be rotatably joined at a central axis to the circular display on the base. The first disc has at least a circular display of markings disposed along at least a portion of the periphery thereof, these markings representing the days of a menstrual cycle. One or more cycles with the same or different lengths may be represented. The second disc has at least a circular display of markings disposed along at least a portion of the periphery thereof, these markings representing events of interest relating to one or more menstrual cycles. In a further embodiment, the first disc further comprises additional markings disposed in a circular display, these markings representing initial steps in one or more physiologic phase or fertility test, treatment or protocol. The second disc further comprises additional markings disposed in a circular display, these markings representing the final steps in the physiologic phase, test, treatment or protocol from the first disc. In a modification of this embodiment, all of the steps of a phase, test, treatment or protocol on the first and second discs are the same color, and each phase, test, treatment and protocol is a different color. The base and the first disc are preferably opaque and the second disc is preferably transparent. The first and second discs may comprise a matched set, which is exchangeable with other disc sets containing steps for different fertility tests, treatments, protocols and physiologic phases. The menstrual cycles represented may be those of humans or non-human animals.

In a further embodiment, the apparatus also has an additional disc with at least a circular display of markings disposed along at least a portion of the periphery thereof. The markings are divided into equiangular parts labeled with the days of the week.

In a still further embodiment, the apparatus further comprises a mask which covers the unused portions of the calculator once a calculation is made. The mask is an opaque disc with a section cut out, and is the same size as the

circular display on the base, and is adapted to be rotatably set in coaxial relation with the base and discs. The mask may be made of two sections which overlap to create an opening of variable size.

In an additional embodiment, the apparatus further comprises an indicator arm for indicating the possibility of pregnancy. The indicator arm comprises a transparent arm extending from the center of the calculator to at least the outer edge of the second disc, the arm adapted to be rotatably set in coaxial relation therewith, and having a first marker representing intercourse and a second marker representing the chance of sperm. The second marker extends from the first marker out to a distance of up to six units, representing up to six days, including the day indicated by the first marker. In use, the start of the last menstrual period on the first disc is aligned with the appropriate calendar day on the base, and the indicator arm is positioned such that the first marker is aligned with the day of the month of intercourse, and the possibility of pregnancy is determined by the overlap of the chance of sperm marker with a chance of egg marker on the first disc, wherein overlap indicates a possibility of pregnancy.

In another embodiment, the apparatus has a reversible locking means for securing the discs to the base. The locking means prevents the discs from rotating once they are aligned.

The first and second discs may be a matched set, exchangeable with other disc sets containing steps for different fertility tests, treatments, protocols and physiologic phases. The base and first disc may be opaque and the second disc may be substantially transparent.

In a still further embodiment, the apparatus is adapted for displaying information relating to fertility for a fraction of a year. The apparatus comprises a base and first and second discs rotatably joined at a central axis. The base has at least a circular display of first markings disposed along at least a section of the periphery of the circular display, the first markings divided into equiangular parts, the equiangular parts labeled with calendar days. The first disc has at least a circular display of second markings disposed along at least a portion of the periphery thereof, the second markings representing the days of a menstrual

cycle, wherein one or more cycles are represented, the cycles having the same or different lengths. The second disc has at least a circular display of third markings disposed along at least a portion of the periphery thereof, the third markings representing events of interest relating to one or more menstrual cycles.

In a further embodiment, the first markings are disposed along the entire periphery of the circular display, the first markings divided into 365 equiangular parts, the equiangular parts labeled with days of the full calendar year. A second circular display of sixth markings disposed along the entire periphery of the circular display may be added to the base, the sixth markings divided into 366 equiangular parts, the equiangular parts labeled with days of the leap year.

In an additional embodiment, the apparatus is adapted to determine optimum time for achieving or avoiding pregnancy based on menstrual or ovulation physiology and a calendar of moon phases, wherein the calculator contains only non-letter, non-number symbols. The calculator comprises a base, first, second and third discs. The base has a circular display divided into equiangular parts, each representing a day in a moon phase, wherein the equiangular parts are present in one or more groups of 29 representing one or more moon phases. The first disc has the circumference thereof divided into equiangular parts similar to the base, wherein a symbol representing a significant day which occurs in cycles is located in the units at intervals according to the cycle, the first disc being smaller than the circular display on the base, and adapted to be rotatably set in coaxial relation therewith so that the outside edge of the first disc lies inside the units on the base. The second disc is also divided into equiangular parts similar to the base, with an annular display of first indicia disposed along substantially the entire periphery thereof, the first indicia representing the days of a menstrual cycle. One or more cycles are represented, the cycles having the same or different lengths. The second disc is smaller than the first disc and adapted to be rotatably set in coaxial relation therewith so that the outside edge of the second disc lies inside the symbols on the first disc. The third disc is divided into equiangular parts, similar to the base,

with an annular display of second and third indicia disposed along substantially the entire periphery thereof, the second indicia representing the days of a menstrual cycle and the third indicia representing a fertile period. The third disc is smaller than the first disc and adapted to be rotatably set in coaxial relation with the base, first and second discs so that the outside edge of the third disc lies inside the symbols on the first disc. In use, the symbol representing a significant day on the first disc is aligned with the appropriate moon phase on the base, and the first disc is affixed to the base. The last menstrual cycle on the second disc is then aligned with the corresponding day on the first disc and base, according to the significant days. The next menstrual cycle on the third disc is then aligned with the corresponding day on the first disc, according to the significant days, causing the third indicia representing a fertile period on the third disc to be aligned with their corresponding day read from the base and first disc. The significant days are preferably religious and are represented by religious symbols. The first and second indicia are preferably red wedge-shaped symbols with a large end on the first day of the menstrual period, and a tapered end on the last day of the menstrual period. The third indicia are preferably baby-shaped symbols, and range from faintly printed through darkly printed and back to faintly printed according to the chance of conception, wherein the darker the symbol the greater chance of conception. In a further embodiment, the base further comprises symbols representing specific times of the year, which may include planting, harvesting, seasons and religious or tribal ceremonies.

In an another embodiment, the apparatus comprises a preferably planar base with one or more parallel linear displays. The base has slits to receive one or more sliding adjustable scales. The linear displays may be divided into segments representing days of the week, days of the month, months of the year, or days of a menstrual cycle. One or more menstrual cycles may be represented, and the cycles may be of different lengths. One of the linear displays may represent events relating to the menstrual cycle, the events being aligned with the appropriate cycle day. The sliding adjustable scales are parallel and adjacent to the linear displays.

In further embodiments, the days of the week, days of the month, months of the year or days of menstrual cycles are listed in segments on one or more sliding adjustable scales. The segments representing days of the week, days of the month and menstrual cycle days are preferably the same size to allow for alignment. A fourth sliding adjustable scale may be added which displays events relating to ovulation.

In an additional embodiment, one of the sliding adjustable scales comprises multiple scales with 28, 29, 30 and 31 days, the scales being attachable end-to-end to provide any month-to-month transition.

In a further embodiment, the apparatus comprises a base and a calendar module. The base has first and second parallel linear displays, the first linear display is divided into first segments, the first segments are labeled with the days of a menstrual cycle. One or more menstrual cycles are represented, wherein the menstrual cycles may be of different lengths. The second linear display represents events relating to specific menstrual cycle days. The calendar module comprises a calendar strip divided into second segments which are labeled with the days of the year, and the days of the year are labeled with the corresponding month. The calendar module is attachable to the base such that the calendar strip is parallel to the first and second linear displays. The first and second segments are the same size so that the days of the year align with the menstrual cycle days. The calendar module may also include a weekday strip listing the days of the week. The calendar strip may list a 365 day year, or a 366 day leap year. The calendar module may also include a menstrual cycle day strip with longer cycles than those on the base.

The base may also have slits which receive at least one sliding adjustable scale, the sliding adjustable scale having a display of events relating to ovulation.

BRIEF DESCRIPTION OF THE DRAWINGS

FIGS. 1A and 1B are graphs showing the phases and physiologic events of a classic, normal menstrual cycle.

FIG. 2 is a detailed graph of the physiologic events of a classic, normal menstrual cycle.

FIG. 3 shows the stages in oocyte development during a classic, normal menstrual cycle.

5 FIG. 4 shows the physiologic stages before and after fertilization.

FIG. 5 illustrates the physiologic phases before and after ovulation.

FIG. 6 shows a menstrual cycle tracked on a standard calendar.

FIG. 7 illustrates a Clomiphene challenge schedule based on the days of the menstrual cycle.

10 FIGS. 8, 9, 10A and 10B show slide-rule type calendars.

FIG. 11 shows a 365 day calendar base.

FIG. 12 illustrates the assembly of the calendar base, optional day of the week disc, middle disc, top disc and mask.

FIGS. 13A and 13B show the 150 and 153 day scales for February and leap year February and the months before and after.

FIG. 14 shows the 153 day base with March through January represented.

FIG. 15 shows a middle disc labeled with menstrual cycle days and initial steps in various treatments.

FIG. 16 shows a top disc labeled with ovulation day and final steps in various treatments.

FIG. 17 shows a weekday disc.

FIGS. 18A and 18B show a one-piece and two-piece mask, respectively.

FIGS. 19A and 19B show an assembled calendar for calculating time periods and dates associated with the menstrual cycle and fertility treatments and therapies, without and with a mask, respectively.

FIGS. 20A-20D illustrate how fixed and variable elements are represented on the calendar.

FIGS. 21A-21V illustrate domains and associated events which may be printed on the discs of a calendar.

FIGS. 22A-22D illustrate the open-ended arc system for matching initial and final steps in a test from one disc to another.

FIG. 23 shows the assembly of an exchangeable leap year module for a slide-rule type calendar.

FIGS. 24A and 24B show the assembly of slide-rule type calendars for fertility tests and treatments.

5 FIGS. 25A-25C show slide-rule type calendars and a photocopied permanent record of the calendar.

FIGS. 26A-26D illustrate the substitution of domain discs on a one-sided or two-sided base.

FIGS. 27A-27D illustrate an LH-surge calculator.

10 FIGS. 28A-28D illustrate the use of an ultrasound calculator.

FIGS. 28E-28G illustrate additional ovulation day scales.

FIGS. 29A-29D illustrate an endometrial biopsy calculator and an early pregnancy calculator, respectively.

15 FIGS. 30A and 30B illustrate a conception family planning calculator and the optional intercourse timing marker arm.

FIGS. 31A and 31B illustrate contraception family planning calculators, with words and with symbols.

FIG. 32 illustrates a calculator for weekday scheduling.

FIG. 33 shows an educational aid calculator with 365 days on one scale.

20 FIG. 34A illustrates a commercial advertising and promotional embodiment of the invention.

FIG. 34B illustrates a cone-shaped embodiment of the invention.

FIGS. 35A-35C illustrate photocopying the disc calendar for a permanent record.

25 FIG. 36 shows the assembly of a calendar base, weekday disc, menstrual cycle disc, adjusted cycle day disc, ovulation day disc and marker arm.

FIGS. 37A and 37B show alternate embodiments of the calendar with 151 and 150 days, respectively.

30 FIGS. 38A and 38B illustrate alternate embodiments of the leap year calendar.

DETAILED DESCRIPTION OF THE INVENTION

The time period and future date calculator of the invention may be adapted to any type of date calculation depending on what events are printed on the discs. The invention will be described in terms of the fertility timing, testing, and treatment calculator embodiment. While the following discussion relates to the menstrual cycle of a human, the invention may be modified to represent the menstrual cycle and associated fertility timing, testing and treatment events of a non-human animal. Examples of non-human animals for which the invention may be modified include cattle, horses, pigs, sheep, and dogs, as well as exotic zoo animals. The calculator may be especially useful for managing captive breeding programs for endangered animals.

MENSTRUAL CYCLE COMPONENTS

The average length of the human menstrual cycle is 28 days, but the normal range for this value is generally between 26 and 38 days. Cycle length is defined as the number of days from the start of one menstrual period to the start of the following menstrual period. Physiologic events within the cycle tend to occur in the same chronological order for all cycles, and are thus somewhat predictable. When these organized chronological events are disrupted by abnormalities or pathology, the reproductive efficiency or integrity of the cycle is diminished or lost, resulting in fertility problems.

A classic, normal menstrual cycle of 28 days has, as key events, onset of menstrual period 1 and ovulation 2, which divides the menstrual cycle approximately in half (FIG. 1A). Physiologic events are divided into the follicular phase 4 lasting approximately 14 days, and the luteal phase 5 lasting approximately 14 days (FIG. 1B). FIG. 2 illustrates the timing of physiologic events including cyclic changes in the primary steroid hormones estrogen, including estradiol 6, and progesterone 7, and cyclic changes in the associated central axis control gonadotropin hormones LH 8 (luteinizing hormone) and FSH 9 (follicle stimulating hormone).

Changes in gonadotrophic and steroid hormones during the menstrual cycle are carefully choreographed and represent the primary driving forces of the other physiologic and anatomic changes in the cycle. Foremost among these changes is the development of the oocyte (egg cell) in the ovary and its subsequent release from the ovary (ovulation). The oocytes lie inside a tiny cyst called the follicle. During the menstrual cycle, the follicle rapidly increases in size, produces the hormone estradiol, then ruptures open to release the egg. It then fills with a blood clot mixed with its internal cells to become a corpus luteum, and then produces the hormone progesterone along with estradiol for the remainder of the cycle. At the end of the cycle it shrinks down and disappears. The follicular and luteal phases are each divided into early, mid and late phases. The early follicular phase is characterized by high FSH and LH, low estradiol and very low progesterone. The mid follicular phase is characterized by decreasing LH and FSH, increasing estradiol and very low progesterone. The late follicular phase is characterized by a small increase in progesterone, high estradiol and a very high surge of LH and FSH. This surge occurs immediately before ovulation. During this time the initially immature oocyte begins to mature, undergoes ovulation, and then enters the fallopian tube to wait for sperm fertilization. The early luteal phase is characterized by a rapid increase in progesterone, continued high estradiol and low LH and FSH. High progesterone, high estradiol and increasing LH and FSH are characteristic of the mid luteal phase. The late luteal phase is characterized by decreasing progesterone and estradiol and increasing LH and FSH.

At the end of the previous menstrual cycle and during the early part of the active menstrual cycle, a number of follicles and their respective oocytes are recruited into the cycle (usually 15 to 20 primordial follicles). During the mid-follicular phase one of the follicles achieves dominance over the others. As the other follicles shrink and disappear, the dominant follicle rapidly grows larger until the oocyte is nearly mature. These events occur just before, during, and after the menstrual period and continue through the follicular phase, ending at the time of ovulation. This part of the menstrual cycle is therefore subdivided

into three sub-phases. FIG. 3 shows a time line starting with day 21 of the previous cycle and extending through the follicular phase 4 and luteal phase 5 of the active cycle to the beginning of the following cycle. The three sub-phases are: the Recruitment sub-phase 10 from prior cycle day 24 until active cycle day 5, then Dominance sub-phase 11 from active cycle day 3 until day 10, and then Growth sub-phase 12 from active cycle day 7 until day 14 ovulation. After ovulation, the luteal phase is subdivided into two sub-phases. The first is the Luteogenesis sub-phase 13 from active cycle day 14 ovulation until day 25, followed by the Luteolysis sub-phase 14 from active cycle day 25 until day 28 when the corpus luteum shrinks and disappears. (FIG. 3).

Near the end of the follicular phase, the LH and FSH hormones drop to their lowest levels of the entire cycle, then suddenly increase very rapidly to extremely high levels. This endocrine event is known as the "LH surge" 15 and lasts less than one day, after which the LH and FSH hormones rapidly decrease to their original levels. The LH surge produces two physiologic effects, final maturation of the oocyte, and triggering of ovulation.

Ovulation is the physical release of the oocyte from the ovary. Prior to ovulation, the oocyte is contained within the cyst-like follicle on the surface of the ovary. This follicle ruptures open at the time of ovulation, expelling the oocyte into the end of the fallopian tube. The oocyte then waits at this position for sperm to arrive and, hopefully, be fertilized. If fertilization 16 occurs, the oocyte becomes a zygote 17 (fertilized egg) and gradually moves down the fallopian tube toward the uterus. During the next 5 to 7 days the zygote cell divides into a multicelled morula 18, and then into a hollow ball of cells called the blastocyst 19. At this time, it completes the journey down the fallopian tube and enters the uterine cavity. After remaining in the uterus for a day or so, the blastula hatches out of its thin protein shell (the zona) and then implants into the lining of the uterine wall. Implantation 20 occurs approximately 7 days after ovulation, and once implanted the blastocyst becomes an embryo 21 (FIG. 4).

Immediately after ovulation, the emptied ovarian follicle fills with blood mixed with internal granulosa cells. From the influence of the LH surge one day

before ovulation, the granulosa cells in the follicular blood clot turn yellow and start to produce large amounts of progesterone hormone. The physiologic term for this transformation is luteinization 22 and results in the formation of the corpus luteum 23 ex-follicle on the ovarian surface. Progesterone hormone is essential to the development and maturation of the lining of the uterus, the endometrium, in preparation for embryo implantation. If implantation occurs, the embryo's placenta starts to produce β -hCG hormone 24 a few days later. This hormone enters the maternal blood stream, and can be measured as the primary component of a pregnancy test (FIG. 5).

When an implanted embryo grows large enough to develop a heart beat, it becomes a fetus. If fertilization or implantation does not occur, the corpus luteum will rapidly shrink and disappear at the end of the luteal phase, resulting in a rapid decline in progesterone production and estradiol production. Once progesterone and estradiol reach very low levels, the next menstrual period begins, completing the menstrual cycle.

In summary, the basic components of the menstrual cycle are:

Menstrual Period	Ovulation
Cycle Day	Luteal Phase-Increasing progesterone
Follicular Phase	Luteogenesis Sub-phase
Recruitment Sub-phase	Luteolysis Sub-phase
Dominance Sub-phase	Fertilization
Growth Sub-phase	Zygote
Increasing Estradiol	Morula
Decreasing LH and FSH	Blastocyst/hatching
Small Increase in Progesterone	Implantation
LH Surge	Embryo - β -hCG increases
	<u>or</u> Decreasing Progesterone and Estrogen
	Next Menstrual Period

TIMING OF FERTILITY TESTS

A large number of fertility related tests are used to evaluate many of the physiologic functions of mammalian reproduction. Because of the intrinsically coordinated chronological physiology of the menstrual cycle, the timing of most of these fertility tests during the cycle is critical. Tests must be done at the proper time during the cycle in order to have meaningful or useful results.

Fertility tests can be grouped into several broad categories, depending on the basic goal desired. These categories include:

1. Education. A series of tests and/or the related physiologic principles can be arranged chronologically within the menstrual cycle for educational purposes. Students, medical personnel in training, and the general public can benefit from a well organized display of reproductive physiology information designed to clarify the relationship between the basic components of the reproductive cycle. An example would be outlining the various sub-phases of the follicular and luteal phases and their relation to the menstrual period and LH-surge.

2. Contraception Timing. Oocytes and sperm have very limited viable lifespans (about 1 day and up to 6 days respectively) which must overlap properly to allow fertilization and conception to occur. Natural contraception methods work by restricting sexual intercourse to periods excluding the oocyte/sperm overlap phase. A visual graphic based method clearly demonstrating the timing of oocyte and sperm lifespan overlap would increase the accuracy and efficacy of natural contraception based on intercourse timing.

3. Conception Timing. Is the converse of contraception timing as described above. Couples desiring to achieve pregnancy (and who have no fertility medical problems) often wish to conceive at a specific convenient time of the year. This targeted conception timing relies on the same physiologic principle of overlapping the life spans of oocytes and sperm by proper timing of sexual intercourse. Conception family planning would benefit from the same visual graphic based method used for contraceptive planning described above.

4. Infertility Test Timing. Accurate results for most infertility medical tests are obtained only if the tests are done at a specific time during the menstrual cycle. Some tests, such as a hysterosalpingogram x-ray, may be appropriately done any time during a period lasting several days at a certain point in the menstrual cycle. Other tests, such as FSH blood tests for a clomiphene challenge test, must be done on only one exact day of the cycle. A graphic based method for timing these tests would improve the accuracy and compliance and reduce the rate of erroneous results or expensive retesting.

5. Infertility Treatment Timing. Most specific treatments for infertility are effective only if they are done at specific times during the menstrual cycle to coincide with appropriate physiologic events. For example, insemination requires placement of sperm into the uterus at or very near the time of ovulation in order to maximize the chance of fertilization of the oocyte. Accurate timing of infertility medical treatments using a graphic based method can improve the success rate (pregnancy rate) of these therapies.

Timing of conception, contraception, and infertility tests and treatment is a relatively well established science. Timed intercourse, tests, and treatments are somewhat standardized, and are determined by menstrual physiology events. The best dates for scheduling these events are usually determined by physically counting out days on a calendar, medical flow sheet, or by subtracting dates mathematically. Nearly all infertility tests and treatments can be grouped into two basic categories: 1) those that are related to physiologic events determined by the menstrual period (specifically the first day of the menstrual period), and 2) those that are related to the day of ovulation and subsequent ovulation associated physiologic events. These tests and treatments can be equivocally timed by the LH-surge because of its fixed relation to the time of ovulation.

COMMON FERTILITY TESTS

Examples of commonly performed fertility tests include, but are not limited to:

1) Tests Related to the Menstrual Period

a) Cycle Day. The medical convention for timing events in the menstrual cycle is to compare the day of the event (or test) to the first day of the Last Menstrual Period (LMP). The first day of a menstrual period is labeled Cycle Day 1 (or CD1), and subsequent days of that menstrual cycle are correspondingly numbered in chronological order - Cycle Day 2, Cycle Day 3, etc. When the following menstrual period starts, the cycle day numbering system starts anew.

b) Calendar Day. This is the standard commonly used date of the month and year which is referenced to the menstrual Cycle Day. A subset of calendar days is the weekday (Monday through Sunday). FIG. 6 illustrates a menstrual period 1 charted on a standard calendar. The cycle days 28, weekdays 36, calendar days 33 and months 34 are shown on the calendar. As shown in FIG. 6, the Last Menstrual Period begins May 23rd, Friday, and Cycle Day 12 is June 3rd, Tuesday (open arrow).

c) Baseline LH and FSH blood tests. The gonadotropin hormones LH and FSH are important guides to determine the ability of the ovary to produce viable oocytes or help achieve regularity in menstrual cycle length. Usually, the FSH level (and occasionally a simultaneously drawn LH level) is obtained on cycle day 1, 2, or 3 in order to obtain physiologically meaningful results.

d) Follicular Phase Sub-Phases. These sub-phases are tied to the menstrual period. Approximate cycle days for these sub-phases are generally:

Recruitment - prior Cycle Day 24 to Cycle Day 5

Dominance - Cycle Day 3 to Cycle Day 10

Growth - Cycle Day 7 to Cycle Day 14 (or ovulation)

These days are general and some authorities will have minor adjustments. The sub-phases tend to overlap.

- 5 e) Clomiphene Challenge Test. This test is used to estimate the Ovarian Reserve, which is a physiologic concept used to describe the ability of the ovary to produce viable oocytes, or the resistance of the ovary to fertility drugs. FIG. 7 is a time line of cycle days 1-15 with the menstrual period indicated by the diagonal lines. A patient takes the fertility drug Clomiphene 25 (usually a 100 mg dose each day for Cycle Days 5, 6, 7, 8, and 9) and has FSH blood tests 26 done on one or two days (typically Cycle Days 3 and 10). The FSH results are added together to obtain a final test result.
- 10
- 15 f) Semen Analysis. A sperm count can be done anytime during the menstrual cycle. However, the sperm specimen may be useful for other tests or treatments later in the cycle (i.e. sperm count results available before these other dependent tests are done may be very helpful in planning the rest of the cycle tests, and therefore it is convenient to obtain a semen analysis during the early or mid follicular phase of the cycle (Cycle Day 1 to 10).
- 20
- 25 g) Hysterosalpingogram x-ray (HSG). This is a radiology test which entails injection of radiocontrast (x-ray dye) through the cervix and into the uterine cavity. The dye will then travel through the fallopian tubes reaching the pelvic cavity. An x-ray picture will reveal the size and shape of the uterine cavity along with a trace of the inside of the fallopian tubes. It is designed to check for polyps or defects inside the uterus, or for blocked fallopian tubes. This test should be done after the menstrual bleeding has stopped (or else the dye will get into the blood stream) and before ovulation (or
- 30

else the dye will blow the oocyte out the end of the fallopian tube). In general most HSG x-rays are therefore done between Cycle Days 6 and 10.

- 5 h) Estrogen Blood Tests. These tests are commonly done during treatment cycles when the patient is taking or injecting high dose or gonadotropin fertility drugs (such as Pergonal, Gonal-F, and Follistim). This is usually the case when the patient undergoes In Vitro Fertilization or similar therapy. Several estrogen blood tests (for estradiol) are usually done on specific cycle days during these advanced therapy cycles.
- 10
- 15 i) Ovarian Follicle Ultrasound Tests. Progress in the development of the ovarian follicle containing the oocyte is often monitored by ultrasound tests during the follicular phase of the cycle. The ovarian follicle diameter increases in size until ovulation, and ultrasound evaluation and measurement of the diameter is used to evaluate oocyte maturity and to determine when other tests or treatments should be scheduled. Typical ultrasound tests are done on cycle days 1 through 3, cycle day 7, cycle day 10, and/or days beyond 10 on an as-needed basis.
- 20
- 25 j) Start Day for Urine LH-Testing. Commercial test kits (Ovukit, Ovquick, First Response, Clear Blue Easy, etc.) are available to the public and are designed to determine when the physiologic LH-surge appears in the patient's urine. This is used to determine the day of ovulation. A typical urine LH test kit consists of plastic sticks or filter paper sensitized to the LH hormone. The test material is dipped into the patient's urine once per day for several consecutive days, then subjected to a simple chemical treatment. When the LH hormone appears in the urine at high concentrations (during the
- 30

LH-surge) the treated material turns color, marking the time of ovulation. A good urine LH test kit will usually "turn color" the day before ovulation. Because the test kits are expensive, it is economically advantageous to delay the testing period until the chance of ovulation LH-surge (usually randomly between cycle days 11 and 18) is high enough to make testing feasible. The start day for daily urine LH testing is generally around cycle day 10 or 11, but may range between cycle days 7 to 14 depending on the individual characteristics of the patient's menstrual period. These same principles can be applied to blood LH surge.

- k) Calculation of Endometrial Biopsy Test Results. An endometrial biopsy test is used to evaluate the condition and maturity level of the lining of the uterus (endometrial lining) and is usually done at the end of the luteal phase. Although the timing of the endometrial biopsy test is usually determined by urine-LH surge or ovulation day, the results of the endometrial biopsy test are often based on the first day of the following menstrual period. Calculation of the endometrial biopsy test result is therefore based on a "negative" back calculated cycle day.

- 2) Tests Related to the Ovulation Day. Because ovulation day is rigidly and closely linked to the serum (and urine) LH-surge, this series of tests can be timed by the urine-LH test kit results. Similarly, ovulation day can be determined by serial follicular ultrasound tests, or can even be triggered by an hCG hormone injection, so this series of tests can also be timed by serial ultrasound or hCG ovulation trigger injection.

- a) Luteal Phase Sub-phases. The luteal phase (after ovulation) is subdivided into two sub-phases, luteogenesis, which lasts from ovulation (approximate cycle day 14) until cycle day 25, and luteolysis, which lasts from approximately cycle day 25 until the

end of the menstrual cycle (approximate cycle day 28). Because these sub-phases are determined by certain ranges of days after ovulation, and because ovulation tends to be a random event sometime between cycle days 11 and 18, the luteal sub-phases and other timed events of this series of tests are generally labeled as occurring "so many days after the urine LH-surge" or hCG ovulation trigger injection instead of the "cycle day."

- b) Oocyte Fertilization. This generally occurs the day after the urine LH-surge, or occurs approximately 40 hours after the hCG ovulation trigger injection. Once the oocyte has ovulated, it has a fertilization window of approximately 28 hours long before it undergoes degeneration.
- c) Embryo Development. A fertilized egg undergoes several stages of development:
1. Zygote - single celled fertilized egg - lasts 24 hours.
 2. Multi-cell Pre-Embryo - 2, 4, 8, 16, 32 cell stages with each cell division about 10 hours long.
 3. Morula - solid multicell embryo for 3 to 10 days after ovulation.
 4. Blastocyst - hollow sphere of cells after the morula stage, usually 5 to 8 days after ovulation.
 5. Hatching - of the blastocyst out of the zona shell occurs approximately 7 to 8 days after ovulation.
- d) Embryo Implantation. This usually occurs 7 days after fertilization, which is 8 days after ovulation. The "Pre-Embryo" becomes an official "Embryo" at the time of implantation.
- e) Mid-Luteal Progesterone (MLP) Blood Test. This determines whether adequate production of the hormone progesterone occurs

after ovulation, and is drawn in the middle of the luteal phase. The MLP test is typically done 5 to 7 days after the urine LH-surge or the hCG ovulation trigger injection.

5 f) Endometrial Biopsy. The inside lining of the uterus, where embryo
implantation takes place, is called the endometrial lining. A small
biopsy of this lining is useful for determining its level of maturation,
whether it is ready for implantation, summarizes the effect of all of
the progesterone in the luteal phase on the uterus, and whether an
10 infection is present which might increase the chance of a
miscarriage. As much of the luteal phase as possible should pass
before the endometrial biopsy test is done, but if too much time
passes the next menstrual period may start a day or two early and
ruin the test. The optimal time for the endometrial biopsy is
therefore approximately 11 to 12 days after urine LH-surge or hCG
15 injection.

g) Pregnancy Tests. If the patient achieves pregnancy, the placenta
begins to make the hCG hormone in the luteal phase. The hCG
hormone, especially its β -subunit (β -hCG), reaches a high enough
concentration in the blood or urine to be measurable by common
pregnancy tests (FIG. 5). The serum blood test for β -hCG is the
most sensitive, and will turn positive as early as 5 days after
implantation. The common urine test for β -hCG (a "home"
20 pregnancy test) will turn positive as early as 7 to 8 days after
implantation. If the serum β -hCG is positive, its concentration is
measured and often compared to a second β -hCG concentration 2
or 3 days later. The rate of change in the β -hCG concentration is
useful in determining whether the pregnancy is at risk for twins,
25 triplets, miscarriage, or ectopic implantation.

h) Early Pregnancy Ultrasound Tests. Approximately 2½ to 3 weeks after implantation, an early pregnancy grows large enough to be visualized by an ultrasound test. Ultrasound measurements done to calculate the age of the pregnancy are usually of the length of the fetus or diameter of the gestational sac (placenta) and are typically expressed in terms of "gestational age." The gestational age is the time since the first day of the last menstrual period and is therefore two weeks longer than "conceptual age" which is the time elapsed since fertilization. The first gestational ultrasound can be done at 5½ weeks gestational age, approximately 3½ weeks after urine LH-surge or β -hCG injection (or In Vitro Fertilization). Additional ultrasound tests can be done every few days or weeks afterward if indicated.

i) Early Pregnancy Landmarks. These are measured after the day of oocyte fertilization, and are therefore tied directly to the day of urine LH-surge or hCG ovulation trigger injection. Most of these pregnancy stages are illustrated in FIG. 4:

1. Fertilization - is one day after urine LH-surge or 1 to 1½ days after hCG injection.
2. Zygote Stage - extends for 24 hours after fertilization.
3. Morula Stage - generally extends for 3-4 days after zygote stage.
4. Blastocyst Stage - extends for 4 to 5 days after morula stage.
5. Embryo Hatching - from the zona shell occurs 6 to 7 days after fertilization, during the blastocyst stage, and about 1 day before embryo implantation.
6. Embryo Implantation - occurs at the end of the blastocyst stage, approximately 7 days after fertilization.
7. Pre-Embryo Phase - extends from fertilization to implantation.
8. Embryo Phase - extends from implantation until the time that a heartbeat is detected by ultrasound tests.

9. Fetus - Fetal phase extends from the time that a heartbeat is detected on ultrasound tests until delivery of the baby.

- 5 j) Other Tests. A number of other tests are done during or after the luteal phase; some are uncommon or specialty tests. These tests can also be timed on certain days after ovulation.
- 10 k) Post Coital Test. This test measures the ability of the sperm to travel through the mucus in the cervix on the way to the uterus, and eventually to the fallopian tubes. Best results are obtained on the day of ovulation, so this test is usually done one day after the urine LH-surge or the hCG ovulation trigger injection.

3) Fertility Treatments Related to the Menstrual Period.

- 15 a) Fertility Drugs. Most female fertility drugs are taken on predetermined cycle days in order to achieve optimal results. Most of these drugs belong to five general classes - Clomiphene, gonadotropins, GnRH analogs, Ovulation triggers, and Steroid enhancers.
- 20 1. Clomiphene pills. These are usually taken on cycle days 5, 6, 7, 8, and 9 (days 5-9) as 50 mg pills. Doses range from ½ pill (25 mg) each day up to 5 pills (250 mg) each day. Alternate cycle days for clomiphene include days 3-7 or days 4-8 or even days 3-9.
- 25 2. Gonadotropins. These include the natural hormones LH and FSH (often labeled hLH and hFSH to designate the h = human form of the hormones). Commercial names for these drugs include Pergonal or Repronex (½ hLH and ½ hFSH), and Follistim or Gonal-F (hFSH only). These drugs are administered as injections in doses in increments of 75 IU
- 30 (international units). One 75 IU dose = 1 "amp" (ampule) of

medication, and typical doses range from ½ amp (37 IU) up to 8 amps (600 IU) on specific cycle days, usually starting on cycle day 3 and extending every day or every other day through most of the follicular phase of the cycle.

- 5 3. GhRH analogs. These are also labeled "GnRHa", are drugs based on the natural GnRH hormone which controls the physiologic production of LH and FSH hormones in the pituitary gland. These drugs are administered as injections or nasal sprays in doses ranging from 1/50 mg twice daily up to 1 mg per day, usually starting during the previous menstrual cycle luteal phase, up to the current cycle day 2, and continuing until ovulation. Commercial names include Lupron and Syneril.
- 10 4. Ovulation Triggers. These may include the natural hormone LH (not yet commercially available), but currently the hCG hormone is packaged as an ovulation trigger in the form of a single one-time injection. Ovulation is triggered by the hormone approximately 40 hours after the injection. This hormone will also mature the oocyte so that it is ready for fertilization by the sperm. Commercial names include Profasi or Sterus.
- 15 5. Steroid Enhancers. The steroid hormones estrogen, progesterone, and cortisol are sometimes used to enhance the action of other fertility drugs. Estrogen in the form of ethinyl estrogen is used to boost the endometrial lining in mid to late luteal phase, progesterone can be used to trigger the LH-surge or suppress ovarian cysts, and cortisol derivatives such as dexamethasone or prednisone can be used to increase the effect of clomiphene or reduce miscarriage rates.
- 20
- 25
- 30

b) Hysterosalpingogram x-ray (HSG). This involves injecting x-ray contrast (dye) through the cervix and into the uterus and fallopian tubes, then exposing one or more x-ray films. This test should be done after the end of the menstrual period, but before a possible early ovulation, generally between cycle days 6 and 10.

c) Certain Surgical Procedures. Some procedures such as laparoscopy have cycle day limitations to avoid disrupting a potential pregnancy in the luteal phase, or to obtain the best visualization environment. The endometrial lining is often best viewed by hysteroscopy during the mid-follicular phase.

d) Timed Intercourse or Intercourse Restrictions. Natural family planning conception or contraception are usually based on cycle days from the last menstrual period, not on ovulation tests. By the time an ovulation test turns positive, it is generally too late to restrict intercourse because sperm already present in the uterus can live long enough to last until ovulation.

4) Fertility Treatments Related to the Ovulation Day.

a) Timed Intercourse. Natural family planning conception (but not contraception) can be more accurately planned or scheduled by ovulation tests in order to maximize the chance of fertilization of the egg. Timed intercourse (abbreviated TIC) is most efficiently done the day after the urine LH-surge or one to two days after the hCG ovulation trigger injection.

b) IntraUterine Insemination. This involves injecting a washed sperm sample directly into the uterine cavity at the time of ovulation. The IntraUterine Insemination (IUI), or the closely related IntraCervical

Insemination (ICI) is typically done the day after the urine LH-surge, or about 36 hours after the hCG trigger injection.

- 5
- c) Egg Capture (E.C.). This is a high tech procedure required for In Vitro Fertilization, G.I.F.T., or Z.I.F.T. procedures, and involves aspirating oocytes from ovarian follicles using an ultrasound-guided or laparoscopy-guided needle. Very accurate, careful timing is required so that the oocytes have time to mature, but not enough time to begin ovulation. Egg Capture is usually done 34 to
- 10
- 36 hours after hCG trigger injection.
- d) G.I.F.T. Laparoscopy. This is a high tech fertility treatment that requires egg capture and gamete transfer to be done under laparoscopic guidance. As noted above, this surgery is done 34 to
- 15
- 36 hours after hCG trigger injection.
- e) Embryo Transfer (E.T.). This is a high tech In Vitro Fertilization procedure which entails careful injection of a few embryos into the uterine cavity, usually 2 to 5 days after egg capture.
- 20
- f) Frozen Embryo Transfer (F.E.T.). This entails injecting embryos left over from previous In Vitro Fertilization cycles (kept in frozen storage) into the uterine cavity. Depending upon the specific FET-cycle protocol used, the embryos are transferred on a specific cycle
- 25
- day, or on a day determined by ultrasound monitoring, urine LH-surge, or hCG injection.
- g) Progesterone Hormone. This hormone is taken to enhance the luteal phase tissue response of the uterus to improve implantation or reduce miscarriage. Progesterone in the form of vaginal
- 30
- suppositories, injections, gels, or microencapsulated pills is usually

started the day after TIC or insemination, the day of embryo transfer, or a few days before frozen embryo transfer.

- h) Other Therapies. These may include specialty drugs to reduce the chance of miscarriage or improve embryo implantation. These include heparin and low-dose aspirin.

In summary, numerous tests and fertility treatments are optimally done at specific times during the menstrual cycle. Some are done at times determined by the first day of the menstrual period (cycle days), while others are done a specified number of days before or after the ovulation day.

THE CALCULATING DEVICE

The various time period restrictions for fertility tests and treatments are established by menstrual or ovulation physiology. During the last few decades, scheduled dates for these tests and therapies have been determined by counting cycle days on calendars, sometimes with the assistance of graphical aides such as flow sheet, calendar charts, basal body temperature charts, or gestational wheels. Pocket electronic calculators and calendars have also proven beneficial in determining optimal dates for scheduling and performing tests and treatments. However, all of these commonly used methods involve some means of physically counting days on a calendar or chart, or physically entering data into a calculator or computer. The methods are time consuming and subject to error propagation. A simple, easy to use, intuitive graphic device capable of rapidly calculating and displaying the optimal time to perform all of the various fertility tests and treatments would be very useful for physicians, students, medical personnel, and the general public to improve reproductive and contraceptive efficiency. The instant invention achieves these goals in the form of a simple calculating device which accurately determines timing of fertility tests and treatments, contraception methods, and natural family planning. The device is easy to use and read, and

accommodates variations in menstrual cycles and fluctuations of the time of ovulation in different women.

In achieving the instant invention, several problems were overcome. Starting with a slide-rule calculator format, one problem was bridging cycle days over calendar dates at the end of each month, because months have different lengths ranging from 28 to 31 days. Another problem was adjusting for variability of timed tests that are dependent upon each other.

The first problem was addressed by using a single cycle day scale to be adjusted along multiple different calendar date scales, each representing a boundary between months of standard lengths. Examination of the yearly calendar revealed five typical transitions between months:

	Dec.	Jan.	Feb.	Mar.	Apr.	May	June	July	Aug.	Sept.	Oct.	Nov.	Dec.
days	31----	31----	28-----	31-----	30-----	31-----	30-----	31-----	31-----	30-----	31-----	30-----	31
	w	z ₁	z ₂	x	y	x	y	w	x	y	x	y	

where: w = 31-31 x = 31-30 y = 30-31 z₁ = 31-28 z₂ = 28-31

The slide rule calculator was made using a base 27 printed with fixed cycle days 28, medications 29 and tests 30 (FIG. 8). Slits 31 cut in the base receive a sliding adjustable strip 32 with calendar days 33 printed on it. The months 34 may be printed on an additional sliding adjustable strip. Because most menstrual cycle lengths (about 28 days) are shorter than calendar month lengths (30 to 31 days), the menstrual cycle usually will not cross over more than one month to month boundary. Slide rule designs incorporating 4, 5, or 6 windows 35 (for w, x, y, z₁, z₂, and z₁-z₂) accommodate standard menstrual cycles, each window having its own cycle day scale (FIGS. 9, 10A and 10B). An additional sliding adjustable strip with the days of the week 36 may be added. In order to accommodate the different month-to-month transitions (w, x, y, z₁, z₂), the date strip is made of adjustable overlapping strips 37 (FIG. 10B). Fertility tests and treatments done on certain cycle days are printed on the cycle day scale. Operation of the slide rule calculator involves sliding the calendar day

scale along the cycle day scale until the first day of the menstrual period is aligned to the proper calendar date using the appropriate calendar transition month (w to z₂), then reading the calendar dates for each test or treatment where they are aligned with the labeled cycle day. A separate, independently sliding weekday scale 36 labeled Monday through Sunday (as a repetitive - MTWTFSS) was added alongside the other two scales, and, when properly adjusted along the calendar date scale, allows for minor changes in scheduling tests and treatments to avoid weekends or other "blackout" days.

The second basic problem to be overcome was adjusting for variability of timed tests that are dependent upon each other. That is, some tests cluster into related groups (e.g. clomiphene pill days and FSH blood test days are rigidly fixed to specific cycle days), and other tests are not directly dependent on each other's specific timing (e.g. the day of Intrauterine Insemination is not related to the timing of clomiphene pill days). However, only two inter-related groups of tests actually exist: 1) those related directly to the menstrual cycle which are scheduled on specific cycle days, and 2) those related directly to ovulation which are scheduled a specific number of days before or after ovulation day. In order to properly time or schedule tests from both of these groups, a slide rule calculator was designed with one fixed calendar date scale 38 and two independently adjustable sliding scales, one for cycle days 39 with related cycle day dependent tests A and B, and medication C printed on it, and one for ovulation day 40 with LH surge 15, ovulation 2 and related ovulation day dependent tests X and Y, medication Z printed on it (FIG. 24A). The calendar and cycle day scales are preferably opaque and the ovulation day scale is preferably transparent.

To use this calculator, the first day of the menstrual period is located on the calendar date scale and Cycle Day #1 on the cycle day scale is aligned with the appropriate calendar date by sliding the cycle day scale into the proper position. Once an ovulation test is positive (or ovulation trigger injection given), the ovulation day scale is moved into its proper position to align with the appropriate calendar date. For example, as shown in FIGS. 24A and 24B, if the

menstrual period starts on March 25th, the cycle day scale is adjusted along the calendar date scale (Mar-Apr) until cycle day #1 aligns with "March 25." When the urine LH-surge is positive on April 8th, the ovulation day scale is adjusted until the LH-surge marker aligns with "April 8." The calendar dates for any and all of the fertility tests and treatments can now be read directly from the marked positions on the cycle day and ovulation day scales.

Another embodiment of the slide rule calculator uses four scales, calendar date scale 41, fixed cycle day scale 42 with related cycle day dependent tests A and B, and medication C printed on it, ovulation day scale 43 with related ovulation day dependent tests X and Y, medication Z printed on it, and weekday scale 44, in four or five windows ($w-z_2$) (FIG. 24B). Any of the four scales can be assigned the "fixed" scale, with the others the sliding scales arranged in any order. A particularly desirable arrangement is a fixed calendar date scale, then weekday scale, then cycle day scale, and then ovulation day scale. An additional, optional month sliding scale 45 can be included. One problem encountered with this system was the fact that because ovulation day is variable along the cycle day, occasionally early ovulation would adjust the ovulation day scale so far down the cycle day scale that some of the cycle day tests or treatments would be covered-up and hidden by the ovulation day page. A solution to this problem was to print the ovulation day scale on transparent plastic or celluloid, so the underlying page and scale with its markings and tests can be seen regardless of the position of the ovulation day scale.

A further embodiment of the slide rule calculator is a modular calendar with an exchangeable leap year calendar module (FIG. 23). A fixed cycle day plate 46 with cycle days consecutively numbered from 1 to at least 32 along the edge attaches to an exchangeable calendar module. The calendar module has a weekday strip 47 with each end attached to rotating cylindrical rollers, with weekday notation (MTWTFSS) printed in a vertical column. The cylindrical rollers are connected to another set of rotating cylindrical rollers holding a circular calendar strip printed with either the standard 365 day calendar or the 366 day leap year calendar 48. In another embodiment, the calendar modules

are exchangeable to allow for use in either a regular 52 or leap year 53. An optional adjusted cycle day strip with longer cycles may be added 49. The cycle day plate 46 and calendar module are contained in a housing 50 with a removable end cover 51 for replacing the calendar strips.

5 The modular calendar also preferably includes ovulation day cards 54 listing various testing, treatment and physiologic phases. The ovulation day cards are lined up with the corresponding cycle day 42 (FIGS. 25A-25C). Once a calculation is made, the module is photocopied to achieve a permanent record (FIG. 25C).

10 Although the linear slide rule fertility calculator functions well for most menstrual cycles on most calendar days, a problem remained. Some of the longer menstrual cycle (over 31 days) would occasionally overlay two month-to-month boundaries defeating the $x-z_2$ system of linear calendar date scales. Longer fixed cycle day scales with long rectangular windows for sliding scales
15 would solve part of this problem, but multiple new calendar date scales derived from various combinations of $w-z_2$ would be needed and tracked, significantly increasing the complexity of the calculator.

20 A solution is a circular slide rule calculator, with the calendar day scale consisting of a circle divided into 365 equal days (FIG. 11). The absolute dates clustered into months chronologically arranged around the circle would automatically allow any adjustable scale (also printed on concentric circle divided into 365 days) to align with the calendar scale, preserving all month-to-month boundaries perfectly. Each day occupies less than 1° of arc, so an easily readable scale with markers or written information corresponding to various days
25 would have to be 18 to 24 inches in diameter, which is large for a portable calculator, but is suitable for wall or desk calculators.

30 In researching ways to obtain a circular calculator of small size to be portable, while having the days of sufficient size to be easily read, it was discovered that the same pattern of month lengths from March to January repeats exactly, so these months can be bent into a circle of "5 months" circumference. With the exception of February, a "spiral" circular arrangement

of chronological months can be made that preserves all month-to-month boundaries perfectly and yields high day size resolution (FIG. 14). The months from March to January can be separated into two groups of months with 31, 30, 31, 30 and 31 days, which total 153 days. This produces a "day size" of 2.35° of arc, nearly 2½ times larger than a 365 divided circle, so a readable circular fertility calendar can be reduced to around 8 inches in diameter.

An alternative version of the base calendar, having the months from October to June, is shown in FIG. 37A. This produces a base with 151 days around the circular calendar. The months can be labeled to spiral from the outside to the inside 55, or from the inside to the outside 56. A corresponding leap year plate 57 is made simply by changing the February month from 28 to 29 days.

These arrangements of the calendar date scale can serve as the basis for a circular fertility calendar, with concentric circular discs for cycle day 58, ovulation day 59, calendar day 61, and optional weekday 60 added in a manner analogous to the linear slide rule calculator (FIG. 12). However, the problem of fitting February and its month-to-month boundaries into the calculator remained. In one embodiment, a separate circle is used, which allows enough room to incorporate both leap February 62 and regular February 63 calendar scales into a single calculator to include leap years. The months on each side of February (January and March) both contain 31 days, so they can be overlapped while preserving the month-to-month boundaries, leaving an arrangement of "5 months" similar to the January-to-March calendar scale, as shown in FIG. 13A. This calendar may be extended to include most of April and leap April, as shown in FIG. 37B.

The advantages of this system include similar sized circular calendar scales for the March-to-January and the February-leap February displays. This allows the two scales to be printed on each side of a single calculator. The entire year (including leap years) can be incorporated onto a single, small, portable fertility calculator preserving all month-to-month boundaries, and maintaining readable day size resolution.

Further examination of the two calendar scales reveals similar division day sizes:

March-July, August-December, January	$31 + 30 + 31 + 30 + 31 = 153$ days
January-March (regular and leap February)	$31 + 28 + 31 + 29 + 31 = 150$ days

5

There is a 3-day difference in the two calendar date scales. Because of the high accuracy in fertility tests and treatment requirements, many procedures must be done on an exact day or date. This means that the other adjustable concentric scales for cycle day, ovulation day, and weekday cannot be directly interchanged between the March-to-January calendar scale (153 days) and the regular and leap February calendar scale (150 days), unless some adjustment in the scales is made to give them an equal number of days around a full circle (and therefore exactly equal day sizes). The addition of three blank "filler" days to the regular and leap February calendar scale accomplishes this feat (FIG.

10

13B). The three extra days on the 153 day leap year scale can be used as short extensions for the last three days of December and the first three days of April, as shown in FIG. 38A. In another embodiment, the three extra days are used to provide the entire months of April and December, as shown in FIG. 38B.

15

Once this adjustment is made, the other movable scales can be interchanged between calendar scales. This reduces the cost of the calculator because two sets of manufactured movable scales are reduced to only one set. The flexibility of the calculator is improved because different movable scales can be switched from one side of the calculator to the other.

20

By incorporating some of the original design of the linear slide rule calculator into the two circular calendar date scales, a very efficient, functional design of a fertility calculator was produced. The working parts of the calculator are the base 61, the middle disc 58, and the top disc 59, along with an optional weekday disc 60, and the mask 65 (FIG. 12). The base is considered the fixed scale, and the discs are adjustable rotating "sliding" scales, all with a concentric fulcrum center point. The calendar date scale, cycle day scale, ovulation day scale, and weekday scale can be assigned to any of the base, middle, and top

25

30

discs in any order, but the description below represents the preferred embodiment.

The base is the calendar date scale. There are actually two scales on the base, a March-to-January scale and a regular and leap February scale, composed of the respective calendar date scale printed on a surface. The most preferred embodiment is a two-sided flat, substantially rigid base with the March-to-January scale printed on one side and the regular and leap February scale printed on the other side. Each scale consists of 153 equiangular parts, representing one day apiece, and arranged in a radial outer circle with a large diameter. The day of the month is printed chronologically as a single or double digit numeral inside each division around the circle at the same large radius.

Arranged on the outside perimeter of the numerical day circle are two or three concentric rings, each divided into 5 aligned segments (or a spiral with 2 or 2 1/5 turns divided radially into 5 segments). Beginning on the outermost ring (or end of spiral) each segment is labeled with a month in chronological order. On one scale the second segment has 30 equiangular parts and is labeled "April" and "September", the third segment has 31 equiangular parts and is labeled "May" and "October", the fourth segment has 30 equiangular parts and is labeled "June" and "November", and the fifth segment has 31 equiangular parts and is labeled "July" and "December". The first segment is labeled with one or more of "March", "August" and "January" (FIG. 19A).

On the other scale, the segments are arranged in either of two formats. In one format, the first segment has 31 equiangular parts and is labeled "January", the second segment has 28 equiangular parts and is labeled "February", the third segment has 31 equiangular parts and is labeled "March" and "Leap January", the fourth segment has 29 equiangular parts and is labeled "Leap February", and the fifth segment has 31 equiangular parts and is labeled "Leap March", respectively, in clockwise fashion around the scale (FIG. 13A). In the other format, the first segment has 31 equiangular parts and is labeled "Leap January", the second segment has 29 equiangular parts and is labeled "Leap February", the third segment has 31 equiangular parts and is labeled "Leap

March" and "January", the fourth segment has 28 equiangular parts and is labeled "February", and the fifth segment has 31 equiangular parts and is labeled "March", respectively, in clockwise fashion around the scale.

5 The inside edge of the printed portion of the base, along the day numeral side, will lie adjacent to the outside edge of the middle disc. The middle disc is the Cycle Day disc (FIG. 15). This disc consists of 153 equal printed divisions along the outside edge which align with the adjacent 153 divisions on the underlying base. The middle disc rotates around a center pin fulcrum, concentric with the base. Cycle days are printed as one or two digit numerals inside the
10 equal divisions at the same radius along the outside edge of the disc. This forms the cycle day scale with consecutive numbers beginning with 1 and ending with a number corresponding to whatever cycle length chosen for a particular calculation. Multiple menstrual cycles, preferably of different lengths, may be printed on the disc. Cycle day number 1 is also labeled as "Last Menstrual
15 Period" 66, and other cycle days can be labeled with graphical representations of associated tests or treatments (FIG. 15). Once the middle disc is rotated until the menstrual period "Cycle Day 1" 67 label is aligned (opposite/ adjacent) to the appropriate calendar day on the base, any other cycle days are read directly from their respective adjacent calendar days. Any fertility test or treatment
20 related to the menstrual period, and this printed on the middle discs, is also automatically aligned with the proper calendar day on the base. Tests and treatments can be timed or scheduled at a glance using this simple rotational alignment.

25 The top disc is the Ovulation Day disc (FIG. 16). It is also divided by printed marks into 153 equal days, but preferably with no numerical labels, and rotates on the same central pin fulcrum concentric with the base and middle disc. This disc is preferably slightly smaller than the middle disc, so its outside edge lies immediately inside the numerals of the middle disc. An "ovulation day" label 2, or one of its related markers such as "LH-surge" or "hCG trigger injection" is
30 printed on the top disc inside or pointing to one of the marked divisions. Other ovulation day related tests or treatments are printed on the top disc at the

appropriate relative position before or after the ovulation day label (FIG. 16).

After the cycle day middle disc is rotated to the proper position over the calendar day base, the top disc is then rotated until the ovulation day label, or its related marker, is aligned with the appropriate calendar day on the base. Any fertility test or treatment related to the ovulation day, and thus printed on the top disc, is also automatically aligned with the proper cycle day and calendar date on the underlying middle disc and base. These tests and treatments can also be timed or scheduled at a glance. To make viewing of the underlying cycle day middle disc feasible, the top disc is preferably printed on transparent plastic or celluloid.

The weekday disc, which is optional, is also divided into 153 equal days and rotates independently of the other discs (FIG. 17). The divisions are labeled with the day of the week (or, due to small space available, an abbreviation) in chronologic order in the same direction as the other discs. A typical weekday disc has labels of M, T, W, Th, F, Sat, Sun or M, T, W, T, F, S, S. To improve rapid, easy readability the weekday or weekend labels can be shaded or color-coded so the repetition of the weeks and weekends are quickly detected.

The weekday labels cannot extend all the way around the circumference of the disc because 7 is not a factor of 153, i.e. they cannot be evenly divided into each other. Continuous labeling of weekdays around the disc cannot be completed because once the starting point is reached again the labels will not match (Friday will come just before Sunday), so a gap of at least one day is needed on the disc labels. In the preferred embodiment, a gap of at least 7 to 15 days is used because it is easily visible, preventing the gap from accidentally being placed in the middle of a calculated menstrual cycle. An extended tab sticking out of the weekday disc at the gap position can be added to facilitate manual rotation of the disc (FIG. 17).

Although some fertility tests or treatments must be done on an exact cycle day or ovulation dependent day, most tests and treatments have a 2 to 5 day variable range in which they can be scheduled without significantly affecting the results. For instance, the HSG x-ray can be done any time between cycle day 6 and cycle day 10. When the weekday disc is appropriately aligned with the

calendar date disc, weekend dates for a few months in the past and a few months in the future are automatically labeled. Test and treatment days labeled on the aligned cycle day and ovulation day scales can then be compared relative to upcoming weekend, allowing the variable range tests and treatments to be scheduled away from weekends.

The weekday disc can be positioned anywhere relative to the other discs. In the preferred embodiment, the weekday disc is placed between the fixed calendar date base and the cycle day disc so that the numerals are separated by the letters on the weekday disc, improving readability and reducing the chance of confusing cycle days for calendar dates.

An optional mask is a circular disc placed on top of the other discs to cover up unneeded or irrelevant information. A section of the mask is cut out to reveal only the active menstrual cycle information which usually occupies only about 1/4 to 1/3 of the circumference of the entire calculator (FIG. 18A). Relevant information in the active cycle typically occupies 28 to 42 days, which is the range of menstrual cycle lengths, with the rest of the 153 day calculator information irrelevant. The irrelevant portions of the calculation may be distracting or even accidentally confused with the active portion. An opaque mask covering the irrelevant sections reduces such confusion. The mask may be a physically separate item laid on top of the calculator when needed, or it may be a rotating wheel attached to the center pin fulcrum like the other discs. A two-part rotating wheel comprised of independently moving half-masks 69,70, that can be spread apart or closer together to change the radial size of the unmasked "window" part allows for variations in the active cycle length (FIG. 18B). FIGS. 19A and 19B show base, weekday, middle, and top discs with and without a mask, respectively, assembled into a calculator.

The materials used to construct the calculator base and discs are limited only by the flat surface requirement for printing and the requirement that the discs have sufficient rigidity to minimize flex errors in disc alignments. The base and discs may be flat, rounded, cone shaped, or other shapes which meet these requirements. Suitable materials for constructing the calculator base and discs

include metal, wood, paper, plastic, or a composite combination of these categories. If a transparent top disc is used, it can be made of plastic, celluloid, glass, plexiglass, or any other suitable transparent material. The base may be any shape, with the calendar information printed in a circle. The remaining discs must be circular.

ELEMENTS

Each individual test, treatment or physiologic event printed on the cycle day disc or ovulation day disc is an element. For instance, the luteogenesis sub-phase is a single element, the Mid Luteal Progesterone blood test is another element, and clomiphene pills taken on cycle days 5, 6, 7, 8, 9 are another element. Each of the menstrual cycle physiologic events are elements, and each of the fertility tests and treatments are also individual elements. The physiologic, test, and treatment elements are not limited to those listed or described herein. Any other physiologic event, fertility/infertility test, or treatment can be added as an element by printing it on the cycle day and/or ovulation day discs.

Elements can be either fixed (FIGS. 20A and 20B) or variable (FIGS. 20C and 20D). Fixed elements occupy an exact day or group of days on the discs, as shown by the single arrow in FIG. 20A, and the block in FIG. 20B. The first day of the Last Menstrual Period (LMP) 66 is a specific day on the disc, and is therefore a fixed element. Clomiphene pills 71 taken on cycle days 5, 6, 7, 8, and 9 are also a fixed element. A variable element is a test or therapy that can be done at any time within a specified range or group of days. For instance, the hysterosalpingogram x-ray (HSG) 72 can be done on any day between cycle days 6 and 10 inclusive to obtain basically the same test result. The HSG is therefore a variable element, and can be marked on the cycle day disc as symbols on cycle days 6, 7, 8, 9, and 10, with the HSG test to be scheduled on any one of the marked days, as shown in FIG. 20C. Some variable elements are "open-ended" because they do not contain an exact number of specified days in their range. The urine LH test kit test 73 will start on cycle day 10 or 11, then continue with one test per day until a positive result occurs. The positive result

day is unpredictable; it may occur on the first day of testing (cycle day 10 or 11), or on the third day of testing, or the fourth, or sixth, etc. Once it does turn positive, the subsequent urine LH tests are discontinued. The total number of days of urine LH testing is variable, and customized to each individual cycle, and can range from one day to as many as nine days or more (FIG. 20D).

Fixed and variable elements can be distinguished from one another on the cycle day and ovulation day discs by using different types of notation symbols. In one embodiment, solid lines and filled arrows represent fixed elements, and dashed or half-gray lines with outlined arrows represent variable elements. Open-ended elements can be displayed as entire days or groups of day filled in with color or gray scale shadowing for easy identification or to allow easy readability of tests and treatments that overlap cycle days. An example would be an arrow to cycle day 3 for an FSH blood test lying on top of a gray scale shaded day 3 for the first day to take a clomiphene pill. Both tests are clearly marked and distinct even though they overlap on cycle day 3. A partial list of elements is as follows:

PHYSIOLOGY PHASES

Menstrual

- Last Menstrual Period
- Prior Menstrual Period
- Next Menstrual Period
- Menstrual Period
- Expected Menstrual Period

Follicular Subphase

- Follicular Phase
- Recruitment Phase
- Follicle Selection
- Follicle Growth Phase
- Pre Ovulatory Progesterone Rise
- LH Surge

LH-FSH Surge
Gonadotropin Surge
FSH Surge

Luteal Subphase

5

Ovulation
Luteal Phase
Luteinization
Luteogenesis

Neovascularization

10

Luteolysis
Luteo Reserve
Progesterone Phase

Fertile Subphase

Premenstrual Period

15

Fertile Period
Non Fertile Period
Possibly Fertile Period
Oocyte (Egg) Fertilizable
Oocyte Lifespan
Sperm Lifespan

20

Follicle Development

Primordial Follicle
Primary Follicle
Secondary Follicle
Antral Follicle
Tertiary Follicle
Immature Follicle
Mature Follicle
Atretic Follicle
Dominant Follicle

25

30

Embryo Development

	Fertilization
	First Polar Body Expulsion
	Second Polar Body Expulsion
	First Cell Division
5	Second, Third, Fourth ... Cell Division
	Two, Four, Eight ... Cell Stage
	Pre Embryo Phase
	Totipotency
	Embryo Phase
10	Morula
	Blastocyst
	Compaction
	Hatching
	Embryo Attachment
15	Implantation
	Tubal Transport
	Uterine Transport
	Fetal Phase
	Fetal Growth
20	Gestational Sac
	Yolk Sac
	Early Pregnancy
	Fetal Heart Motion
	Fetal Pole
25	Crown-Rump Length
	Neurotube Closure
	Neurotube Defect
	Cardiac Rotation
	Limb Budding
30	Fetal Motion
	Organogenesis

	Gut Rotation
	Facial Cleft Closure
	Fetal Development
	Fundal Height
5	Chorionic Villus Sampling
	Amniocentesis
	Early Amniocentesis
	Quickening
	Viability
10	Selective Reduction

FERTILITY TESTS

Baseline

	LH Level
	FSH Level
15	Gonadotropin Levels
	LH & FSH Levels
	Estradiol Level
	Estrogen Level
	Prolactin Level

20 Endocrine Blood Tests

Thyroid Tests

	Thyroid Stimulating Hormone
	Thyroxine
	T3 Uptake
25	Free Thyroxine
	Calculated T7 Level

	Cortisol Level
	Dihydroepiandrosterone
	Dihydroepiandrosterone Sulfate
30	17-Hydroxyprogesterone

Androgen Blood Tests

Testosterone

Total Testosterone

Free Testosterone

Percent Free Testosterone

Progesterone

Mid-Luteal Progesterone

Androstenediol

Andosterone

3-alpha Androstenediol Gluconide

OV

Urine LH Test

Male

Semen Analysis

Sperm Count

Strict Kruger Sperm Morphology

Screening

Hepatitis Tests

Human Immunodeficiency Virus Tests

Gonorrhea

Chlamydia

Preoperative Lab Tests

Radiologic

Hysterosalpingogram

Operative Hysterosalpingogram

Ultrasonic Hysterosalpingogram

Ruben's Test

Basal Body Temperature Chart

Ultrasound

Pelvic Ultrasound

Follicular Ultrasound

Baseline Ultrasound
Follow-Up Ultrasound
Ovulation Ultrasound
Ovarian Ultrasound
Gestational Ultrasound

5

Exams

Clomid Check
Clomiphene Check
Bimanual Pelvic Exam
Pelvic Exam
Physical Exam

10

Invasive

Laparoscopy
Hysteroscopy
Ovulation Test Kit
Hydrotubation
Chromotubation
Endometrial Biopsy
Post Coital Test
Intrauterine Device Placement
Intrauterine Device Removal
Fern Test

15

20

Metabolic

ACTH Stimulation Test
Glucose Tolerance Test
Fasting Insulin Level

25

Early Pregnancy

TriScreen
Alpha-fetoprotein
human Chorionic Gonadotropin Level

30

Beta-human Chorionic Gonadotropin Level

Qualitative

Quantitative

Intact human Chorionic Gonadotropin Level

Urine human Chorionic Gonadotropin Level

Pregnancy Test

Urine

Serum

Blood

Home Pregnancy Test

Repeat Pregnancy Test

FERTILITY TREATMENTS

Standard Fertility Drugs

Clomiphene

Clomiphene Citrate

Clomid

Serophene

Tamoxifen

Dexamethasone

Prednisone

Gonadotropin

human Follicle Stimulating Hormone

human Luteinizing Hormone

human Menopausal Hormone

Pergonal

Repronex

Fertinex

Follistim

Gonal-F

recombinant human Follicle Stimulating Hormone

recombinant human Luteinizing Hormone

human Chorionic Gonadotropin injection
Gonadotropin Releasing Hormone Pump
Fertility Drug Enhancers
Ethinil Estradiol
5 Estrogen
Oral (pills)
Transdermal
Patch
Cream
10 Sublingual
Estrace
Premarin
Climara
Estraderm
15 Oral Contraceptive
Birth Control Pill
Contraception
Contraceptive
Norethindrone
20 Aygestin
Medroxyprogesterone
Provera
Depo-Provera
Progesterone
25 injection
suppository
lozenges
oral
gel
30 Prometrium
Crinone

Gonadotropin Releasing Hormone
Gonadotropin Releasing Hormone analog
Gonadotropin Releasing Hormone agonist
Gonadotropin Releasing Hormone antagonist

5

Lupron
Depo-Lupron
Syneril
Bromocriptine

10

Parlodel
Pergolide
Luteinizing Hormone Releasing Hormone

Minor Procedures

Ovarian Cyst Aspiration
Cervical Cone Biopsy
Cervical Cryosurgery
Cervical LEEP Procedure
Cervical Cultures
Dilation and Curettage
Methotrexate

15

20

CitroVorum Reserve

Inseminations

Insemination
Artificial Insemination
Artificial Insemination - Husband Sperm
Artificial Insemination - Donor Sperm
Donor Insemination
IntraCervical Insemination
IntraUterine Insemination
IntraTubal Insemination

25

30

Timing

Timed Intercourse

	Intercourse (Sexual)
	Shotgun Intercourse
	Frequent Intercourse
	Abstinence
5	No Intercourse
	Assisted Reproductive Technology
	Gamete IntraFallopian Transfer
	Zygote IntraFallopian Transfer
	Tubal Embryo Transfer
10	Ultrasound Egg Capture
	Laparoscopic Egg Capture
	Egg Capture
	Embryo Transfer
	Zygote Transfer
15	Blastocyst Transfer
	Frozen Embryo Transfer
	Embryo Freezing
	Embryo Thawing
	Donor Embryo Transfer
20	Drift Days
	In Vitro Fertilization
	Mock Transfer
	Uterine Sound
	Ultrasound Guided Transfer
25	Hysteroscopic Guided Transfer
	IntraCytoplasmic Sperm Injection
	Blastomere Biopsy
	Assisted Hatching
	Testicular Sperm Extraction - Injection
30	MISCELLANEOUS
	Veterinary

Estrus
Heat
Mating
Diapause
Embryonic Diapause

5

DOMAINS

Many fertility tests and treatments are inter-related, or they tend to cluster as groups within the same range of cycle days. Inter-related tests and treatments are frequently linked together by a specific number or range of cycle days, i.e. the day on which a test is done will determine exactly when a related test or treatment is to be scheduled. The range of days for any two or more inter-related or grouped elements is called a domain.

10

A domain may be a cluster of two or more elements on the cycle day disc, two or more elements on the ovulation day disc, or two or more elements on both the cycle day and ovulation day discs, as long as the elements are in the same basic classification group or otherwise related. Actually, there are no set rules governing how testing or treatment elements are related, and technically any two or more elements of any type can be grouped together into a domain. For practical display and calculation reasons, however, domains will usually consist of groups of elements that are similar to each other or are inter-related to each other in terms of class or function. The diagnostic fertility tests such as LH and FSH blood tests, HSG x-ray, urine LH test, Post Coital Test, mid-luteal progesterone test, and endometrial biopsy can be grouped into a "Diagnostic Domain." Similarly, the physiologic phases of the menstrual cycle, follicular phase, dominance sub-phase, luteolysis sub-phase, etc., are grouped into a "Physiologic Domain", and the medications and tests used in a clomiphene pill fertility treatment cycle can be grouped into a "Clomiphene Treatment Cycle Domain."

15

20

25

30

Domains are important part of a fertility calculator because they are the actual working parts of the calculator. By automatically aligning on their proper

cycle days, they display the calendar day and weekday on which any fertility test and treatment should be done or scheduled. In addition, a large number of domains can be created to satisfy the requirements of numerous specialty applications. Educational domains can be visual teaching aids for physiology or medical students, diagnostic domains can be used by physicians and nurses to schedule fertility related tests, low level treatment domains would be useful to family practice or Ob-Gyn physicians to plan basic fertility drug cycles, and high level treatment domains would allow easy planning and scheduling of advanced therapy cycles, such as In Vitro Fertilization, by reproductive endocrinology sub-specialists.

The length of a domain is the number of consecutive cycle days it covers, which is determined by the number and the type of elements it contains. It can be as short as two days (i.e. on LMP and an FSH test element) or can exceed 90 days for a long Lupron In Vitro Fertilization protocol cycle or an early gestation testing group covering the first trimester of pregnancy. A practical limit on the maximum length of a domain is imposed by the overlapping month calendar base design. In theory, a domain that started anytime between March 1 and Aug 1 could be five months (153 days) in length, covering the entire circumference of that side of the calculator, using a 2-layer month label on the calendar base. Cycle domains that start after Dec 1, or especially those that start in or just before February will be restricted in length because the end of the cycle day disc, Dec 31 or Jan 31 on one disc, March 31 on the other disc, will be reached, with no marked calendar days beyond that point. The severest restrictions will occur for domains starting near the end of February, with only 31 days of March marked beyond that point. This could represent a significant problem, since most useful domains are the length of a typical menstrual cycle, so many will exceed this 31 day restriction, an end-of-February problem. Fortunately, these restrictions are easily overcome by minor modifications of the calendar scale month labels. A domain starting Feb 26 that is 48 days long can be readily displayed on the March-to-January calendar scale instead of the February-leap February calendar plate simply by assigning the first day of the domain to "Dec

29." The first 3 days of the cycle will be mislabeled, but the remainder of the domain can be extended through March, April, etc., easily accommodating the 48 day domain length. An easier solution is to represent this domain on the February-leap February calendar scale and let the end of the domain extend into the "Leap February" month. This will also easily accommodate a 48 day domain length, with "Leap February" re-labeled "April", and can be used for even longer domains as long as they do not extend past re-labeled "April 29." Using this method, domains up to 60 days long can be used for the end-of-February problem during most years, and can even be facilitated by adding restricted month wedge labels for "early April" on the February-leap February calendar scale, and for "early or even total February" on the end of the March-to-January calendar scale, or an "end of February" wedge (special date label) at the beginning of the March-to-January calendar scale. The end-of-February problem is easily solved for non-leap years with a 28 day February by adding an "early April" wedge to the February-leap February calendar scale. However, this cannot be used for leap years. The end-of-February problem has the most restricted solution for leap years with a 29 day February because the absolute end of the calendar scale is achieved on March 31, with no available subsequent days to add on to the "early April" wedge since this would crash into the 3 filler days on the February-leap February scale. Fortunately, this problem occurs only during a relatively short time period at the end of February, only during leap years, and only for long domain lengths. In general domain lengths up to 60 days can be easily accommodated by the calculator design, and domain lengths exceeding 90 days are feasible for most of the year.

A variation of this fertility calculator invention consists of a calendar base of 365 days length to hold the entire January-to-December calendar around the circumference. A separate, and preferably opposite side calendar scale will accommodate a 366 leap year calendar around its entire circumference. No month-to-month boundary problems will occur in these calendars, and domain lengths can reach 365 or 366 days if necessary. However, the arc size of each day on this calculator is less than 1° of circumference, so reading the marked

days will be difficult unless the total size of the calculator is quite large. Otherwise, the calculator has the same basic design: A 365-day calendar base with same scale weekday disc, cycle day disc, and ovulation day discs.

5 DOMAIN PERMUTATIONS

A large number of physiologic, testing, and treatment elements are available to be assembled into various domains. The number of elements assembled into a domain is variable, from as few as two to as many as 20 or more. As stated above, there are no rules governing how elements can be grouped into domains, so an astronomically large number of domains exist consisting of all possible permutations of elements. In general, most domain structures are limited by the nature of inter-related or grouped elements. A physiology domain is limited by the fact that the luteal phase always follows the follicular phase, a treatment domain is limited by the fact that ovulation always occurs after taking clomiphene pills, etc. Some limitations are purely practical. A domain consisting only of an HSG x-ray test and a luteogenesis sub-phase has minimal practical value since these elements are essentially unrelated.

A few practical or usable domain permutations are outlined below, but it should be noted that useful domains are not limited to just this set. A large number of other usable or practical domains are possible with this invention, many of which can be customized to specific requirements or demands of each user. In addition, fertility testing and treatment is an actively progressing field of science, with new physiology events, new fertility tests, and new fertility and contraception treatments discovered or invented every year. These future tests and treatments will be added to the domains of the invention as they are accepted into the field. Examples of domains are shown in FIGS. 21A - 21V.

Numerous methods of grouping domains and elements into practical uses are possible. A "Professional Medical Group" method of grouping domains and elements is used below to illustrate various domain applications, with domain permutations customized to particular requirements of some medical professions. Items in parentheses are optional.

	<u>Professional Group</u>	<u>Domain Name</u>	<u>Domain Elements Used</u>	
			<u>Cycle Disc</u>	<u>Ovulation Disc</u>
5	Educational	1. Menstrual Cycle	Menstrual Period 66	LH-surge 15
		FIG. 21A	LH blood levels 8	Ovulation 2
			FSH blood levels 9	Progesterone levels 7
			Follicular phase	Luteal Phase
			Estrogen levels 74	Next Menstrual Period
10		2. Cycle Phases	LMP 66	Ovulation 2
		FIG. 21B	Follicular phase 4	Luteal Phase 5
			Recruitment 76	Luteogenesis 79
			Dominance 77	Luteolysis 80
15			Growth 78	Next Menstrual Period 75
		3. Early Pregnancy	LMP 66	Ovulation 2
		FIG. 21C	NonFertile times 81	Fertilization of oocyte 83
			Fertile times 82	Embryo development
20				Zygote 84
				Morula 85
				Blastocyst 86
				Hatching 87
				Implantation 88
25				Pregnancy test times
				Blood test 89
				Urine test 90
				Early Ultrasound 91
				(1st Trimester development)
30				(Embryonic Plate)
				(Fetal Heart Motion)
				(Limb budding)

5	Family Planning	4. Conception Cycle FIG. 21D	LMP 66	Timed Intercourse 93
			(Start BBT chart) 92	(BBT temperature shift)
			Cervical mucus	Probable Ovulation
			NonFertile Times 81	(Pregnancy Test)
			Fertile Times 82	Next Menstrual Period
			Timed Intercourse 93	Average Cycle Length
10		5. Contraception Cycle (Rhythm method) FIG. 21E	LMP 66	No Intercourse 95
			(Start BBT chart)	(BBT temp shift)
			NonFertile Days 81	Probable ovulation
			Maybe Fertile Days 94	Next Menstrual Period
			Fertile Days	Average Cycle Length 96
			No Intercourse 95	
15		6. Conception (Targeted Intercourse) FIG. 21F	LMP 66	Urine LH-positive 97
			Start BBT chart	Timed Intercourse days 93
			Start Urine LH tests 73	Ovulation Day 2
				(Pregnancy Test) 89
				Next Menstrual Period 75
20	Family Practice Physicians and Nurses	7. Diagnostic Cycle FIG. 21G	LMP 66	Urine LH-positive 97
			LH & FSH tests 98	Post Coital Test 100
			Semen Analysis 99	MidLuteal Prog level 101
			HSG x-ray 72	Endometrial biopsy 102
			Start BBT chart 92	(Next Menstrual Period) 75
25			Start Urine LH tests 73	[for EMB backcalc]
30		8. Clomiphene +ULH treatment Cycle	LMP 66	Urine LH-positive 97
			Clomiphene days 5-9, 71	Timed Intercourse 93
			(Start BBT chart)	(ICI) 103

FIG. 21H

Start Urine LH tests 73 Start prog suppos 104
 (Pregnancy Test) 89
 Expected next MP 75
 (Ultrasound-gestatnl)

5

Family Practice	9. Clomiphene	LMP 66	CG trigger injection 106
Physicians and	+ hCG trigger	Clomid Check exam 105	Timed Intercourse 93
Nurses (cont'd)	Treatment	(Ultrasound day 3) 91	(ICI) 103
+ Ob-Gyn	Cycle	Clomiphene 71	Start prog suppos 104
Physicians	FIG. 211	Ultrasound day 10	(Pregnancy Test) 89
		(Ultrasound day 12,14)	Expected Next MP 75
		Ultrasound Scale	(Ultrasound-gestatnl)

10

Ob-Gyn Physicians and Nurses	10. Processed	LMP 66	Urine LH-positive 97
	IUI Cycle	Start Urine LH tests 73	IUI 107
	(AIH and AID)		Start prog suppos 104
	FIG. 21J		(Pregnancy Test) 89
			Expected Next MP 75 (Ultrasound-gestatnl)

15

11. Clomiphene	LMP 66	Urine LH-positive 97
+ Urine LH	Clomid Check exam 105	IUI 107
+ IUI Cycle	Clomiphene 71	Start prog suppos 104
FIG. 21K	Start Urine LH tests 73	(Pregnancy Test) 89
	(dexamethasone days)	Expected Next MP 75
		(Ultrasound-gestatnl)

20

25

12. Clomiphene	LMP 66	hCG trigger injection 106
+ hCG trigger	Clomid Check exam 105	IUI 107
+ IUI Cycle	Clomiphene 71	(Second IUI)
FIG. 21L	Ultrasound day 10 91	Start prog suppos 104

30

(Ultrasound day 12,14)	(Pregnancy Test) 89
Ultrasound Scale	Expected Next MP 75
(dexamethasone days)	(Ultrasound-gestatnl)

5 Reproductive 13. Clomiphene LMP 66 hCG trigger injection 106
Endocrinologists + single hMG Clomid Check exam 105 Timed Intercourse 93
and Cycle Clomiphene days 3-7 71 (IUI)
R.E. Nurses FIG. 21M hMG injection day 9 108 Start prog suppos 104
Ultrasound day 10 91 (Pregnancy Test) 89
10 (Ultrasound day 12,14) Expected Next MP 75
Ultrasound Scale (Ultrasound-gestatnl)

14. Clomiphene LMP 66 hCG trigger injection 106
+ Mid-Load Ultrasound day 3 91 Timed Intercourse
15 hFSH Cycle Clomiphene days 3-7 71 (IUI) 107
FIG. 21N hFSH inj days 6, 8, 10 109 Start prog suppos 104
Ultrasound day 10 91 (Pregnancy Test) 89
(Ultrasound day 12,14) Expected Next MP 75
20 Ultrasound Scale (Ultrasound-gestatnl)

15. Clomiphene LMP 66 hCG trigger injection 106
+ Front-Load Ultrasound day 3 91 Timed Intercourse
hFSH and Clomiphene days 3-7 71 (IUI) 107
hMG Cycle hFSH days 3-6 109 Start prog suppos 104
25 FIG. 21O hMG days 8, 10 (12) 108 (Pregnancy Test) 89
Ultrasound day 10 91 Expected Next MP 75
(Ultrasound day 12,14) (Ultrasound-gestatnl)
Ultrasound Scale

30 16. Standard LMP 66 hCG trigger injection 106
hFSH +IU Ultrasound day 3 91 Timed Intercourse

Cycle	hFSH inj days 3-10+ 109	(IUI) 107
FIG. 21P	Ultrasound day 10 91	Start prog suppos 104
	(Ultrasound day 12,14)	(Pregnancy Test) 89
	Ultrasound Scale	Expected Next MP 75
		(Ultrasound-gestatnl)

17. Lupron +	LMP 66	hCG trigger injection 106
hFSH + IUI	Lupron days 1-10+	Timed Intercourse
Cycle	(luteal Lupron days)	(IUI) 107
FIG. 21Q	Ultrasound day 3 91	Start prog suppos 104
	hFSH inj days 3-10+ 109	(Pregnancy Test) 89
	Ultrasound day 10	Expected Next MP 75
	(Ultrasound day 12,14)	(Ultrasound-gestatnl) 110
	Ultrasound Scale	(Obstetrics visit) 111

18. Step-Up	LMP 66	hCG trigger injection 106
hFSH + IUI	Ultrasound day 3 91	Timed Intercourse
Cycle	Step-Up hFSH days 109	(IUI) 107
FIG. 21R	Ultrasound day 10	Start prog suppos 104
	(Ultrasound day 12,14)	(Pregnancy Test) 89
	Ultrasound Scale	Expected Next MP 75
	(Estrogen Tests)	(Ultrasound-gestatnl) 110
	(Drift Days)	(Obstetrics visit) 111

19. In Vitro	(Prior Cycle BCPs)	hCG trigger injection 106
Fertilization	Prior cycle Lupron 112	Ultrasound Egg Capture 113
Cycle	LMP 66	In Vitro Fertilization 114
FIG. 21S	Ultrasound day 3, 7 91	Embryo Transfer Day 115
	hFSH inj days 3-10+ 109	Progesterone injections 116
	Ultrasound day 9, 10	Start prog suppos 104
	(Ultrasound day 11-16+)	Pregnancy Test 89

		Estrogen Tests w/US Ultrasound Scale (Drift Days)	(2nd Pregnancy Tst) Expected Next MP Ultrasound-gestatnl
5	20. Co-Flair	(Prior Cycle BCPs)	hCG trigger injection 106
	In Vitro	LMP 66	Ultrasound Egg Capture 113
	Fertilization	Lupron days 2, 3, 4 112	In Vitro Fertilization 114
	Cycle	(low-dose Lupron day 5+)	Embryo Transfer Day 115
	FIG. 21T	Ultrasound day 3, 7 91	Progesterone inj. 116
10		High-dose hFSH inj days 3-10+ 109	Start prog suppos 104
		Ultrasound day 9, 10	Pregnancy Test 89
		(Ultrasound day 11-16+)	(2nd Pregnancy Tst)
		Estrogen tests with US	Expected Next MP
		Ultrasound Scale	Ultrasound-Gestatnl 110
15			
	21. G.I.F.T.	(Prior Cycle BCPs)	hCG trigger injection 106
	Cycle	Prior Cycle Lupron 112	Laparoscopy G.I.F.T. 117
	FIG. 21U	LMP 66	Start prog inject 116
		Ultrasound day 3, 7 91	Pregnancy Test 89
20		hFSH inj days 3-10+ 109	(2nd Pregnancy Tst)
		Ultrasound day 9, 10	Progesterone suppos 104
		(Ultrasound day 11-16+)	Expected Next MP
		Estrogen Tests with US	Ultrasound-gestatnl 110
		Ultrasound Scale	
25			
	22. Frozen	LMP 66	hCG trigger injection
	Embryo Cycle	Estrgn Pill/Patch days 118	Froz Embryo Trnsfr
	FIG. 21V	Ultrasound day 3, 10 91	(Thaw Embryos Day)
		(prog start day)	Start prog inject 116
30		(Embryo Transfer Day) 115	Pregnancy Test 89
		(Start urine LH Test)	(2nd Pregnancy Tst)

Expected Next MP
Ultrasound-gestatnl 110

5 A large variety of other types of testing and treatment cycles exist and a
wide variation in the types of elements, or timing of elements, are used by
different professional groups or practitioners, so the permutations listed above
are primarily for illustration of some commonly used domains. The types of
domains illustrated will also generally overlap within the professional groups, i.e.
Ob-Gyn physicians and Reproductive Endocrinologists would also benefit by
10 having a Diagnostic Cycle (number 7) which is listed in the Family Practice
Physician group.

Domain names can be labeled on the cycle day and ovulation day discs to
clarify the clustered elements for the calculator user. The domains that lie
exclusively on the cycle day disc or the ovulation day disc are easy to label,
15 typically toward the center of the wheel under the collection of elements with
perhaps a radial line drawn at the beginning of the domain and another at the
end of the domain to enclose its limits. Many domains will have elements on the
cycle day disc and the ovulation day disc. Printing all of the elements of a single
domain in the same color, whether the elements are on the same disc or on both
20 a cycle day disc and an ovulation day disc, and using different colors for each
domain achieves an easy-to-read calculator. In use, the same colored elements
are matched up to create the domain. An arc-shaped domain name 119 can also
be used in these instances, with the domain name enclosed within an arc-
shaped box. The first half of the arc-shaped box "window" is printed on the cycle
25 day disc 58, along with the radial line to the outer edge of the disc marking the
beginning of the domain, and usually along with the enclosed domain name itself
119 (e.g. "Diagnostic Cycle") printed within the window (FIG. 22A). The last part
of this cycle day disc window is open-ended, but it will match the position of the
last half of the arc-shaped window box printed on the overlying transparent
30 ovulation day disc 59 (FIG. 22B). The first part of the empty window on the
ovulation day disc is open-ended, and the last part aligns with another radial line

to the outer edge of this disc marking the end of the domain. With this system, the variable size of the domain can be accommodated by rotating the ovulation day disc around the center-pin fulcrum changing the length of the arc-shaped window, but with the printed domain name inside easily visible within the window (FIGS. 22C and 22D).

Some special applications will use cycle day elements from one domain, and ovulation day elements from another domain. These shared domains are also easily accommodated by the calculator simply by rotating the transparent ovulation day disc around the center pin until the required domain elements on this disc lie alongside the appropriate or special cycle day elements on the underlying cycle day disc domain. Preferably, the cycle day domain elements will immediately precede the ovulation day domain elements. An example of shared domain use would be a treatment cycle converted from an originally intended In Vitro Fertilization cycle into a less expensive IntraUterine Insemination cycle because of poor ovarian response to the fertility drugs on the cycle day disc. The In Vitro Fertilization domain on the ovulation day disc is rotated away and replaced by the IntraUterine Insemination domain on the ovulation day disc.

The length of a typical domain matches the length of the corresponding menstrual treatment cycle, usually 26 to 38 days. Most of the space on the calendar day bases (153 days) would be wasted if the cycle day and ovulation day discs contained only one domain. An efficient use of the fertility calculation is to print 3 or 4 separate domains on the cycle day and ovulation day discs. Attention is paid only to the active domain, with the other domains brought into use whenever needed. This arrangement allows sharing of domains, as described above, and allows several domains commonly used by a professional group to be present for immediate use on one calculator. This allows the substitution of domain when there is a change in the tests or procedures to be performed. For example, if an in-vitro fertilization (IVF) procedure is to be replaced by an intra-uterine insemination (IUI) procedure, the ovulation plate with the IVF domain (FIG. 26A) is rotated away, and the IUI domain is rotated

into position (FIG. 26B). If one user requires a large number of domains, separately stored cycle day and ovulation day discs with all domains needed can be exchanged onto the calendar date bases (FIG. 26C). As shown in FIGS. 26D, this system also allows cycle day 58 and ovulation day 59 discs to be exchanged from the calendar date base with March-to-January 120 onto the calendar day base with February-leap February 121, as long as the total number of days on each base is the same (153 days). There is a wide variation in the size of different domains, from 26 to around 70. The cycle day and ovulation day discs can accommodate up to 4 small domains, or 1 to 2 large domains and still remain functional.

SPECIAL CALCULATING DOMAINS

The interaction between the transparent ovulation disc and the cycle day disc provides easy timing calculations for some fertility tests and treatments within special domains. This is achieved by aligning two special elements, one on the cycle day disc, the other on the ovulation day disc.

1. LH-Surge. As shown in FIGS. 27A-27D, the alignment of the entire ovulation day disc is determined by the day of the LH-surge 97 for many applications. The cycle day disc has a series of open small circles printed immediately under the cycle day numeral, usually with the first circle printed under Cycle Day 11 and with a circle printed under each subsequent day for the next 6 to 10 days. A single filled-in circle (the same size) is printed on the ovulation day disc at exactly the same radius from the center-pin fulcrum as the open circles on the cycle day disc. The patient will start daily urine LH tests on cycle day 11, and within a few days the test will turn positive (for example, positive on cycle day 13 in FIG. 27C). When this occurs, the ovulation day disc is rotated over the cycle day disc until the filled circle (labeled "Positive LH surge" 97 on the ovulation day disc) lies directly over the appropriate cycle day circle (in this example cycle day 13). The elements printed on the ovulation day disc are now automatically and accurately aligned with their appropriate cycle

days and calendar dates. All of the remaining tests (A) and treatments (B) for the cycle can now be scheduled for the rest of the cycle. As shown in FIG. 27C, a positive LH surge on cycle day 13 correlates with insemination on day 14, test A on day 18, and medication B on days 19 and 20. If the LH surge is not until cycle day 17, aligning the ovulation plate automatically assigns insemination to day 18, test A to day 22, and medication B to days 23 and 24 (FIG. 27D).

2. Ultrasound Scale. The size of the largest ovarian follicle (lead follicle) visualized by the pelvic ultrasound test determines when the hCG ovulation trigger injection is given, which then determines when all ovulation day disc domain tests and treatments are done. In general, the lead follicle grows at the rate of 1 mm per day between sizes 12 mm and 16 mm, and then grows at a rate of 2 mm per day between sizes 16 mm and 24 mm. The hCG ovulation trigger injection is given usually when the lead follicle is 20 to 22 mm diameter during clomiphene-stimulated or natural cycles, and the hCG injection is usually given when the lead follicle is 18 mm diameter during hFSH and hMG cycles (or clomiphene + hFSH/hMG cycles). A special case is scheduling the hCG injection when the lead follicle is 17 mm diameter during the Lupron + hFSH Co-Flair cycles. The ultrasound scale is used to accurately time the hCG trigger injection (FIGS. 28A-28D). It consists of several consecutive small square windows printed under the cycle day numerals on the cycle day disc, typically with the first square window under cycle day 10, and the other windows printed one per day afterwards for 6 to 10 days. A matching series of small numerals representing ultrasound lead follicle diameters are printed on the transparent ovulation day disc, at the same radius from the center-pin fulcrum as the square windows on the cycle day disc. The patient will have periodic follicular ultrasound tests 91 beginning on cycle day 10 (though not necessarily every day afterward). The diameter of the lead follicle is measured by ultrasound, and is then located on the follicle diameter scale of numerals on the ovulation day disc. For example, as shown in FIG. 28C, the ultrasound test is done on cycle day 10, measuring a lead follicle diameter of 15 mm. The 15 numeral on the ovulation day disc is then rotated into position so that it lies inside the square window

printed under cycle day 10 on the cycle day disc. Once this is done, the elements printed on the ovulation day disc automatically and accurately align with their appropriate cycle days and calendar dates, including the hCG trigger injection marker 106. All of the remaining tests (C) and treatments (D) for the cycle, including the hCG injection, can now be scheduled. Examples of other events linked on the ovulation day scale are hCG injection 106 and timed intercourse 93 (FIG. 28E) and, hCG injection 106, ultrasound egg capture 113 and embryo transfer 115 (FIGS. 28F and 28G).

3. Other Special Calculations. Other calculated information can be displayed by the fertility calculator, with some information fixed to an element on the cycle day or ovulation day disc. The weekday disc 60 can be used to avoid scheduling tests and procedures on a weekend. As shown in FIG. 29A, an endometrial biopsy 102 may be done on one of three days, and the weekday plate with weekends shaded is used to schedule the biopsy on May 6 to avoid the weekend. FIG. 29B shows calculating the endometrial biopsy date from either the LH surge 97 of the current menstrual period, or "back calculating" from the expected next menstrual period 75. Another example of a special calculation is for early pregnancy. Once a positive LH surge test is properly aligned, and the patient achieves pregnancy during that cycle, low 122, average 123 and high 124 levels of the β -hCG blood tests can be printed on the appropriate cycle days to be compared to the actual β -hCG levels obtained on those days. The same system can be used to compare expected and actual gestational ultrasound parameters such as fetal crown-rump length 125 (CRL) or gestational sac diameter 126 (FIG. 29C). FIG. 29D shows another special early pregnancy application. Serum β -hCG levels with rates of increase and decrease 127 are printed on an ovulation disc. In use, the first measured β -hCG level is found on the ovulation disc and is aligned with the appropriate cycle day. The next measured β -hCG level is compared to the nearest value printed on the ovulation disc. The decreasing scale is used for methytrexate therapy cycles as therapy for ectopic pregnancy. The increasing scales are used to determine rate of β -

hCG increase in normal pregnancies to determine suspicion level for miscarriage, ectopic pregnancy or multiple pregnancy.

APPLICATIONS

5 The interchangeable component design of the Fertility Calculator allows it to be used for a large variety of possible applications. Not only can individual elements be selected, mixed, and matched into a large number of useful domains, but the cycle day and ovulation day discs can be exchanged for other discs with additional domains to greatly extend the capabilities of the calculator. Possible applications of the fertility calculator include, but are not limited to, the following:

10 1. Infertility Clinical Scheduler. This is the primary application of the calculator. It is used to time or schedule most of the currently used infertility tests, procedures, timed intercourse, and other treatments including timed fertility drug therapies. Each of these tests and treatment procedures can be accurately scheduled on the cycle day, calendar date, and weekday to obtain the most accurate result or highest pregnancy rate. Some fertility tests or treatments must be performed on a specific, exact cycle day in order to work, and the design of the calculator allows this high degree of accuracy. Once the cycle day and ovulation day discs are properly aligned with each other and the calendar date base, all of the selected tests and treatments can be scheduled by reading the marked calendar dates.

15 2. Conception Family Planning. Many couples have no infertility problems or diagnosis, they simply would like to achieve pregnancy at a specific time or during a specific menstrual cycle. Fertile couples can use the fertility calculator to attempt timed pregnancy (or predicted delivery of the baby nine months later) during a vacation, during a time for medical or family leave, to reduce income tax at year's end, or to avoid third trimester during summer heat, etc. Other fertile couples have not been educated in menstrual cycle physiology and could use the calculator to learn the optimal time for intercourse to achieve pregnancy. FIG. 30A illustrates an embodiment of the invention used to

20

25

30

maximize the chance of pregnancy. In this embodiment, the ovulation day disc is printed with markers indicating non-fertile times 81, days of likely ovulation 2, days for timed intercourse 93, and a range of average cycle lengths 96.

According to the example illustrated in FIG. 30A, for an average cycle length of 28 days with the last menstrual period starting on Tuesday, March 26, timed intercourse should occur on Saturday, April 6, Monday, April 8 and Wednesday, April 10 for the best chance of pregnancy. Another embodiment of the conception family planning calculator is illustrated in FIG. 30B. This embodiment utilizes a transparent marker arm 128 which is attached to the calculator on one end, the other end having a marker labeled "intercourse" 129 which is aligned with the corresponding day on which intercourse occurred or will occur. The marker arm is also marked with a curve labeled "chance of sperm" 130 extending over the space corresponding to up to six days beyond the "intercourse" marker. In this embodiment, the ovulation day disc is marked with an average cycle length indicator 96 and is also marked with a curve labeled "chance of egg" 131. The shape, width, and position of the "chance of egg" curve is determined by the average cycle length and cycle length variability. Several different curves can be printed on one calculator, each a separate domain. For planning a pregnancy, the ovulation day disc is positioned such that the average cycle length indicator is aligned with the appropriate day on the cycle day disc. The marker arm is then aligned such that the "chance of sperm" curve overlaps with the "chance of egg" curve on the ovulation day disc. The "intercourse" marker will then be aligned with the appropriate day for intercourse to achieve pregnancy. To avoid pregnancy, the marker arm is aligned such that there is no overlap between the "chance of sperm" and "chance of egg" curves. FIG. 36 illustrates the assembly of a calculator with a calendar disc 61, weekday disc 60, cycle day disc 58, optional adjusted cycle day disc 132, ovulation day disc 59 and marker arm 128.

3. Contraception Family Planning. Many fertile couples would like to use a very inexpensive method to minimize the chance of becoming pregnant. Some have religious restrictions on the use of other forms of medical contraception and

are permitted to use "rhythm methods" only. A large portion of the earth's population have no access to standard medical contraception, especially those in Third World countries. The fertility calculator can be used to display the non-fertile "safe" and the fertile "unsafe" calendar dates in order to restrict the time of sexual intercourse to minimize the chance of oocyte-sperm fertilization (FIG. 31A). This is done by supplying the calculator with cycle day discs and ovulation discs containing contraception domains, which can be customized to the individual user by adjusting for her average cycle length, and including her shortest 133 and longest 134 cycle lengths.

A very large proportion of the human population, especially in Third World countries, are illiterate and innumerate. A special Family Planning calculator can be designed with no written information, which instead uses common intuitive symbols. Illiterate populations are typically from rural agricultural areas, and know the nightly moon phases. Nearly all illiterate populations are very religious and attend a church, mosque, synagogue or other religious ceremony on a regular basis, such as one per week. By aligning religious day symbols with the moon phase, the calendar day and 135 and religious day 136 discs can be permanently taped together. One menstrual period, represented by a colored, preferably red, curve 137 on the cycle day disc, is aligned with the proper day on the religious day disc, and the next menstrual period marked on the ovulation disc is aligned with its proper day. The ovulation disc is printed with symbols 138 indicating the fertile period. In FIG. 31B, the symbols are baby-shaped and are faint at the beginning and ending of the fertile period, and are dark in the middle of the fertile period. The cycle day and ovulation discs are then taped together forming a cycle length relation. The cycle and ovulation discs are moved in unison for subsequent cycles, and the fertile period is marked by the baby-shaped symbols in alignment with the proper moon phase and religious days.

4. Early Pregnancy Scheduler. This is an extension of the infertility test scheduler concept. Because some domains can be 60 to 90 days or more in length, certain first trimester tests and treatments can be displayed on the

calculator in order to facilitate scheduling appointments for these tests (FIGS. 29C and 29D). Elements in these domains include serial β -hCG blood pregnancy tests, gestational ultrasounds, alpha-fetoprotein blood tests, progesterone hormone levels, time periods for starting or discontinuing medications (estrogen, progesterone, low-dose aspirin, heparin, etc.), and procedures such as chorionic villus sampling (CVS) or early amniocentesis.

5 5. Timer for Weekday Scheduling. Many tests, both related or unrelated to fertility, are scheduled on specific weekdays. For instance, a surgeon only schedules laparoscopy cases on Mondays, and cervical cryosurgery on
10 Thursdays. The weekday disc 60 of the calculator can be used to display the weekday of every calendar date for several months in the future. The primary use of the weekday scheduler will most likely be to avoid scheduling tests and procedures on weekends (FIG. 32). This applies to the majority of fertility tests and treatments - they have at least a two-day variability so they can be moved
15 off of weekends (Sunday \rightarrow Monday and Saturday \rightarrow Friday), but a few fertility procedures require an exact schedule day so 2/7th of the time they will end up on a weekend day. A method of marking Saturdays and Sundays on the weekday disc (for example, gray scale shading) would facilitate the use of this application.

20 6. Educational Aid. The diagnostic cycle domains and the menstrual physiology domains will be of particular interest to students of reproductive physiology, health, family planning, sex education, Ob-Gyn, etc. Special elements and domains can be altered or created to demonstrate non-human reproductive cycles (mice, rats, monkeys, horses, etc.) for veterinary students. A
25 version of the calculator containing the usual 153 circumference days, or one containing 365 circumference days constructed with a large diameter, up to several feet, would be easily viewed by a class of students (FIG. 33). It could also be used as a non-portable or less-portable calculator at a central location such as a physician's office or nurses' station.

30 7. Veterinary Use. The basic design of the Fertility Calculator is not limited to human use. Many other animals have reproductive cycles that vaguely

resemble the human menstrual cycle. Elements and domains can be created that are customized to the physiology of the species of interest. Practical applications of the fertility calculator include scheduling tests or reproductive procedures for lab animals (rats, mice, dogs, monkeys, etc.) zoo animals (lions, zebras, panda bears, etc.), and commercial livestock (cattle, sheep, race horses, etc.). The same calendar date bases and weekday discs are used, along with customized cycle day and ovulation day discs containing special elements and domains.

8. Commercial Advertising and Promotional Item. Many fertility tests and treatments use commercially available products. These include commercial LH-surge test kits, commercial labs for β -hCG blood tests, different brands of follicle ultrasound machines, and various commercial lab test kits for LH, FSH, estrogen, and progesterone hormones. Several pharmaceutical companies manufacture a variety of fertility drugs, often making rival brands in competitive markets. The associated elements printed on the cycle day and ovulation day plates can be labeled with the appropriate commercial product, and the fertility calculation can then be sold or distributed to a target group of consumers (such as Ob-Gyn physicians) as a promotional item. For instance, the drug name "Clomid" would be substituted for the label "clomiphene" on the cycle day plate, or the drug name "Follistim" would be substituted for the label "hFSH." Other examples would include "Profasi hCG", "General Electric Ultrasound", and "Sonora Laboratories LH and FSH tests." Unused or blank space in the center of the Fertility Calculator wheel (near the center pin) or added to the periphery outside the calendar date printing or on the opaque mask, is also available for printing logos, advertisements, or other promotional material.

9. Other Applications. The high resolution, wide spacing of days along the circumference of the calendar date bases provides advantages to other types of date calculations. Alignment discs inside the calendar date base do not necessarily have to be cycle day or ovulation day discs. Instead, numbered days or other domains and elements can be substituted for a large number of applications unrelated to fertility, physiology, or even biology. For instance, a

rotating disc containing numbered days labeled with decreasing doses of prednisone can be used to schedule corticosteroid drug tapering in order to prevent adrenal addisonian crisis. Other rotating discs with special domains can be used to display cyclic estrogen and progestin hormone replacement drug days and dosages for menopausal women. Postoperative or injury recovery and exercise schedules displayed on special wheels would be useful to physical therapists, etc.

ADVANTAGES

A number of advantages are incorporated into the calculator of the invention which distinguish it from similar devices or products. The accuracy, flexibility, and intuitive ease-of-use properties of the calculator result from these advantages, making the invention a significant improvement over similar currently available products. One such advantage is simple, intuitive operation. The calculator is operated simply by rotating one or more independent circular discs into easily marked positions. Once this is done, all event dates are automatically and accurately aligned with their respective calendar date. No keyboard data entry is required, no special test reading skill is needed, and no complicated data window tracking is used.

Another advantage is complete, comprehensive calendar date determination which preserves all month-to-month transitions and includes leap year determinations, with all displayed events accurate to the exact day and date. All calendar month names are clearly used and labeled. The month of February is included in the calculator, and the calculator includes an adjustment for leap years.

The high resolution widely spaced calendar days are the result of the overlapping spiral design of the calendar. Each day occupies 2.35° of arc, allowing easy reading of results and more accurate alignment of all scales. The independently rotating event day scales with their auto-calculating means for aligning with each other are useful tools for accurately sequencing events, but their usefulness can be greatly expanded by the addition of a calendar date

scale and weekday scale to display the actual date and day of the week of every event. A 365 circumference day version of the calculator permits accurate alignment of all possible positions of the other rotating scales. However, the narrow spacing of the calendar days (and the associated event day scales) yields difficult to read dates and event markers due to low resolution (each day is less than 1° of arc). This problem was solved by stretching the annual calendar line to over $2\frac{1}{2}$ times its original graphical length, then wrapping the greater portion around the calendar date scale in a spiral fashion, leaving the day markings over $2\frac{1}{2}$ times larger. This results in a high resolution calendar scale, which allows for corresponding expansion of the event day scales, a more accurate and easier to read calculator is created. The only month that does not fit into the high resolution spiral calendar scale is February, so a separate scale with the same resolution size is used for February, its adjoining months added for continuity. The calendar scales have 153 equal day divisions instead of 365.

The accommodation of leap years is a feature derived from the requirement for a separate calendar date scale for the month of February. The rotating calendar scale is circular by definition, so a large amount of additional space remains on the separate 28-day February scale. This additional space along the circumference of the scale will easily accommodate another February month and, with partial overlapping, its adjacent months for leap year continuity. The added February month has 29 days and is used during leap years to maintain high resolution and accuracy of the calculator during any calendar year.

Accurate display of weekdays and weekends is provided by the insertion of an independently rotating weekday scale into the calculator. This scale is labeled with symbols for the days of the week for most of its circumference, and when properly aligned with the other scales, it displays the weekday upon which the calendar dates and events fall. Most events, even if weeks or months in the future, can then easily be scheduled onto specified weekdays or to avoid weekends.

Another advantage of the instant invention is the opaque mask for covering unused portions of the calculator. A circular mask, independently

rotating around the center pin, has arc-shaped windows cut out to allow viewing only the active event information. The remaining portions of the circular scales display unneeded information, and to prevent confusion or distraction, are covered by the opaque portions of the mask. A variable range mask allows event information of any arc length to be viewed, adjusting size for different lengths of event groups. The mask can be fixed to the calculator's center pin, or it can be a separate item that can be loosely placed over the calculator when needed.

A permanent record of a calculation is obtained by photocopying the calculator. The configuration of the calculator is constantly being changed during use by rotating the various scales relative to each other for each new event calculation or, in the case of medical events, for each new patient. A permanent record 141 of the timed events, including the calendar dates, can be easily made simply by photocopying the flat calculator 139 onto a piece of paper 140 containing the patient's information (FIGS. 35A-35C). In the medical field, this allows individual permanent records to be filed, stored, or placed in medical charts. Use of the opaque mask feature will further facilitate photocopy recording by exposing only the active events on the calculator. If the spiral layer calendar scale is used, it is important to cross off the inappropriate month layers on the photocopied page to avoid confusion. A low profile, flat center pin is preferred for complete contact of the fertility calculator surface with the copy machine glass.

A low resolution 365-day calendar is another embodiment of the calculator, with the entire calendar year wrapped once around the calendar scale. The weekday and event day scales match the same 365 day circumference so that their rotational alignments remain intact. An additional 366-day version, preferably placed on the back side of the 365-day calculator, can be added to allow leap year calculations. This version of the calculator is more difficult to read due to the small arc-size of each day, but this problem can be solved simply by increasing the overall size of the entire calculator. An increase to $2\frac{1}{2}$ times the diameter of the spiral month wrapped calendar scale

will yield the same physical size day increments and the same resolution. A calculator this size is less portable, but it can be used as a large display educational device or used in a medical office.

5 A further advantage of the invention is its inexpensive construction. The parts of the calculator can easily be mass produced by printing graphic scales onto inexpensive heavy paper, plastic, celluloid, or sheet metal stock, then easily assembled onto a center pin. In one embodiment, the March-January calendar 142 is printed on one side of a box and the February-leap February calendar 143 is printed on the other side of a box 144. Different cycle day and ovulation day
10 discs 145 are contained in the box, and are attached to the calendars printed on the box with a pin or other fastener. A weekday disc may also be included in the box. A further embodiment includes a hinged box 146 with calendars 142, 143 printed on the insides, and a separate holder 147 for cycle day, ovulation and weekday discs 145 (FIG. 34A). Another embodiment of the invention is a cone-shaped calendar (FIG. 34B).
15

Specific advantages related to use in the field of fertility medicine include having two independently rotating scales, one referencing menstrual cycle day information and the other referencing ovulation related information. This is the greatest advantage to the invention. Nearly all fertility tests and treatments, or menstrual cycle physiologic events, are tied by a specific number of days (length
20 of time) to one of two distinct reference points; the first day of the last menstrual period (LMP) or the day of ovulation. Cycle day tests and events referenced to the LMP can be printed on a scale, with the length of time between each test (or event) from the LMP represented by its proportional distance on the scale. The same can be done for the set of tests and events referenced to the day of
25 ovulation, with the length of time between each test and the ovulation day represented by its proportional distance printed on a separate scale. In general, the LMP referenced set of tests and events is unrelated to the ovulation day referenced set of tests and events in terms of fixed amounts of time because the
30 amount of time between the LMP and the ovulation day varies with each menstrual cycle and between individuals. The two independent scales can be

5 moved relative to each other each menstrual cycle in order to compensate for the variable amount of time between LMP and ovulation day, allowing the relative positions of all the tests and events on both scales to be accurately represented proportional to their proper time and sequence, customized to each cycle.

10 Another advantage of the fertility calendar is the simple, accurate methods for aligning ovulation with its proper menstrual cycle day. Special automatic calculating symbols for the LH-surge tests and the ultrasound follicle size tests are printed on the cycle day scale and the ovulation day scale. These independently rotating scales can be accurately aligned relative to each other during each menstrual cycle by using ovulation test results. The results of the ovulation prediction tests, either the urine LH test or the ultrasound lead follicle size test, are represented by special symbols printed on the cycle day scale and ovulation day scale. Once the ovulation day scale symbol is properly aligned over the corresponding cycle day scale symbol, the two scales are custom aligned for that particular menstrual cycle, and all of the other tests, treatments, and event markings are automatically positioned in their appropriate relative positions.

15 The advantage of the transparent ovulation day scale is that it allows marked menstrual cycle events (tests, treatments, physiology phases) on both the cycle day scale and the ovulation day scale to be viewed simultaneously for all possible relative scale positions.

20 Having interchangeable discs is a feature that greatly expands the range and amount of information that the fertility calculator is capable of processing and displaying. Because the calendar date and weekday scales are unchanging, they are used as fixed, base items. The cycle day and ovulation day scales, however, contain information that varies cycle to cycle. These two independently rotating scales can be removed from the calendar date and weekday scales by lifting them off of the center pin, and then replaced by other cycle day and ovulation day rotating scales that contain different information. Scales that display diagnostic tests can be replaced by scales that display low

25

30

level fertility drug treatment information. These in turn can be replaced by scales that display in-vitro fertilization and frozen embryo transfer information. The specialized information customized for non-human species, such as reproductive cycle tests for lab animals or livestock, can be interchanged onto the base calendar date and weekday scales for veterinary purposes. This interchangeability feature also allows the addition of new scales in the future containing information for newly developed tests and advancing technology, so that the fertility calculator does not become obsolete.

The advantages of interchangeable discs extends to customizing the calculator for individual users. In particular, the different cycle day and the ovulation day scales allow for customization of the fertility calculator to satisfy the demands and requirements of individual users. Different physicians will use slightly different versions of diagnostic test protocols, low level fertility drug therapy programs, or high tech in-vitro fertilization treatment protocols, and therefore may not be interested in standardized testing and treatment information printed on the cycle day and ovulation day scales. Specific test and treatment protocols customized to a user's requirements can be printed onto new cycle day and ovulation day scales, in any language. Examples of tests and treatments which may be listed on the cycle day and ovulation day scales include LH and FSH blood levels, HSG x-ray, clomiphene and gonadotropin fertility drug scheduling, LH-test or hCG injection times, Post Coital Tests, IntraUterine Inseminations, Clomiphene challenge tests, ultrasound egg captures, laparoscopic G.I.F.T. procedures, embryo transfer times, Mid Luteal Progesterone levels, and endometrial biopsy. The calculator is designed to determine the optimal time and calendar date for all of these procedures, and can be modified to include a large number of other procedures. These customized scales can be easily interchanged onto the fertility calculator for individualized use.

The greatest advantage of the instant invention for fertility calculations lies in its wide application for nearly all fertility tests, treatments, and physiologic phases. The prior art devices merely displayed fertile periods during menstrual

cycles whereas the calculator of the instant invention displays the calendar date, weekday, and cycle day of an extensive array of tests and treatments, including HSG x-ray, LH and FSH blood tests, urine LH test timing, hCG injection determination, IntraUterine Inseminations, MidLuteal Progesterone level, endometrial biopsy, and In Vitro Fertilization egg capture and embryo transfer times, among many others. The wide application of numerous tests and treatments extends the possible applications of the calculator beyond that of an infertility scheduler or a conception/ contraception family planner. It can also be used as an early pregnancy scheduler, weekday/weekend test timer, educational aid for students, a veterinary calculator modified for various animal reproductive cycles, and an advertising or promotional item for commercial products. Other applications include corticosteroid tapering scheduler, hormone replacement therapy timer, or injury recovery schedule display. Non-medical applications include scheduling events related to banking, law, construction and insurance.

Overall the fertility timing, testing, and treatment calculator of the instant invention satisfies the goal of easily and accurately determining and displaying the calendar date, weekday, and cycle day of nearly all fertility and family planning tests and therapies.

I claim:

1. An apparatus comprising a base, the base comprising a circular display of first markings divided into 153 equiangular parts disposed along substantially the entire periphery of the circular display, the 153 equiangular parts grouped into five segments, the first segment having 31 equiangular parts, the second segment having 30 equiangular parts and being labeled "April" and "September", the third segment having 31 equiangular parts and being labeled "May" and "October", the fourth segment having 30 equiangular parts and being labeled "June" and "November", and the fifth segment having 31 equiangular parts and being labeled "July" and "December", respectively, in clockwise fashion around the circular display.
2. The apparatus of claim 1, wherein the first segment is labeled "March" and "August".
3. The apparatus of claim 1, wherein the first segment is labeled "August" and "January".
4. The apparatus of claim 1, wherein the first segment is labeled "March", "August" and "January".
5. The apparatus of claim 1, wherein the second segment is labeled "February", "September" and "April".
6. The apparatus of claim 1, wherein the base is substantially planar and opaque.
7. The apparatus of claim 1, further comprising one or more discs rotatably joined at a central axis to the circular display portion of the base, wherein the

discs have a circular display of markings disposed along at least a section of the periphery thereof, the markings representing activities or events of interest.

8. The apparatus of claim 7, further comprising an additional disc having at least a circular display of markings disposed along at least a portion of the periphery thereof, the markings being divided into equiangular parts labeled with the days of the week.

9. The apparatus of claim 7, wherein the events of interest are related to a series of medical treatments.

10. The apparatus of claim 7, wherein the events of interest are related to banking, law, construction or insurance.

11. The apparatus of claim 1, adapted to determine physiologic phases and optimum time for fertility tests, treatments, and protocols based on menstrual or ovulation physiology, the apparatus further comprising first and second discs adapted to be rotatably joined at a central axis to the circular display on the base,

the first disc having at least a circular display of second markings disposed along at least a portion of the periphery thereof, the second markings representing the days of a menstrual cycle, wherein one or more cycles are represented, the cycles having the same or different lengths;

the second disc having at least a circular display of third markings disposed along at least a portion of the periphery thereof, the third markings representing events of interest relating to one or more menstrual cycles; wherein in use, the first disc is aligned with the base such that the days of a menstrual cycle are aligned with the appropriate calendar day on the base and the second disc is aligned with the first disc such that events of interest relating to one or more menstrual cycles are aligned with the appropriate cycle day.

12. The apparatus of claim 11, further comprising a third disc having at least a circular display of fourth markings disposed along at least a portion of the periphery thereof, the fourth markings being divided into equiangular parts labeled with the days of the week.

13. The apparatus of claim 12, further comprising a reversible locking means for securing the first, second and third discs to the base, the locking means preventing the discs from rotating once they are aligned.

14. The apparatus of claim 11, wherein the first disc further comprises fifth markings disposed in a circular display, the fifth markings representing initial steps in one or more physiologic phase or fertility test, treatment or protocol, the physiologic phase or fertility test, treatment or protocol having initial and final steps.

15. The apparatus of claim 14, wherein the second disc further comprises sixth markings disposed in a circular display, the sixth markings representing the final steps in the physiologic phase, test, treatment or protocol from the first disc.

16. The apparatus of claim 15, wherein the initial and final steps of a single phase, test, treatment or protocol on the first and second discs are the same color, and each phase, test, treatment and protocol is a different color.

17. The apparatus of claim 11, further comprising a mask which covers the unused portions of the calculator once a calculation is made, the mask comprising an opaque disc with a section cut out, the mask being the same size as the circular display on the base, and adapted to be rotatably set in coaxial relation with the base and first and second discs.

18. The apparatus of claim 17, wherein the mask comprises two sections which overlap to create an opening of variable size.

19. The apparatus of claim 11, further comprising an indicator arm for indicating the possibility of pregnancy, the indicator arm comprising a transparent arm extending from the center of the calculator to at least the outer edge of the second disc, the arm adapted to be rotatably set in coaxial relation therewith, the arm having a first marker representing intercourse, and a second marker representing the chance of sperm, wherein the second marker extends from the first marker out to a distance of up to six units, representing up to six days, including the day indicated by the first marker; wherein in use the start of the last menstrual period on the first disc is aligned with the appropriate calendar day on the base, and the indicator arm is positioned such that the first marker is aligned with the day of the month of intercourse, and the possibility of pregnancy is determined by the overlap of the second marker with a chance of egg marker on the first disc, wherein overlap indicates a possibility of pregnancy.

20. The apparatus of claim 14, wherein the first and second discs comprise a matched set, and are exchangeable with other disc sets containing steps for different fertility tests, treatments, protocols and physiologic phases.

21. The apparatus of claim 11, wherein the fertility tests, treatments, protocols and physiologic phases are selected from the group consisting of last menstrual period, current menstrual period, next menstrual period, follicular phase, luteal phase, estrogen levels, progesterone levels, lutenizing hormone blood levels, follicular stimulating hormone blood levels, lutenizing hormone surge, follicular recruitment, follicular dominance, follicle growth, ovulation, luteogenesis, luteolysis, fertilization of oocyte, non-fertile times, fertile times, maybe fertile times, embryo development, zygote, morula, blastocyst, hatching, implantation, embryo, fetus, blood pregnancy test, urine pregnancy test, early pregnancy ultrasound, embryonic plate, fetal heart motion, limb budding, timed intercourse, start basal body temperature chart, basal body temperature shift, cervical mucus, probable ovulation, average cycle length, no intercourse, start urine lutenizing hormone tests, urine lutenizing hormone positive test, lutenizing hormone and

follicular stimulating hormone tests, post coital test, semen analysis, mid-luteal progesterone level, hysterosalpingogram x-ray, endometrial biopsy, Clomiphene, ovarian follicle ultrasound, intra-uterine insemination, intra-cervical insemination, start progesterone suppositories, expected next menstrual period, gestational ultrasound, human chorionic gonadotropin trigger injection, Clomid check exam, ultrasound, ultrasound scale, dexamethasone, hMG injection, Lupron, human follicular stimulating hormone injection, obstetrics visit, step-up human follicular stimulating hormone, estrogen tests, drift days, prior cycle BCPs, prior cycle Lupron, egg capture, in vitro fertilization, embryo transfer, frozen embryo transfer, progesterone injections, estrogen tests with ultrasound, low-dose Lupron, high-dose human follicular stimulating hormone injection, G.I.F.T. laparoscopy, estrogen pill/patch, and thaw embryos.

22. The apparatus of claim 11, wherein the menstrual cycle represented is that of a human.

23. The apparatus of claim 11, wherein the menstrual cycle represented is that of a non-human animal.

24. The apparatus of claim 23, wherein the non-human animal is selected from the group consisting of cattle, horses, pigs, sheep, dogs, rats, mice and monkeys.

25. The apparatus of claim 23, wherein the non-human animal is a zoo animal.

26. The apparatus of claim 11, wherein the base and first disc are opaque and the second disc is substantially transparent.

27. An apparatus comprising a base, the base comprising a circular display of first markings divided into at least 150 equiangular parts disposed along

substantially the entire periphery of the circular display, the at least 150 equiangular parts grouped into at least five segments, the first segment having 31 equiangular parts and being labeled "January", the second segment having 28 equiangular parts and being labeled "February", the third segment having 31 equiangular parts and being labeled "March" and "Leap January", the fourth segment having 29 equiangular parts and being labeled "Leap February", and the fifth segment having 31 equiangular parts and being labeled "Leap March", or the first segment having 31 equiangular parts and being labeled "Leap January", the second segment having 29 equiangular parts and being labeled "Leap February", the third segment having 31 equiangular parts and being labeled "Leap March" and "January", the fourth segment having 28 equiangular parts and being labeled "February", and the fifth segment having 31 equiangular parts and being labeled "March", respectively, in clockwise fashion around the circle.

28. The apparatus of claim 27, wherein the circular display of markings is divided into 153 equiangular parts grouped into six segments, wherein a sixth segment comprising three equiangular parts is located between the first and fifth segment.

29. The apparatus of claim 27, wherein the base is substantially planar and opaque.

30. The apparatus of claim 27, further comprising one or more discs rotatably joined at a central axis to the circular display portion of the base, wherein the discs have a circular display of markings disposed along at least a section of the periphery thereof, the markings representing activities or events of interest.

31. The apparatus of claim 30, further comprising an additional disc having at least a circular display of markings disposed along at least a portion of the

periphery thereof, the markings being divided into equiangular parts labeled with the days of the week.

32. The apparatus of claim 30, wherein the events of interest are related to a series of medical treatments.

33. The apparatus of claim 30, wherein the events of interest are related to banking, law, construction or insurance.

34. The apparatus of claim 26, adapted to determine physiologic phases and optimum time for fertility tests, treatments and protocols based on menstrual or ovulation physiology, the apparatus further comprising first and second discs adapted to be rotatably joined at a central axis to the circular display on the base,

the first disc having at least a circular display of second markings disposed along at least a portion of the periphery thereof, the second markings representing the days of a menstrual cycle, wherein one or more cycles are represented, the cycles having the same or different lengths;

the second disc having at least a circular display of third markings disposed along at least a portion of the periphery thereof, the third markings representing events of interest relating to one or more menstrual cycles.

35. The apparatus of claim 34, further comprising a third disc having at least a circular display of fourth markings disposed along at least a portion of the periphery thereof, the fourth markings being divided into equiangular parts labeled with the days of the week.

36. The apparatus of claim 35, further comprising a reversible locking means for securing the first, second and third discs to the base, the locking means preventing the discs from rotating once they are aligned.

37. The apparatus of claim 34, wherein the first disc further comprises fifth markings disposed in a circular display, the fifth markings representing initial steps in one or more physiologic phase or fertility test, treatment or protocol, the physiologic phase or fertility test, treatment or protocol having initial and final steps.

38. The apparatus of claim 37, wherein the second disc further comprises sixth markings disposed in a circular display, the sixth markings representing the final steps in the physiologic phase, test, treatment or protocol from the first disc.

39. The apparatus of claim 38, wherein the initial and final steps of a single phase, test, treatment or protocol on the first and second discs are the same color, and each phase, test, treatment and protocol is a different color.

40. The apparatus of claim 34, further comprising a mask which covers the unused portions of the calculator once a calculation is made, the mask comprising an opaque disc with a section cut out, the mask being the same size as the circular display on the base, and adapted to be rotatably set in coaxial relation with the base and first and second discs.

41. The apparatus of claim 40, wherein the mask comprises two sections which overlap to create an opening of variable size.

42. The apparatus of claim 34, further comprising an indicator arm for indicating the possibility of pregnancy, the indicator arm comprising a transparent arm extending from the center of the calculator to at least the outer edge of the second disc, the arm adapted to be rotatably set in coaxial relation therewith, the arm having a first marker representing intercourse, and a second marker representing the chance of sperm, wherein the second marker extends from the first marker out to a distance of up to six units, representing up to six days, including the day indicated by the first marker; wherein in use the start of

the last menstrual period on the first disc is aligned with the appropriate calendar day on the base, and the indicator arm is positioned such that the first marker is aligned with the day of the month of intercourse, and the possibility of pregnancy is determined by the overlap of the second marker with a chance of egg marker on the first disc, wherein overlap indicates a possibility of pregnancy.

43. The apparatus of claim 38, wherein the first and second discs comprise a matched set, and are exchangeable with other disc sets containing steps for different fertility tests, treatments, protocols and physiologic phases.

44. The apparatus of claim 34, wherein the fertility tests, treatments, protocols and physiologic phases are selected from the group consisting of last menstrual period, current menstrual period, next menstrual period, follicular phase, luteal phase, estrogen levels, progesterone levels, lutenizing hormone blood levels, follicular stimulating hormone blood levels, lutenizing hormone surge, follicular recruitment, follicular dominance, follicle growth, ovulation, luteogenesis, luteolysis, fertilization of oocyte, non-fertile times, fertile times, maybe fertile times, embryo development, zygote, morula, blastocyst, hatching, implantation, embryo, fetus, blood pregnancy test, urine pregnancy test, early pregnancy ultrasound, embryonic plate, fetal heart motion, limb budding, timed intercourse, start basal body temperature chart, basal body temperature shift, cervical mucus, probable ovulation, average cycle length, no intercourse, start urine lutenizing hormone tests, urine lutenizing hormone positive test, lutenizing hormone and follicular stimulating hormone tests, post coital test, semen analysis, mid-luteal progesterone level, hysterosalpingogram x-ray, endometrial biopsy, Clomiphene, ovarian follicle ultrasound, intra-uterine insemination, intra-cervical insemination, start progesterone suppositories, expected next menstrual period, gestational ultrasound, human chorionic gonadotropin trigger injection, Clomid check exam, ultrasound, ultrasound scale, dexamethasone, hMG injection, Lupron, human follicular stimulating hormone injection, obstetrics visit, step-up human follicular stimulating hormone, estrogen tests, drift days, prior cycle BCPs, prior cycle

Lupron, egg capture, in vitro fertilization, embryo transfer, frozen embryo transfer, progesterone injections, estrogen tests with ultrasound, low-dose Lupron, high-dose human follicular stimulating hormone injection, G.I.F.T. laparoscopy, estrogen pill/patch, and thaw embryos.

45. The apparatus of claim 34, wherein the menstrual cycle represented is that of a human.

46. The apparatus of claim 34, wherein the menstrual cycle represented is that of a non-human animal.

47. The apparatus of claim 46, wherein the non-human animal is selected from the group consisting of cattle, horses, pigs, sheep, dogs, rats, mice and monkeys.

48. The apparatus of claim 46, wherein the non-human animal is a zoo animal.

49. The apparatus of claim 33, wherein the base and first disc are opaque and the second disc is substantially transparent.

50. An apparatus comprising a base, the base comprising at least first and second circular displays of first and second markings, respectively, wherein the first and second circular displays are located either on opposite sides of the base, or next to each other on the same side of the base;

the first circular display of first markings divided into 153 equiangular parts disposed along substantially the entire periphery of the circular display, the 153 equiangular parts grouped into five segments, the first segment having 31 equiangular parts, the second segment having 30 equiangular parts and being labeled "April" and "September", the third segment having 31 equiangular parts and being labeled "May" and "October", the fourth segment having 30

equiangular parts and being labeled "June" and "November", and the fifth segment having 31 equiangular parts and being labeled "July" and "December", respectively, in clockwise fashion around the circle; and

the second circular display of second markings divided into at least 150 equiangular parts disposed along substantially the entire periphery of the circular display, the at least 150 equiangular parts grouped into at least five segments, the first segment having 31 equiangular parts and being labeled "January", the second segment having 28 equiangular parts and being labeled "February", the third segment having 31 equiangular parts and being labeled "March" and "Leap January", the fourth segment having 29 equiangular parts and being labeled "Leap February", and the fifth segment having 31 equiangular parts and being labeled "Leap March", or the first segment having 31 equiangular parts and being labeled "Leap January", the second segment having 29 equiangular parts and being labeled "Leap February", the third segment having 31 equiangular parts and being labeled "Leap March" and "January", the fourth segment having 28 equiangular parts and being labeled "February", and the fifth segment having 31 equiangular parts and being labeled "March", respectively, in clockwise fashion around the circle.

51. The apparatus of claim 50, wherein the base comprises first and second sides, wherein the first circular display is located on the first side of the base and the second circular display is located on the second side of the base.

52. The apparatus of claim 50, wherein the second circular display of markings is divided into 153 equiangular parts grouped into six segments, wherein a sixth segment comprising three equiangular parts is located between the first and fifth segment.

53. The apparatus of claim 50, wherein the first segment is labeled "March" and "August".

54. The apparatus of claim 50, wherein the first segment is labeled "August" and "January".

55. The apparatus of claim 50, wherein the first segment is labeled "March", "August" and "January".

56. The apparatus of claim 50, wherein the first segment is labeled "February", "September" and "April".

57. The apparatus of claim 50, wherein the base is substantially planar and opaque.

58. The apparatus of claim 50, further comprising one or more discs rotatably joined at a central axis to a circular display portion of the base, wherein the discs have a circular display of markings disposed along at least a section of the periphery thereof, the markings representing activities or events of interest.

59. The apparatus of claim 58, wherein first and second discs are attached to both the first and the second circular display portions of the base.

60. The apparatus of claim 58, further comprising an additional disc having at least a circular display of markings disposed along at least a portion of the periphery thereof, the markings being divided into equiangular parts labeled with the days of the week.

61. The apparatus of claim 58, wherein the events of interest are related to a series of medical treatments.

62. The apparatus of claim 58, wherein the events of interest are related to banking, law, construction or insurance.

63. The apparatus of claim 50, adapted to determine physiologic phases and optimum time for fertility tests, treatments and protocols based on menstrual or ovulation physiology, the apparatus further comprising first and second discs adapted to be rotatably joined at a central axis to the circular display on the base,

the first disc having at least a circular display of second markings disposed along at least a portion of the periphery thereof, the second markings representing the days of a menstrual cycle, wherein one or more cycles are represented, the cycles having the same or different lengths;

the second disc having at least a circular display of third markings disposed along at least a portion of the periphery thereof, the third markings representing events of interest relating to one or more menstrual cycles.

64. The apparatus of claim 63, further comprising a third disc having at least a circular display of fourth markings disposed along at least a portion of the periphery thereof, the fourth markings being divided into equiangular parts labeled with the days of the week.

65. The apparatus of claim 64, further comprising a reversible locking means for securing the first, second and third discs to the base, the locking means preventing the discs from rotating once they are aligned.

66. The apparatus of claim 63, wherein the first disc further comprises fifth markings disposed in a circular display, the fifth markings representing initial steps in one or more physiologic phase or fertility test, treatment or protocol, the physiologic phase or fertility test, treatment or protocol having initial and final steps.

67. The apparatus of claim 66, wherein the second disc further comprises sixth markings disposed in a circular display, the sixth markings representing the final steps in the physiologic phase, test, treatment or protocol from the first disc.

68. The apparatus of claim 67, wherein the initial and final steps of a single phase, test, treatment or protocol on the first and second discs are the same color, and each phase, test, treatment and protocol is a different color.

69. The apparatus of claim 63, further comprising a mask which covers the unused portions of the calculator once a calculation is made, the mask comprising an opaque disc with a section cut out, the mask being the same size as the circular display on the base, and adapted to be rotatably set in coaxial relation with the base and first and second discs.

70. The apparatus of claim 69, wherein the mask comprises two sections which overlap to create an opening of variable size.

71. The apparatus of claim 63, further comprising an indicator arm for indicating the possibility of pregnancy, the indicator arm comprising a transparent arm extending from the center of the calculator to at least the outer edge of the second disc, the arm adapted to be rotatably set in coaxial relation therewith, the arm having a first marker representing intercourse, and a second marker representing the chance of sperm, wherein the second marker extends from the first marker out to a distance of up to six units, representing up to six days, including the day indicated by the first marker; wherein in use the start of the last menstrual period on the first disc is aligned with the appropriate calendar day on the base, and the indicator arm is positioned such that the first marker is aligned with the day of the month of intercourse, and the possibility of pregnancy is determined by the overlap of the second marker with a chance of egg marker on the first disc, wherein overlap indicates a possibility of pregnancy.

72. The apparatus of claim 66, wherein the first and second discs comprise a matched set, and are exchangeable with other disc sets containing steps for different fertility tests, treatments, protocols and physiologic phases.

73. The apparatus of claim 63, wherein the fertility tests, treatments, protocols and physiologic phases are selected from the group consisting of last menstrual period, current menstrual period, next menstrual period, follicular phase, luteal phase, estrogen levels, progesterone levels, lutenizing hormone blood levels, follicular stimulating hormone blood levels, lutenizing hormone surge, follicular recruitment, follicular dominance, follicle growth, ovulation, luteogenesis, luteolysis, fertilization of oocyte, non-fertile times, fertile times, maybe fertile times, embryo development, zygote, morula, blastocyst, hatching, implantation, embryo, fetus, blood pregnancy test, urine pregnancy test, early pregnancy ultrasound, embryonic plate, fetal heart motion, limb budding, timed intercourse, start basal body temperature chart, basal body temperature shift, cervical mucus, probable ovulation, average cycle length, no intercourse, start urine lutenizing hormone tests, urine lutenizing hormone positive test, lutenizing hormone and follicular stimulating hormone tests, post coital test, semen analysis, mid-luteal progesterone level, hysterosalpingogram x-ray, endometrial biopsy, Clomiphene, ovarian follicle ultrasound, intra-uterine insemination, intra-cervical insemination, start progesterone suppositories, expected next menstrual period, gestational ultrasound, human chorionic gonadotropin trigger injection, Clomid check exam, ultrasound, ultrasound scale, dexamethasone, hMG injection, Lupron, human follicular stimulating hormone injection, obstetrics visit, step-up human follicular stimulating hormone, estrogen tests, drift days, prior cycle BCPs, prior cycle Lupron, egg capture, in vitro fertilization, embryo transfer, frozen embryo transfer, progesterone injections, estrogen tests with ultrasound, low-dose Lupron, high-dose human follicular stimulating hormone injection, G.I.F.T. laparoscopy, estrogen pill/patch, and thaw embryos.

74. The apparatus of claim 63, wherein the menstrual cycle represented is that of a human.

75. The apparatus of claim 63, wherein the menstrual cycle represented is that of a non-human animal.

76. The apparatus of claim 75, wherein the non-human animal is selected from the group consisting of cattle, horses, pigs, sheep, dogs, rats, mice and monkeys.

77. The apparatus of claim 75, wherein the non-human animal is a zoo animal.

78. The apparatus of claim 63, wherein the base and first disc are opaque and the second disc is substantially transparent.

79. An apparatus for displaying information relating to fertility comprising a base and first and second discs, said base and first and second discs rotatably joined at a central axis;

the base having at least a circular display of first markings disposed along at least a section of the periphery of the circular display, the first markings divided into equiangular parts, the equiangular parts labeled with calendar days;

the first disc having at least a circular display of second markings disposed along at least a portion of the periphery thereof, the second markings representing the days of a menstrual cycle, wherein one or more cycles are represented, the cycles having the same or different lengths;

the second disc having at least a circular display of third markings disposed along at least a portion of the periphery thereof, the third markings representing events of interest relating to one or more menstrual cycles.

80. The apparatus of claim 79 wherein the first disc further comprises fourth markings disposed in a circular display, the fourth markings representing initial steps in one or more physiologic phase or fertility test, treatment or protocol, the physiologic phase or fertility test, treatment or protocol having initial and final steps.

81. The apparatus of claim 80 wherein the second disc further comprises fifth markings disposed in a circular display, the fifth markings representing the final steps in the physiologic phase, test, treatment or protocol from the first disc.

82. The apparatus of claim 81 wherein the fourth markings represent days for performing the lutenizing hormone test, and the fifth markings represent the lutenizing hormone surge and subsequent tests, treatments and protocols.

83. The apparatus of claim 81 wherein the fourth markings represent the day or days for performing follicular ultrasound, and the fifth markings represent various follicle diameters and subsequent tests, treatments and protocols.

84. The apparatus of claim 81 wherein the initial and final steps of a single phase, test, treatment or protocol on the first and second discs are the same color, and each phase, test, treatment and protocol is a different color.

85. The apparatus of claim 79, further comprising a third disc having at least a circular display of markings disposed along at least a portion of the periphery thereof, the markings being divided into equiangular parts labeled with the days of the week.

86. The apparatus of claim 85, further comprising a reversible locking means for securing the first, second and third discs to the base, the locking means preventing the discs from rotating once they are aligned.

87. The apparatus of claim 79, wherein the first markings are disposed along the entire periphery of the circular display, the first markings divided into 365 equiangular parts, the equiangular parts labeled with days of the full calendar year.

88. The apparatus of claim 87, further comprising a second circular display of sixth markings disposed along the entire periphery of the circular display, the sixth markings divided into 366 equiangular parts, the equiangular parts labeled with days of the leap year.

89. The apparatus of claim 88, wherein the base comprises first and second sides, wherein the first circular display is located on the first side of the base and the second circular display is located on the second side of the base.

90. The apparatus of claim 85, further comprising a mask which covers the unused portions of the calculator once a calculation is made, the mask comprising an opaque disc with a section cut out, the mask being the same size as the circular display on the base, and adapted to be rotatably set in coaxial relation with the base and first and second discs.

91. The apparatus of claim 90, wherein the mask comprises two sections which overlap to create an opening of variable size.

92. The apparatus of claim 81, further comprising an indicator arm for indicating the possibility of pregnancy, the indicator arm comprising a transparent arm extending from the center of the calculator to at least the outer edge of the second disc, the arm adapted to be rotatably set in coaxial relation therewith, the arm having a first marker representing intercourse, and a second marker representing the chance of sperm, wherein the second marker extends from the first marker out to a distance of up to six units, representing up to six days, including the day indicated by the first marker; wherein in use the start of the last menstrual period on the first disc is aligned with the appropriate calendar day on the base, and the indicator arm is positioned such that the first marker is aligned with the day of the month of intercourse, and the possibility of pregnancy is determined by the overlap of the second marker with a chance of egg marker on the first disc, wherein overlap indicates a possibility of pregnancy.

93. The apparatus of claim 81, wherein the first and second discs comprise a matched set, and are exchangeable with other disc sets containing steps for different fertility tests, treatments, protocols and physiologic phases.

94. The apparatus of claim 79, wherein the fertility tests, treatments, protocols and physiologic phases are selected from the group consisting of last menstrual period, current menstrual period, next menstrual period, follicular phase, luteal phase, estrogen levels, progesterone levels, lutenizing hormone blood levels, follicular stimulating hormone blood levels, lutenizing hormone surge, follicular recruitment, follicular dominance, follicle growth, ovulation, luteogenesis, luteolysis, fertilization of oocyte, non-fertile times, fertile times, maybe fertile times, embryo development, zygote, morula, blastocyst, hatching, implantation, embryo, fetus, blood pregnancy test, urine pregnancy test, early pregnancy ultrasound, embryonic plate, fetal heart motion, limb budding, timed intercourse, start basal body temperature chart, basal body temperature shift, cervical mucus, probable ovulation, average cycle length, no intercourse, start urine lutenizing hormone tests, urine lutenizing hormone positive test, lutenizing hormone and follicular stimulating hormone tests, post coital test, semen analysis, mid-luteal progesterone level, hysterosalpingogram x-ray, endometrial biopsy, Clomiphene, ovarian follicle ultrasound, intra-uterine insemination, intra-cervical insemination, start progesterone suppositories, expected next menstrual period, gestational ultrasound, human chorionic gonadotropin trigger injection, Clomid check exam, ultrasound, ultrasound scale, dexamethasone, hMG injection, Lupron, human follicular stimulating hormone injection, obstetrics visit, step-up human follicular stimulating hormone, estrogen tests, drift days, prior cycle BCPs, prior cycle Lupron, egg capture, in vitro fertilization, embryo transfer, frozen embryo transfer, progesterone injections, estrogen tests with ultrasound, low-dose Lupron, high-dose human follicular stimulating hormone injection, G.I.F.T. laparoscopy, estrogen pill/patch, and thaw embryos.

95. The apparatus of claim 81, wherein the menstrual cycle represented is that of a human.

96. The apparatus of claim 81, wherein the menstrual cycle represented is that of a non-human animal.

97. The apparatus of claim 96, wherein the non-human animal is selected from the group consisting of cattle, horses, pigs, sheep, dogs, rats, mice and monkeys.

98. The apparatus of claim 96, wherein the non-human animal is a zoo animal.

99. An apparatus adapted to determine optimum time for achieving or avoiding pregnancy based on menstrual or ovulation physiology and a calendar of moon phases, wherein the calculator contains only non-letter, non-number symbols, the calculator comprising

a base comprising a circular display divided into equiangular parts, each equiangular part representing a day in each moon phase of a full year, the display divided into one or more groups of 29 equiangular parts representing the 29 days of a moon phase;

a first disc having the circumference thereof divided into equiangular parts, wherein a symbol representing a significant day which occurs at regular intervals during the moon phase is located in the units at the regular intervals, the first disc being smaller than the circular display on the base, and adapted to be rotatably set in coaxial relation therewith so that the outside edge of the first disc lies inside the units on the base, and such that the symbols representing the significant days are aligned with the appropriate moon phase on the base;

a second disc divided into equiangular parts with an annular display of first indicia disposed along substantially the entire periphery thereof, the first indicia representing the days of a menstrual cycle; wherein one or more cycles

are represented, the cycles having the same or different lengths, the second disc being smaller than the first disc and adapted to be rotatably set in coaxial relation therewith so that the outside edge of the second disc lies inside the symbols on the first disc;

a third disc divided into equiangular parts with an annular display of second and third indicia disposed along substantially the entire periphery thereof, the second indicia representing the days of a menstrual cycle and the third indicia representing a fertile period, the third disc being smaller than the first disc, and adapted to be rotatably set in coaxial relation with the base, first and second discs so that the outside edge of the third disc lies inside the symbols on the first disc; wherein in use the symbol representing a significant day on the first disc is aligned with the appropriate moon phase on the base, and the first disc is affixed to the base, the last menstrual cycle on the second disc is then aligned with the corresponding day on the first disc and base, according to the significant days; the next menstrual cycle on the third disc is then aligned with the corresponding day on the first disc, according to the significant days, causing the third indicia representing a fertile period on the third disc to be aligned with their corresponding day read from the base and first disc.

100. The apparatus of claim 99, further comprising a mask which covers the unused portions of the calculator once a calculation is made, the mask comprising an opaque disc with a section cut out, the mask being the same size as the circular display on the base, and adapted to be rotatably set in coaxial relation with the base and first and second discs.

101. The apparatus of claim 100, wherein the mask comprises two sections which overlap to create an opening of variable size.

102. The apparatus of claim 99, wherein the significant days are religious and are represented by religious symbols.

103. The apparatus of claim 99, wherein the first and second indicia are wedge-shaped symbols with a large end on the first day of the menstrual period, and a tapered end on the last day of the menstrual period.

104. The apparatus of claim 103, wherein the wedge-shaped symbols are colored red.

105. The apparatus of claim 99, wherein the third indicia are baby-shaped symbols, and range from faintly printed through darkly printed and back to faintly printed according to the chance of conception, wherein the darker the symbol the greater chance of conception.

106. The apparatus of claim 99, wherein the base further comprises symbols representing specific times of the year.

107. The apparatus of claim 106, wherein the specific times of the year include planting, harvesting, seasons and religious or tribal ceremonies.

108. The apparatus of claim 99, wherein the base and first and second discs are opaque and the third disc is substantially transparent.

109. The apparatus of claim 99, further comprising a reversible locking means for securing the first, second and third discs to the base, the locking means preventing the discs from rotating once they are aligned.

110. A method for calculating dates and displaying information relating to fertility using a calculator, the calculator comprising a base and first and second discs, said base and first and second discs rotatably joined at a central axis;
the base having at least a circular display of first markings disposed along at least a section of the periphery of the circular display, the first markings divided into equiangular parts, the equiangular parts labeled with calendar days;

the first disc having at least a circular display of at least second markings disposed along at least a portion of the periphery thereof, the second markings representing the days of a menstrual cycle, wherein one or more cycles are represented, the cycles having the same or different lengths;

the second disc having at least a circular display of at least third markings disposed along at least a portion of the periphery thereof, the third markings representing events of interest relating to one or more menstrual cycles;

the method comprising rotating the first disc such that the second markings representing the days of a menstrual cycle are aligned with the appropriate calendar day on the base;

rotating the second disc such that at least one of the third markings are aligned with the appropriate menstrual cycle day; and

reading the calendar days associated with additional events of interest.

111. The method of claim 110, wherein the events of interest are events relating to the lutenizing hormone (LH) surge, wherein the first disc additionally has fourth markings representing menstrual cycle days for performing the lutenizing hormone test, the third markings on the second disc representing lutenizing hormone surge and subsequent tests, treatments and protocols; the method comprising rotating the first disc such that the second markings representing the days of a menstrual cycle are aligned with the appropriate calendar day on the base, rotating the second disc such that the marking representing the lutenizing hormone surge is aligned with the appropriate lutenizing hormone test day, and reading the calendar days associated with the subsequent tests, treatments and protocols.

112. The method of claim 110, wherein the events of interest are based on follicle size, wherein the first disc additionally has fourth markings representing menstrual cycle days for performing follicular ultrasound, the third markings on the second disc representing various follicle sizes and subsequent tests, treatments and protocols; the method comprising rotating the first disc such that

the second markings representing the days of a menstrual cycle are aligned with the appropriate calendar day on the base, rotating the second disc such that the marking representing the appropriate measured follicle size is aligned with the appropriate menstrual cycle day, and reading the calendar days associated with the subsequent tests, treatments and protocols.

113. A method for calculating dates and displaying information relating to fertility using a calculator, the calculator comprising a base and first and second discs, the base comprising at least first and second circular displays of first and second markings, respectively, wherein the first and second discs are adapted to be rotatably joined at a central axis to the first and second circular displays;

the first circular display of first markings divided into 153 equiangular parts disposed along substantially the entire periphery of the circular display, the 153 equiangular parts grouped into five segments, the first segment having 31 equiangular parts, the second segment having 30 equiangular parts and being labeled "April" and "September", the third segment having 31 equiangular parts and being labeled "May" and "October", the fourth segment having 30 equiangular parts and being labeled "June" and "November", and the fifth segment having 31 equiangular parts and being labeled "July" and "December", respectively, in clockwise fashion around the circle; and

the second circular display of second markings divided into at least 150 equiangular parts disposed along substantially the entire periphery of the circular display, the at least 150 equiangular parts grouped into at least five segments, the first segment having 31 equiangular parts and being labeled "January", the second segment having 28 equiangular parts and being labeled "February", the third segment having 31 equiangular parts and being labeled "March" and "Leap January", the fourth segment having 29 equiangular parts and being labeled "Leap February", and the fifth segment having 31 equiangular parts and being labeled "Leap March", or the first segment having 31 equiangular parts and being labeled "Leap January", the second segment having 29 equiangular parts and being labeled "Leap February", the third segment

having 31 equiangular parts and being labeled "Leap March" and "January", the fourth segment having 28 equiangular parts and being labeled "February", and the fifth segment having 31 equiangular parts and being labeled "March", respectively, in clockwise fashion around the circle;

the first disc having at least a circular display of third markings disposed along at least a portion of the periphery thereof, the third markings representing the days of a menstrual cycle, wherein one or more cycles are represented, the cycles having the same or different lengths;

the second disc having at least a circular display of fourth markings disposed along at least a portion of the periphery thereof, the fourth markings representing events of interest relating to one or more menstrual cycles;

the method comprising rotating the first disc to align the days of a menstrual cycle with the appropriate calendar days on the first or second circular display;

rotating the second disc to align the events of interest with the appropriate menstrual cycle day on the first disc;

determining the calendar dates of additional events of interest relating to additional menstrual cycles based on the associated calendar day on the first or second circular display.

114. A method for timing the fertile period using a calculator adapted to determine optimum time for achieving or avoiding pregnancy based on menstrual or ovulation physiology and a calendar of moon phases, wherein the calculator contains only non-letter, non-number symbols, the calculator comprising

a base comprising a circular display divided into 365 equiangular parts, each unit representing a day in each moon phase of a full year,

a first disc having the circumference thereof divided into 365 equiangular parts, wherein a symbol representing a significant day which occurs in cycles is located in the units at intervals according to the cycle, the first disc being smaller than the circular display on the base, and adapted to be rotatably set in coaxial

relation therewith so that the outside edge of the first disc lies inside the units on the base;

a second disc divided into 365 equiangular parts with an annular display of first indicia disposed along substantially the entire periphery thereof, the first indicia representing the days of a menstrual cycle; wherein one or more cycles are represented, the cycles having the same or different lengths, the second disc being smaller than the first disc and adapted to be rotatably set in coaxial relation therewith so that the outside edge of the second disc lies inside the symbols on the first disc;

a third disc divided into 365 equiangular parts with an annular display of second and third indicia disposed along substantially the entire periphery thereof, the second indicia representing the days of a menstrual cycle and the third indicia representing a fertile period, the third disc being smaller than the first disc, and adapted to be rotatably set in coaxial relation with the base, first and second discs so that the outside edge of the third disc lies inside the symbols on the first disc;

the method comprising rotating the first disc such that the symbol representing a significant day on the first disc is aligned with the appropriate moon phase on the base,

affixing the first disc to the base to set the calendar,

rotating the second disc such that the last menstrual cycle on the second disc is aligned with the corresponding day on the first disc and base, according to the significant days,

rotating the third disc such that the next menstrual cycle on the third disc is aligned with the corresponding day on the first disc, according to the significant days,

determining the days from the base and first disc which correspond to the third indicia on the third disc representing a fertile period.

115. An apparatus comprising

a base comprising first and second parallel adjacent linear displays, the first linear display divided into first segments, each segment representing a day of a menstrual cycle wherein one or more menstrual cycles are represented, wherein the menstrual cycles may be of different lengths, the second linear display representing events relating to the menstrual cycle, the events being aligned with the appropriate cycle day, the base having slits which receive one or more sliding adjustable scales such that the sliding adjustable scales are parallel to the first and second linear displays and are adjacent to the first linear display;

a first sliding adjustable scale, positioned adjacent the first linear display, the first sliding adjustable scale divided into second segments, the second segments labeled with the days of a month, wherein one or more months are represented;

a second sliding adjustable scale, positioned adjacent the first sliding adjustable scale, the second sliding adjustable scale divided into third segments, the third segments representing months of a year, wherein one or more months are represented; wherein the first and second segments are the same size.

116. The apparatus of claim 115 further comprising a third sliding adjustable scale divided into fourth segments, the fourth segments labeled with the days of a week.

117. The apparatus of claim 115 wherein the first sliding adjustable scale comprises the days of the 12 months in order.

118. The apparatus of claim 115 wherein the first sliding adjustable scale comprises multiple scales with 28, 29, 30 and 31 days, wherein the scales are attachable end-to-end to provide any month-to-month transition.

119. The apparatus of claim 115 further comprising a fourth sliding adjustable scale comprising a display of events relating to ovulation.

120. An apparatus comprising

a base comprising a linear display divided into first segments, the first segments labeled with the days of a month, wherein one or more months are represented and the display is labeled with the names of the months, the base having slits which receive one or more sliding adjustable scales such that the sliding adjustable scales are parallel to the linear display;

a first sliding adjustable scale divided into second segments, the second segments labeled with the days of a menstrual cycle, wherein one or more menstrual cycles are represented, wherein the menstrual cycles may be of different lengths, the first sliding adjustable scale also comprising a first display of events relating to specific cycle days;

a second sliding adjustable scale with a second display of events relating to ovulation; wherein the first and second segments are the same size.

121. The apparatus of claim 120 further comprising a third sliding adjustable scale divided into third segments labeled with the days of the week, the third segments being the same size as the first and second segments.

122. An apparatus comprising

a base comprising first and second parallel linear displays, the first linear display divided into first segments, the first segments labeled with the days of a menstrual cycle, wherein one or more menstrual cycles are represented, wherein the menstrual cycles may be of different lengths, the second linear display representing events relating to specific menstrual cycle days;

a calendar module comprising a calendar strip divided into second segments, the second segments labeled with the days of the year, the days of the year labeled with the corresponding month, wherein the calendar module is attachable to the base such that the calendar strip is parallel to the first and

second linear displays, wherein the first and second segments are the same size such that the days of the year align with the menstrual cycle days.

123. The apparatus of claim 122 wherein the calendar module further comprises a weekday strip listing the days of the week.

124. The apparatus of claim 122 wherein the calendar strip comprises a 365 day year.


125. The apparatus of claim 122 wherein the calendar strip comprises a 366 day leap year.

126. The apparatus of claim 122 wherein the calendar module further comprises an adjusted menstrual cycle day strip with longer cycles than those on the base.

127. The apparatus of claim 122 wherein the base further comprises slits which receive at least one sliding adjustable scale, the sliding adjustable scale having a display of events relating to ovulation.


1142

FIG. 1

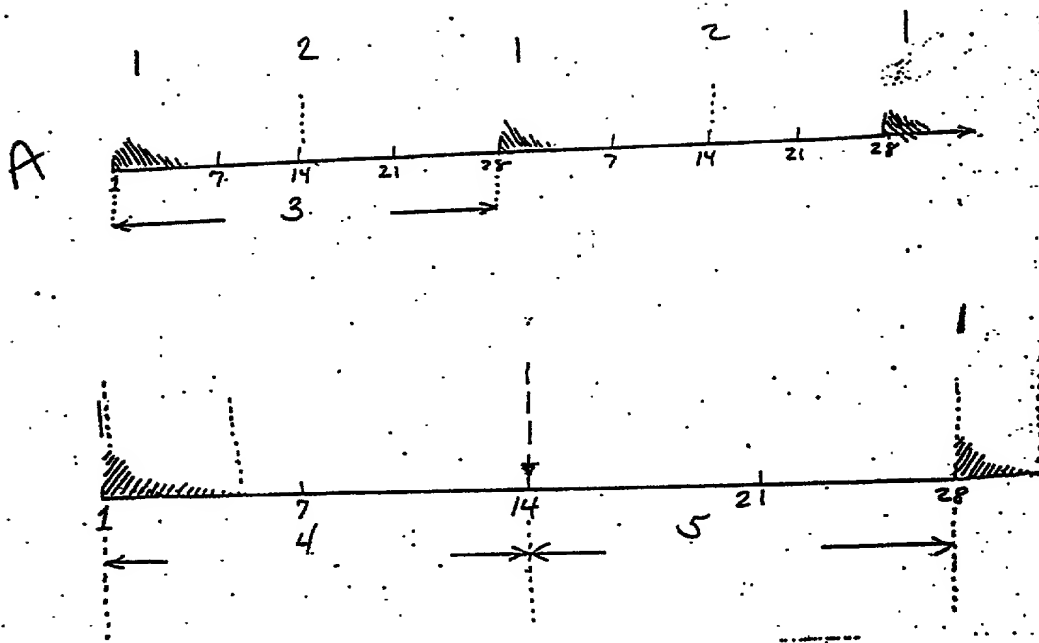


2/42

FIG. 2

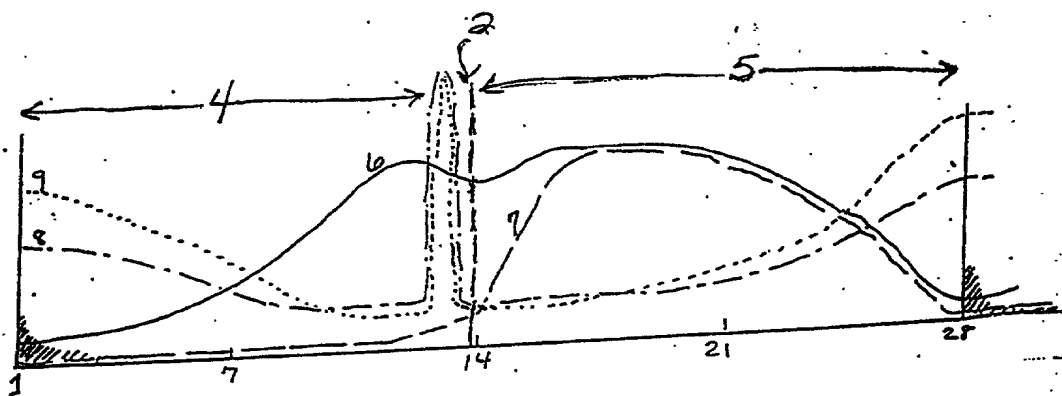


3/42

FIG. 3

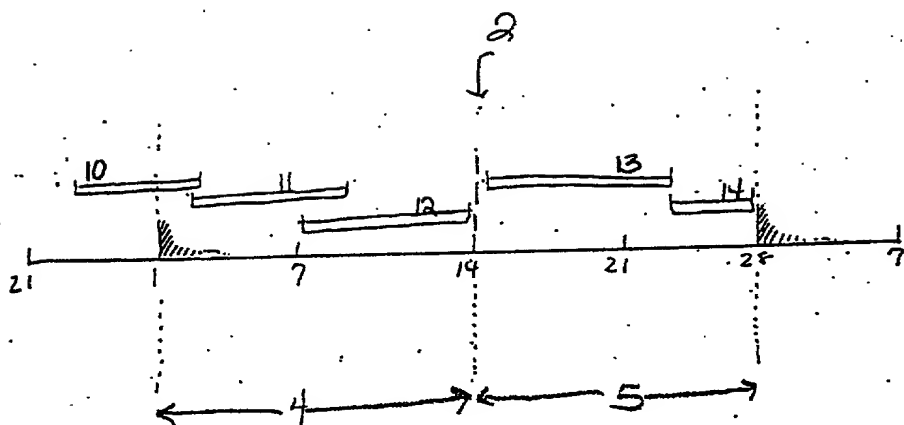


4/42

FIG-4

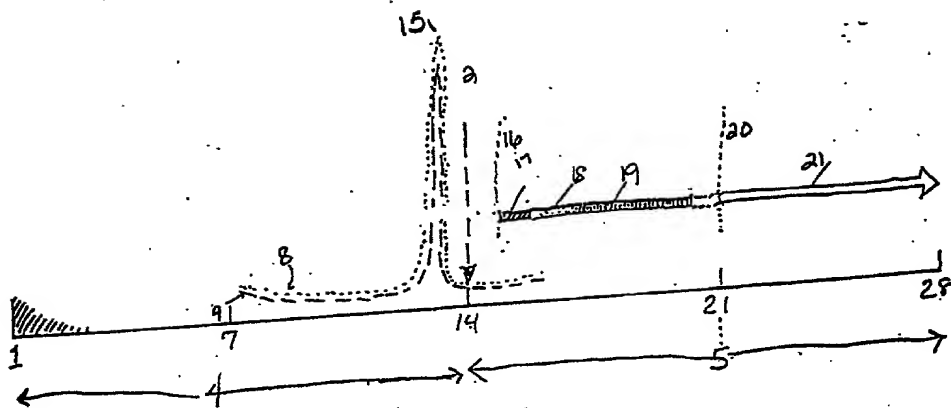

5/42

FIG: 5

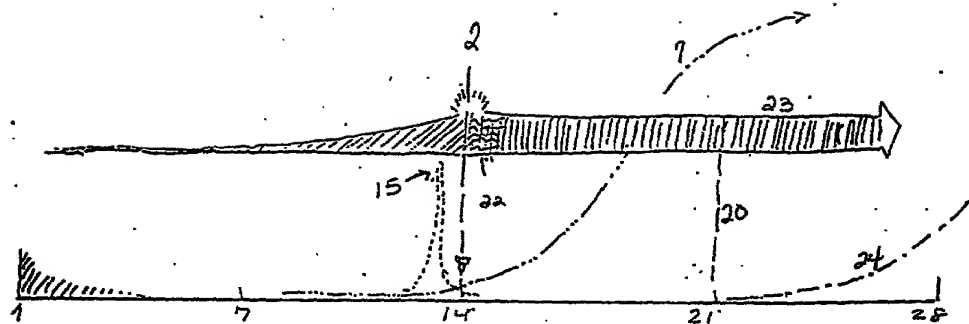

6/42

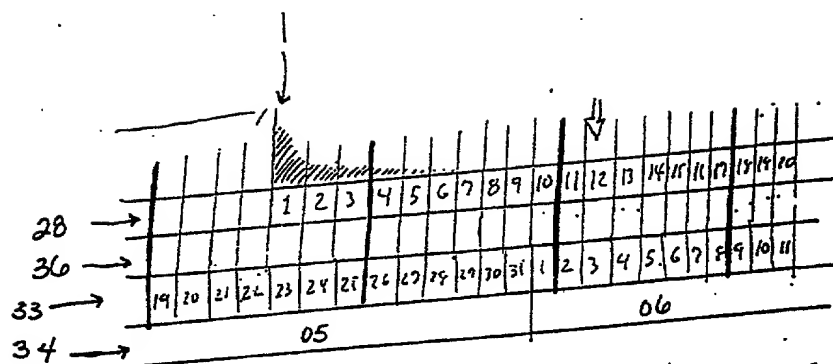
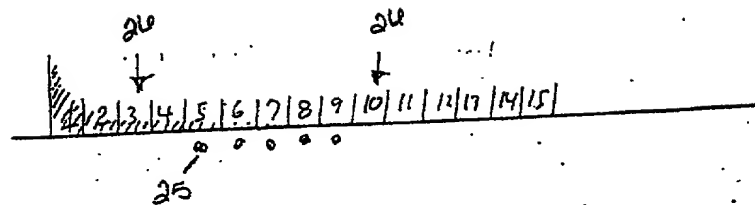


FIG. 6

7/42

FIG. 7



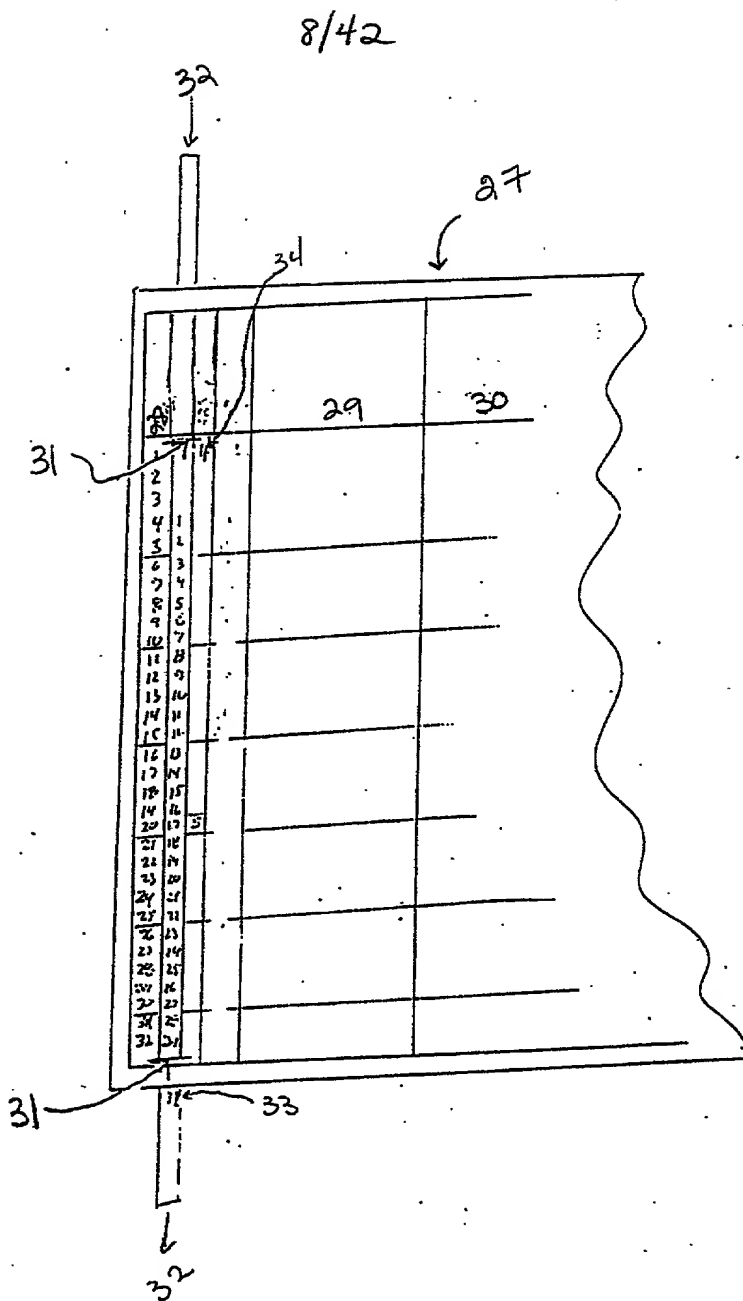


FIG. 8

9/42


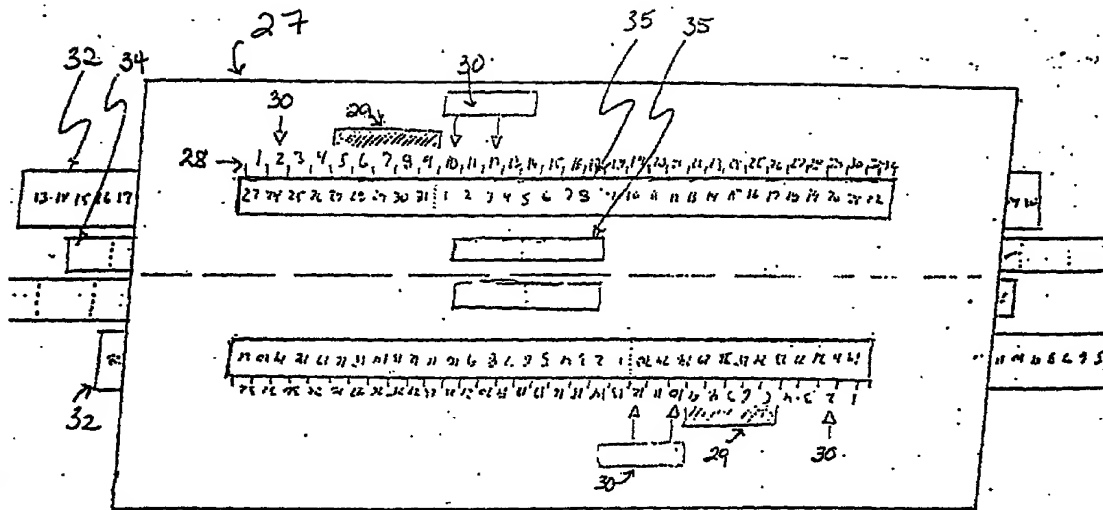


FIG. 9A

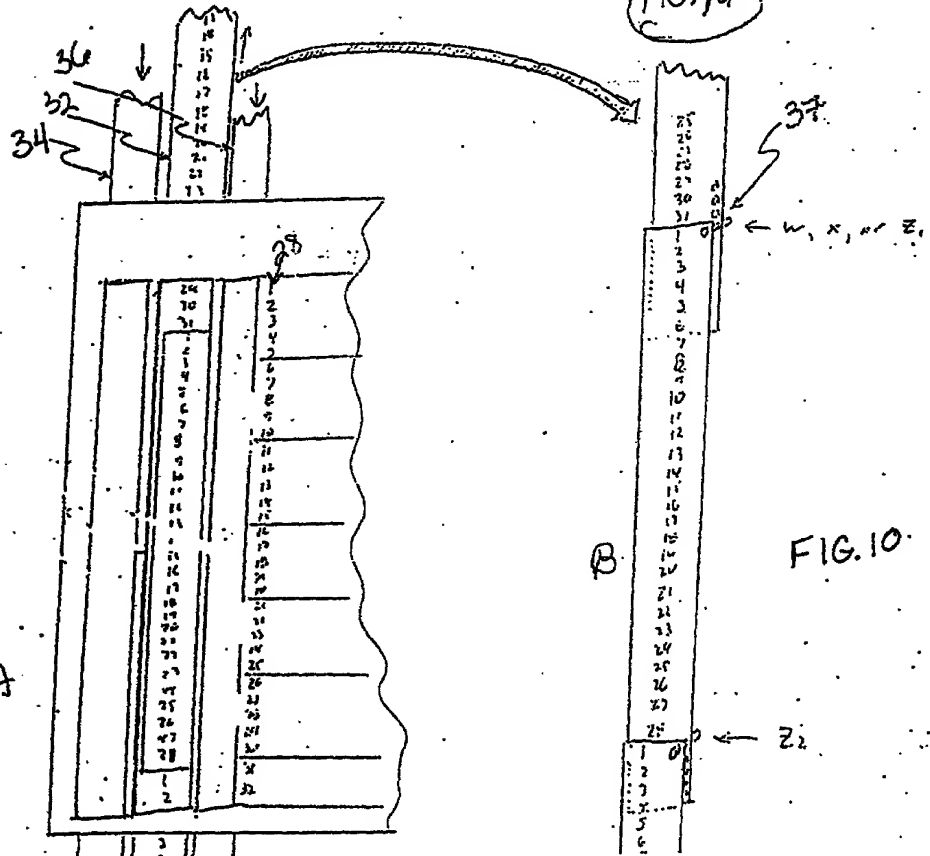

10/42

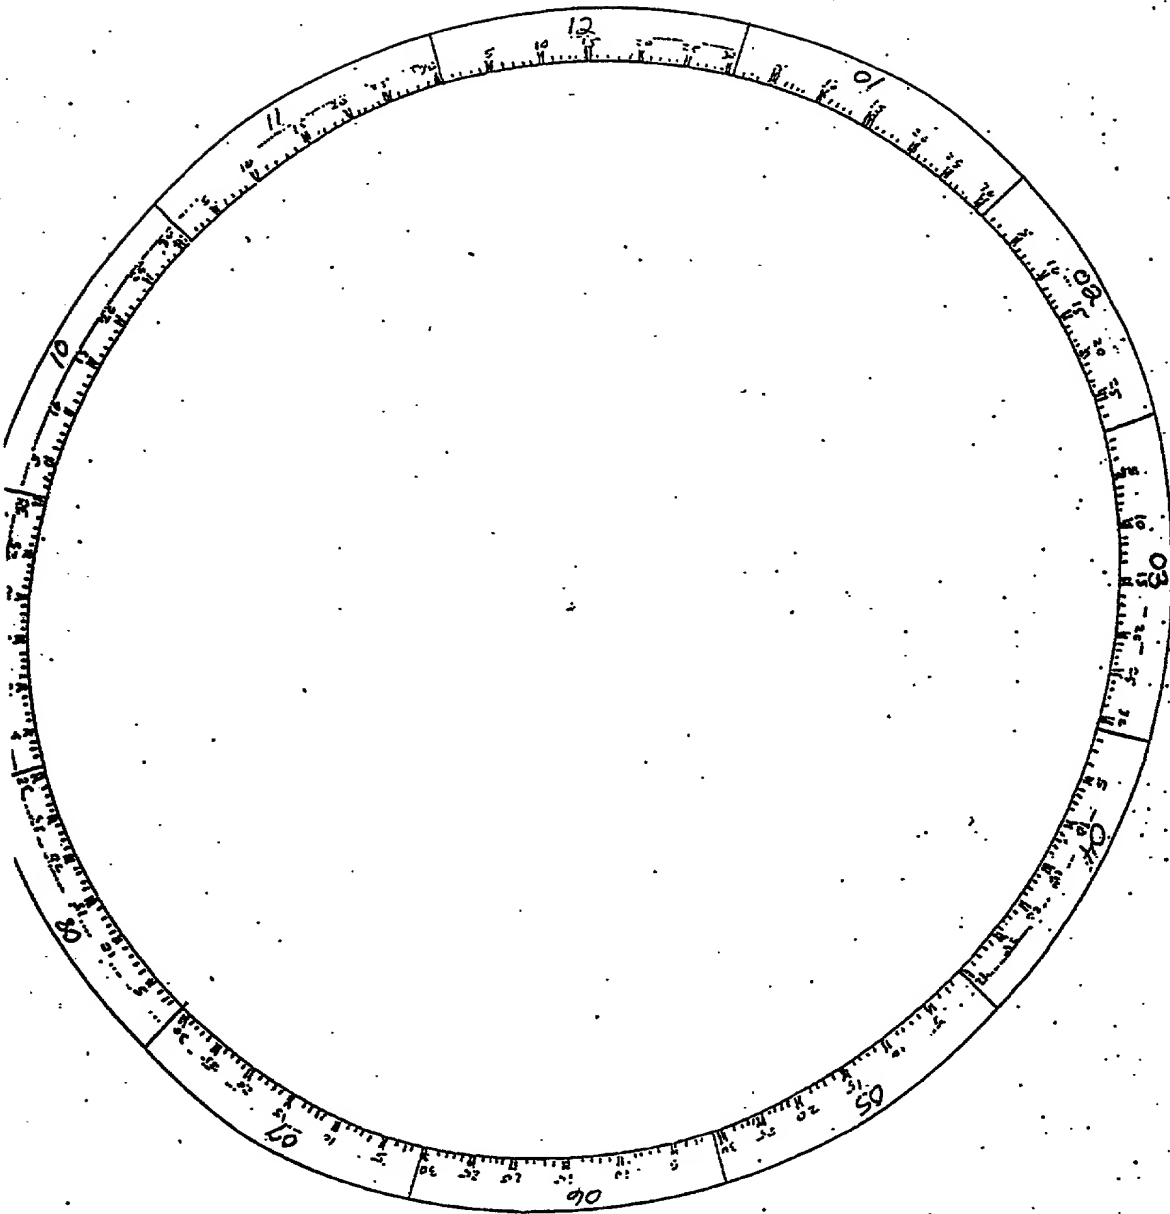


FIG. 11.



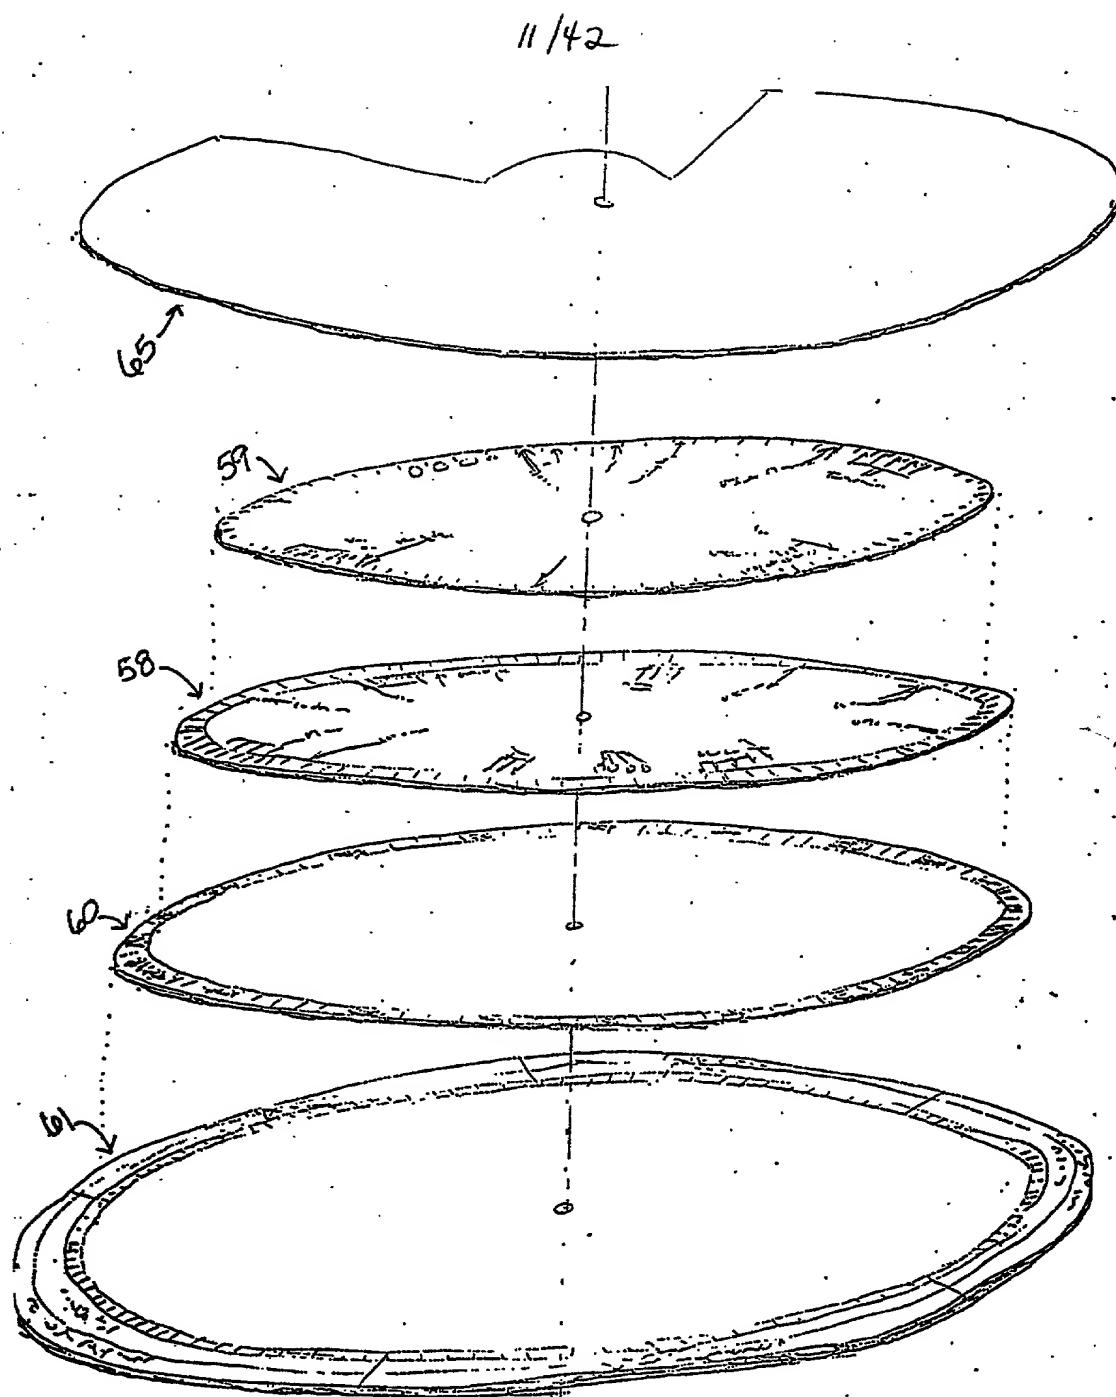


FIG. 12

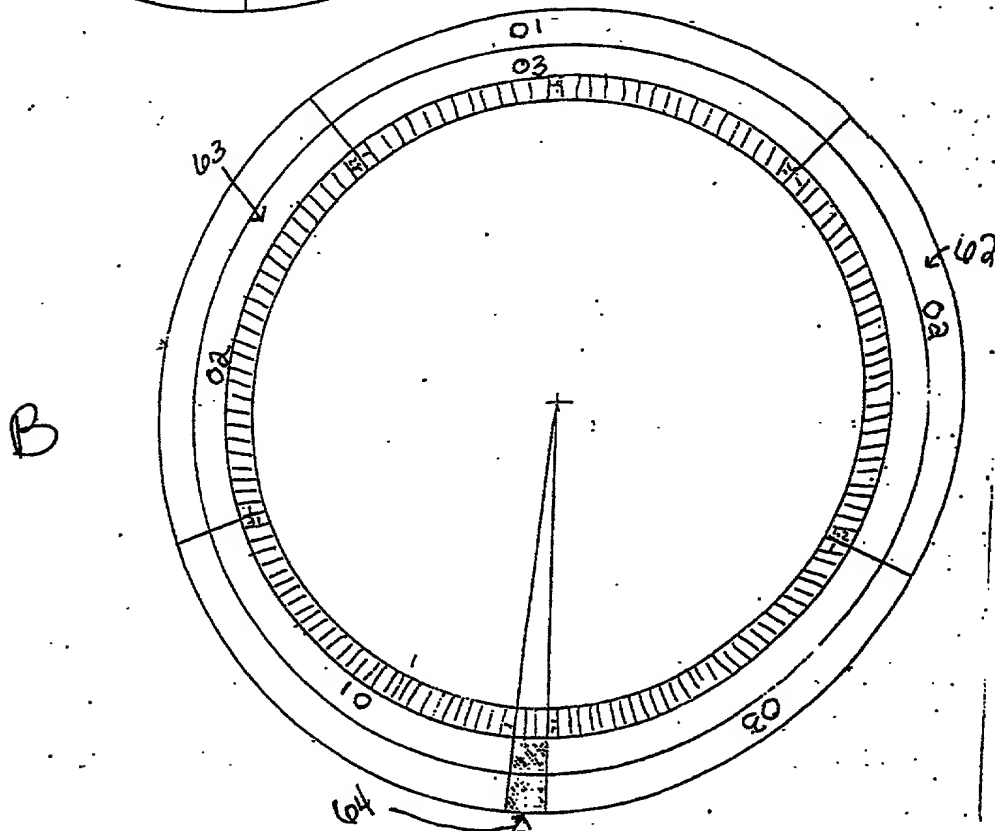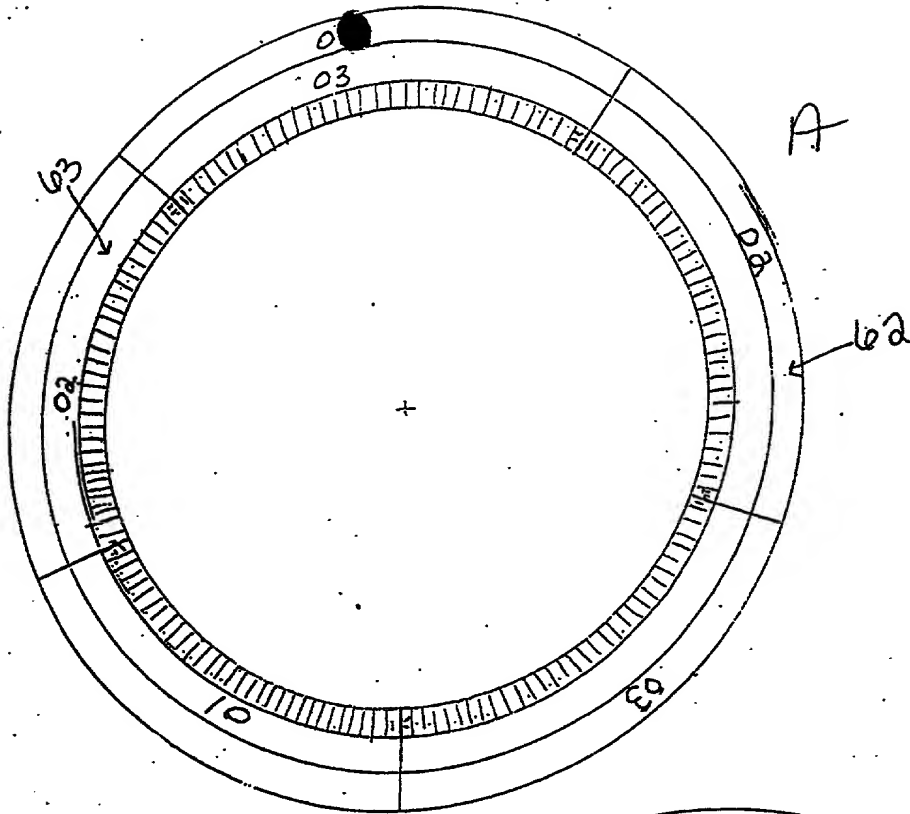

13/42

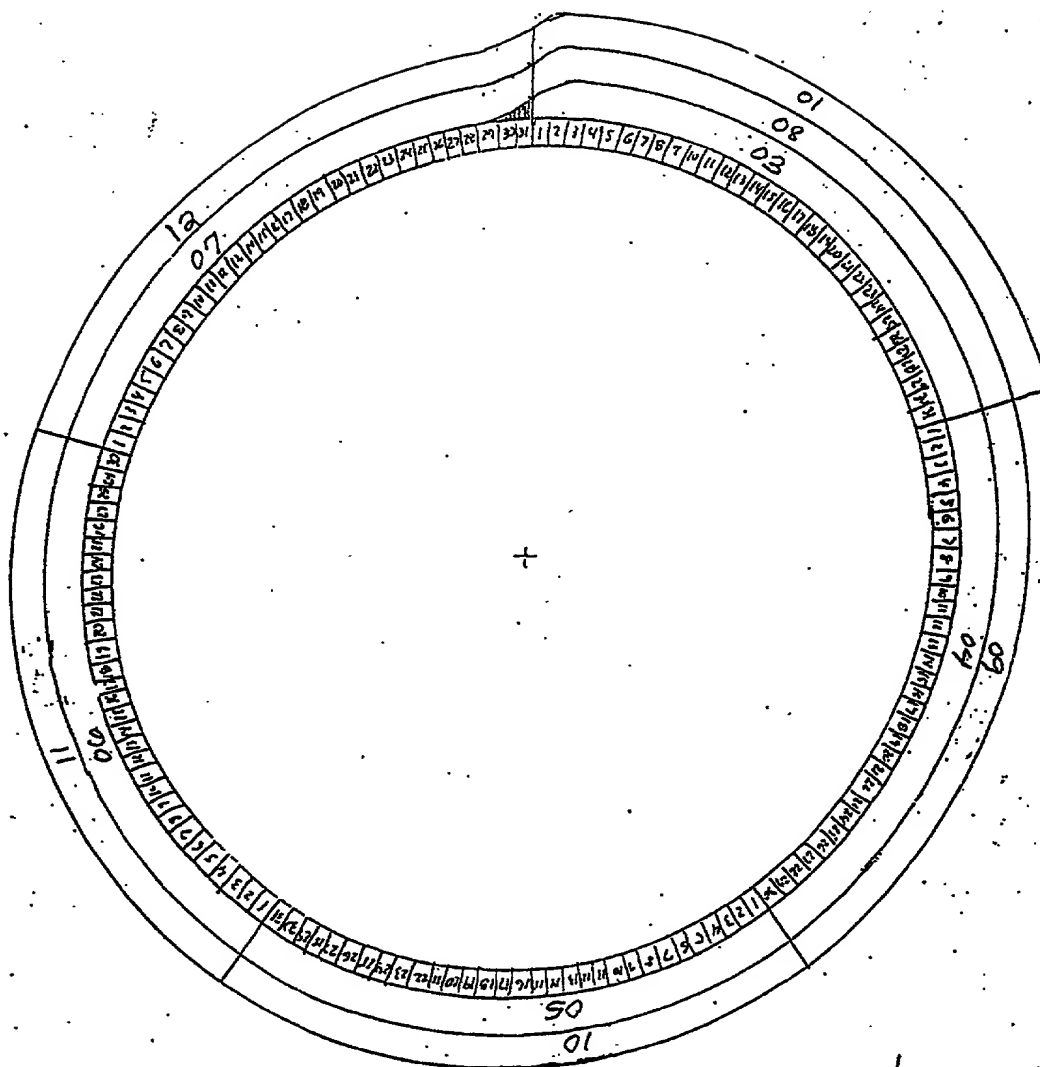


FIG. 14

WO 00/77590

14/42

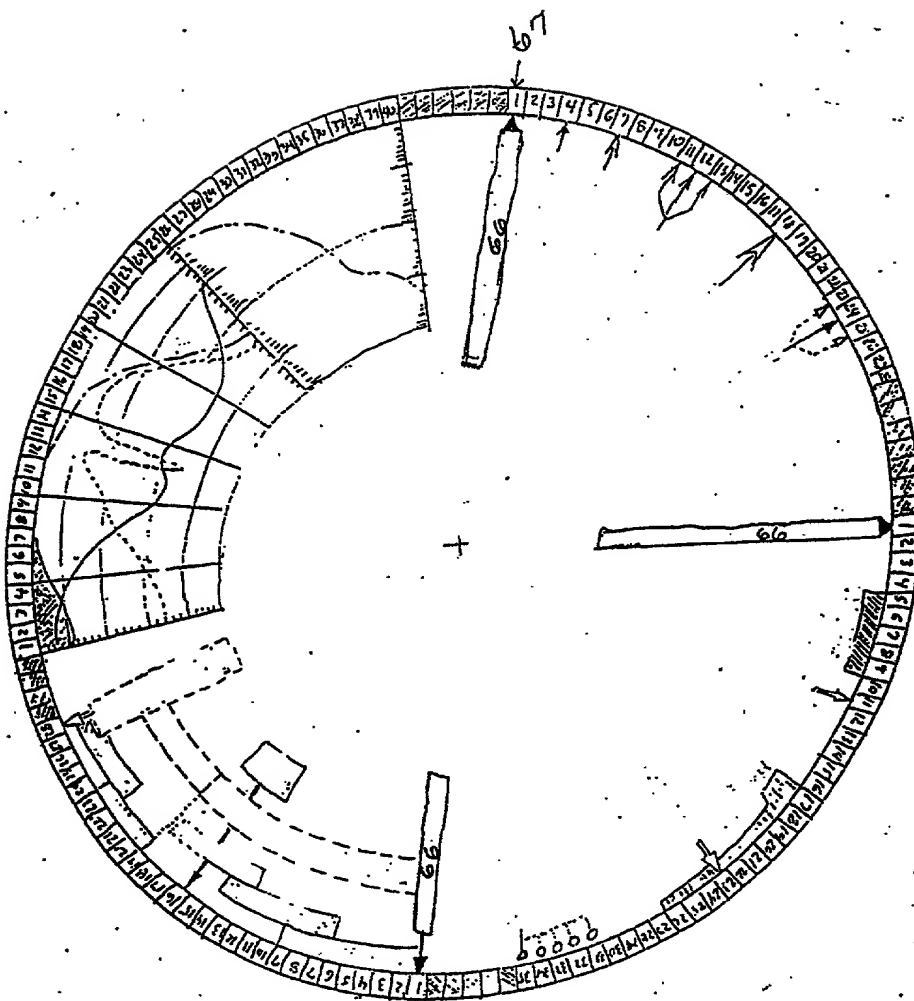


FIG. 15

09/763250 14/42

15/42


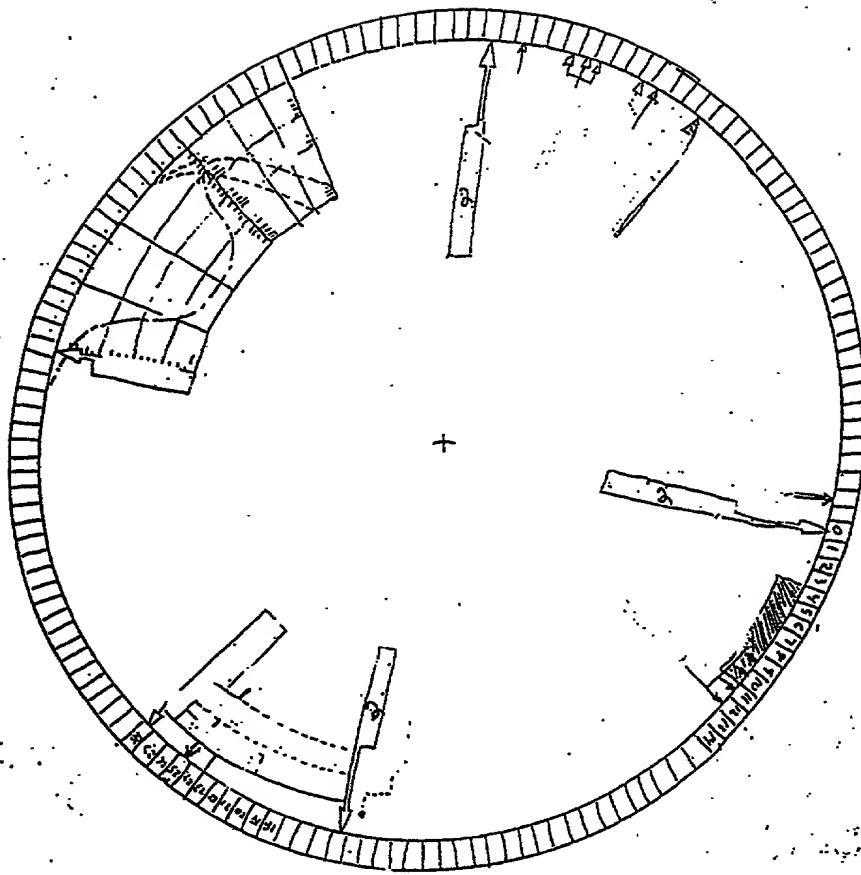


FIG. 16

16/42

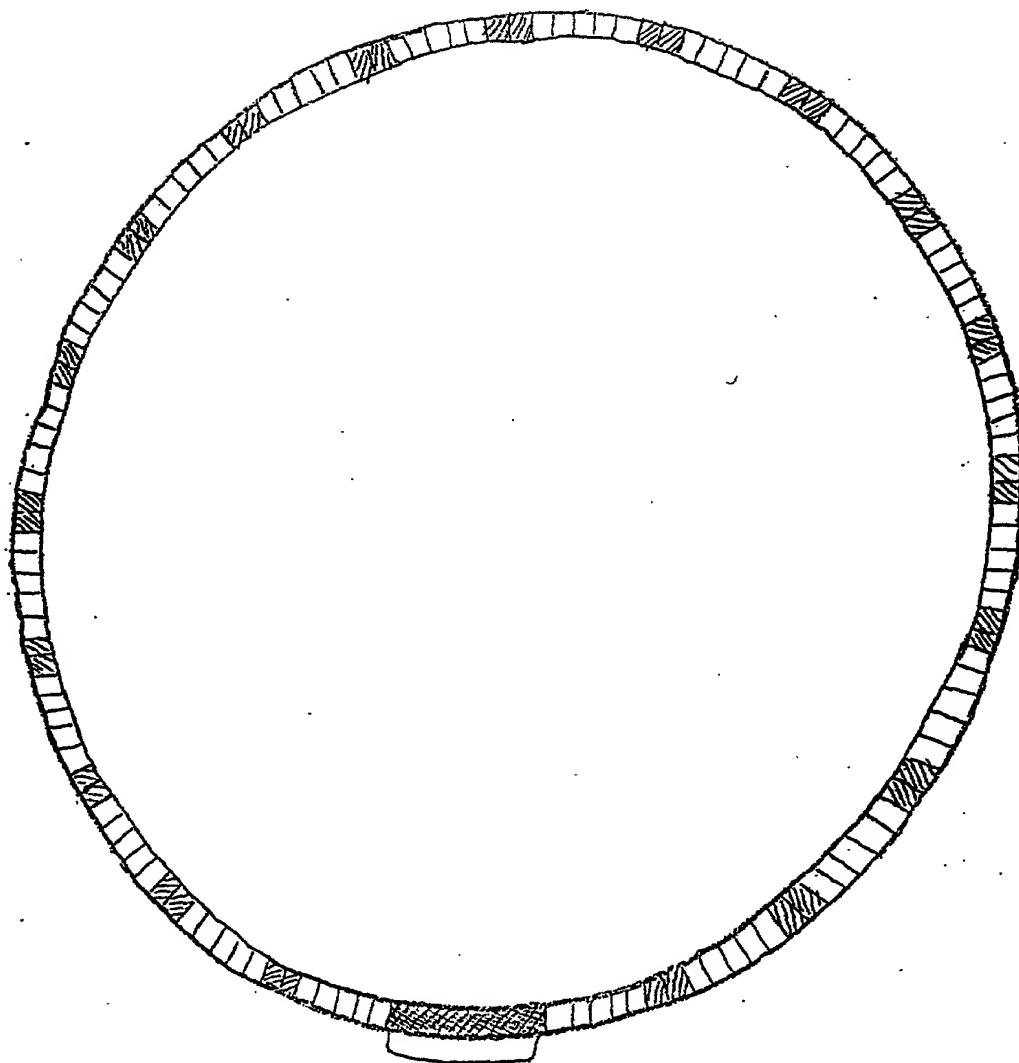

68

FIG. 17

09/763250 16/42

17/42


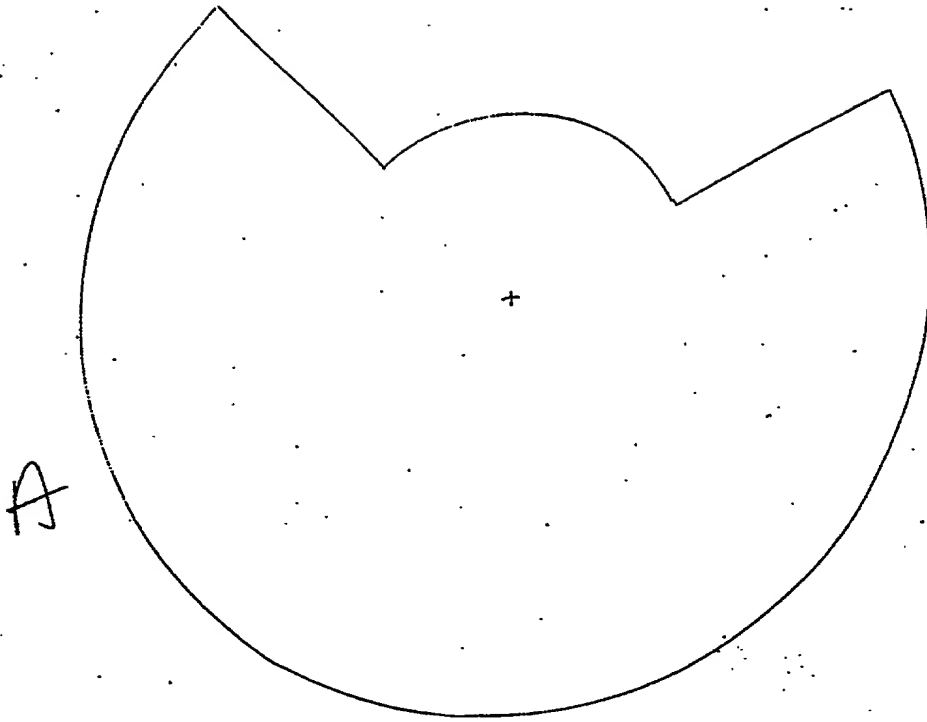


FIG. 18

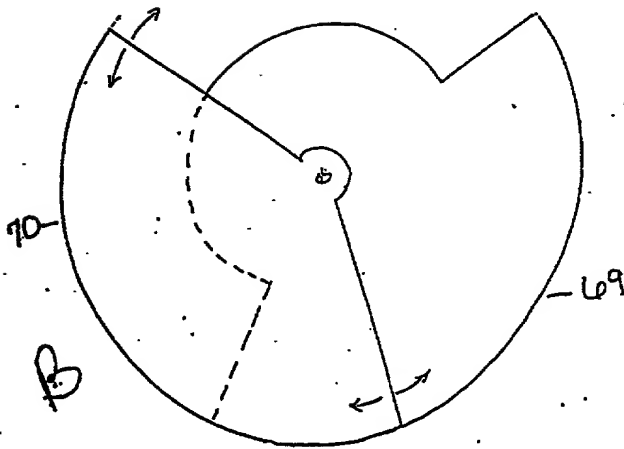

18/42



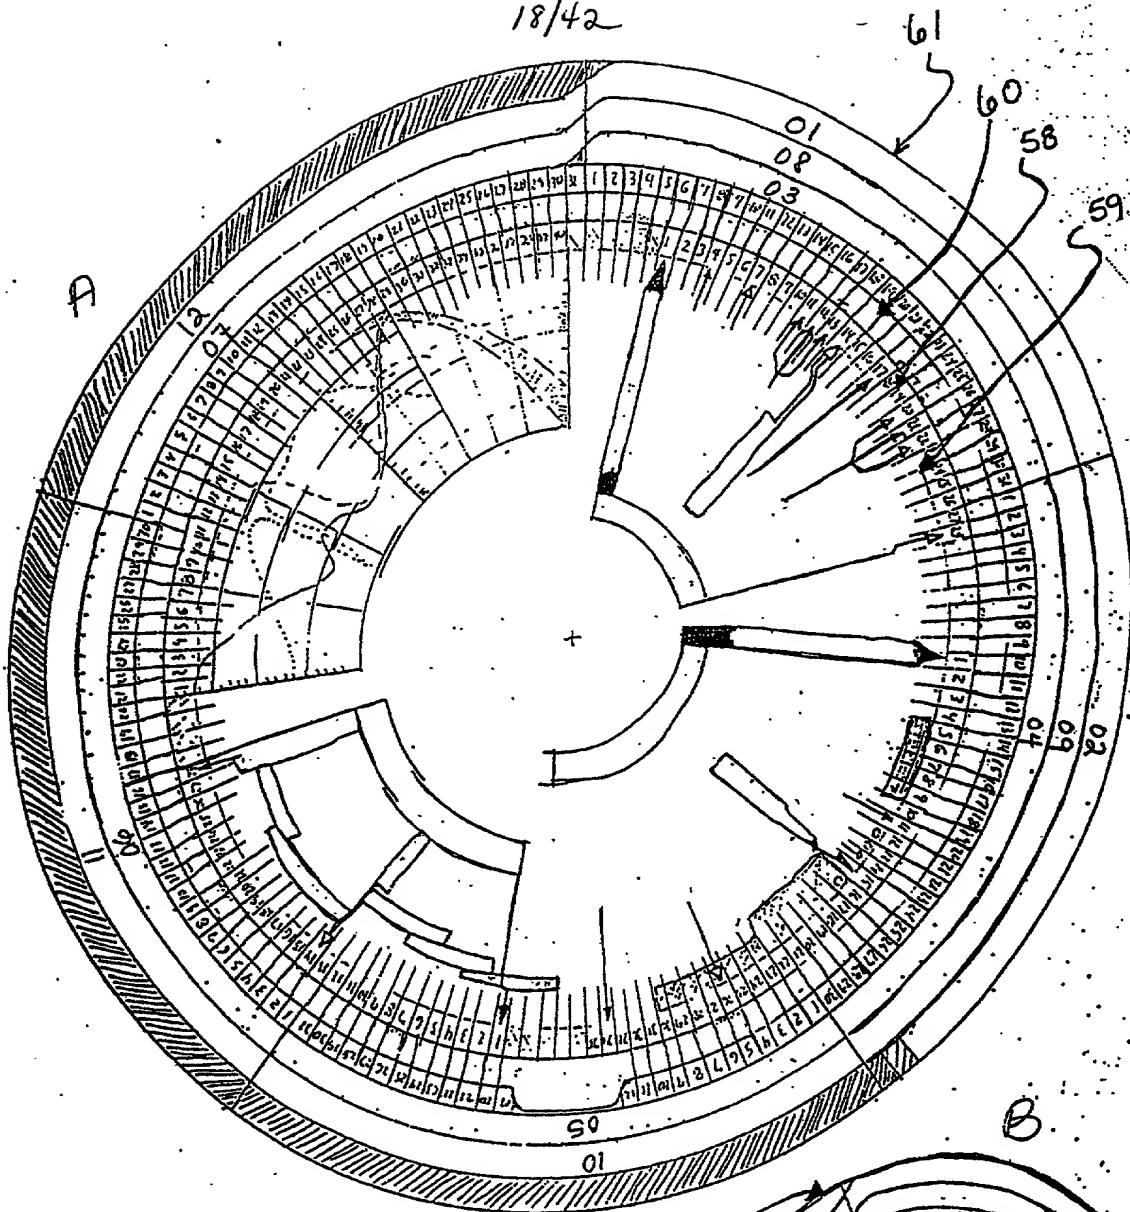


FIG. 19

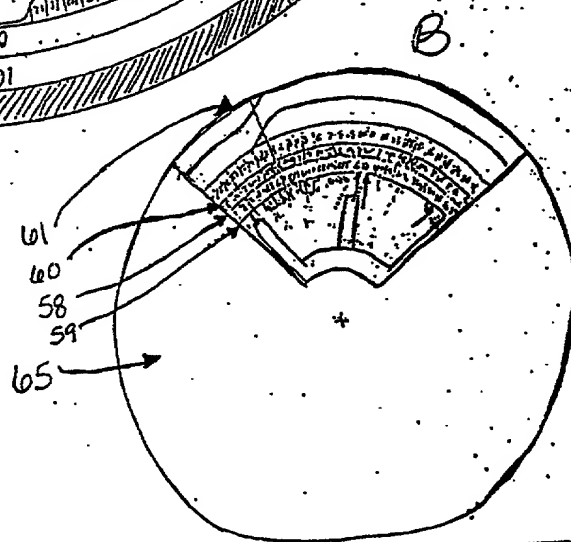


A hand-drawn diagram of a number line. The line is curved and contains boxes numbered 1 through 7. A pencil is drawn pointing to the box containing the number 1.


A

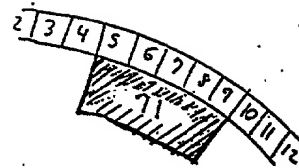

B

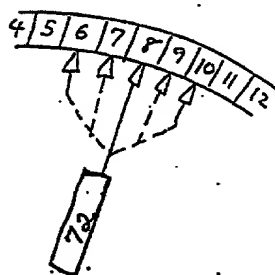

C

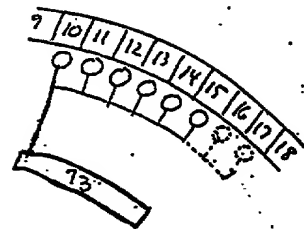

D

FIG. 20

WO 00/77590

20/42

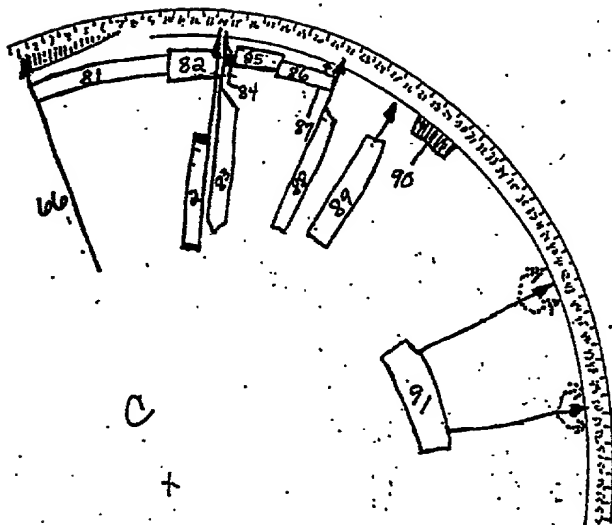
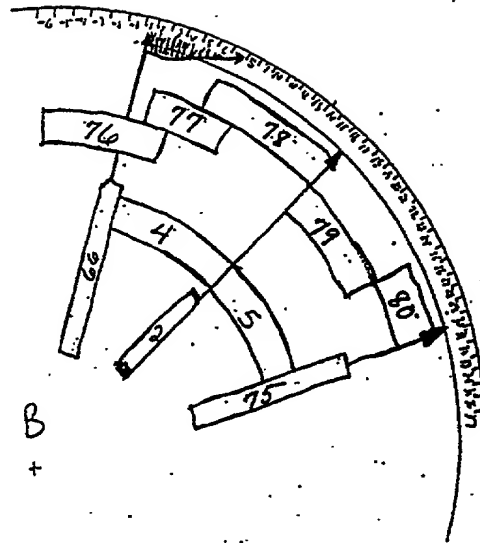
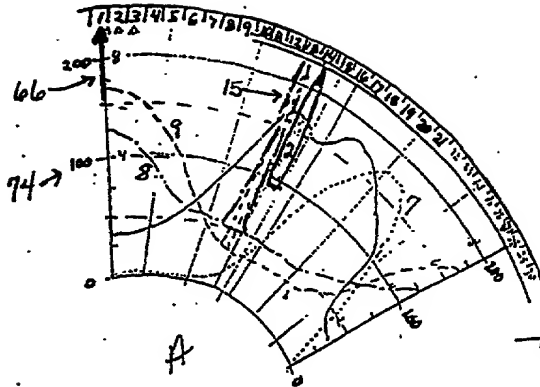


FIG. 2!

21/42

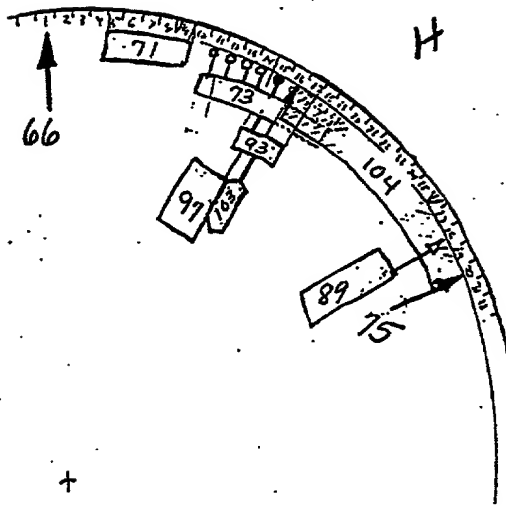
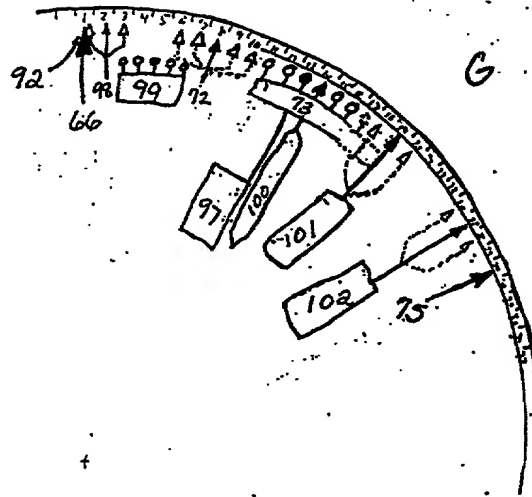
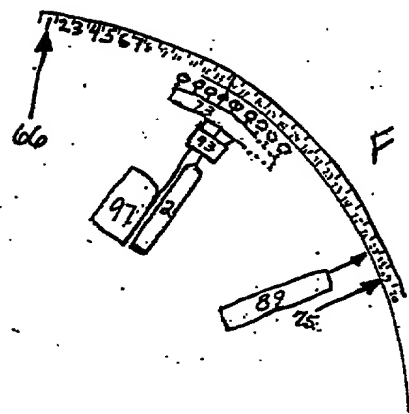
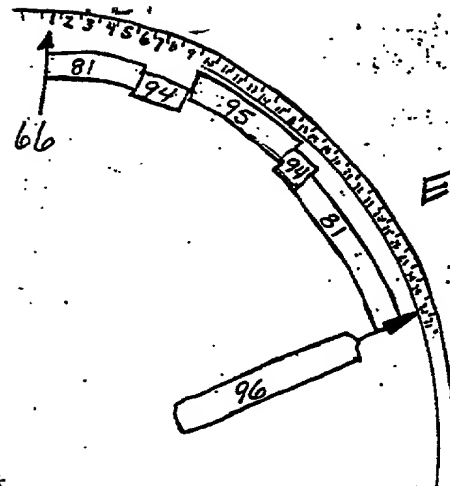
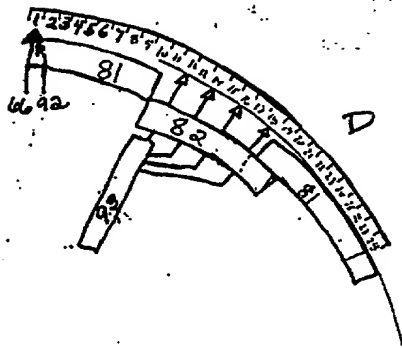


FIG. 21

09/763250 21/42

22/42

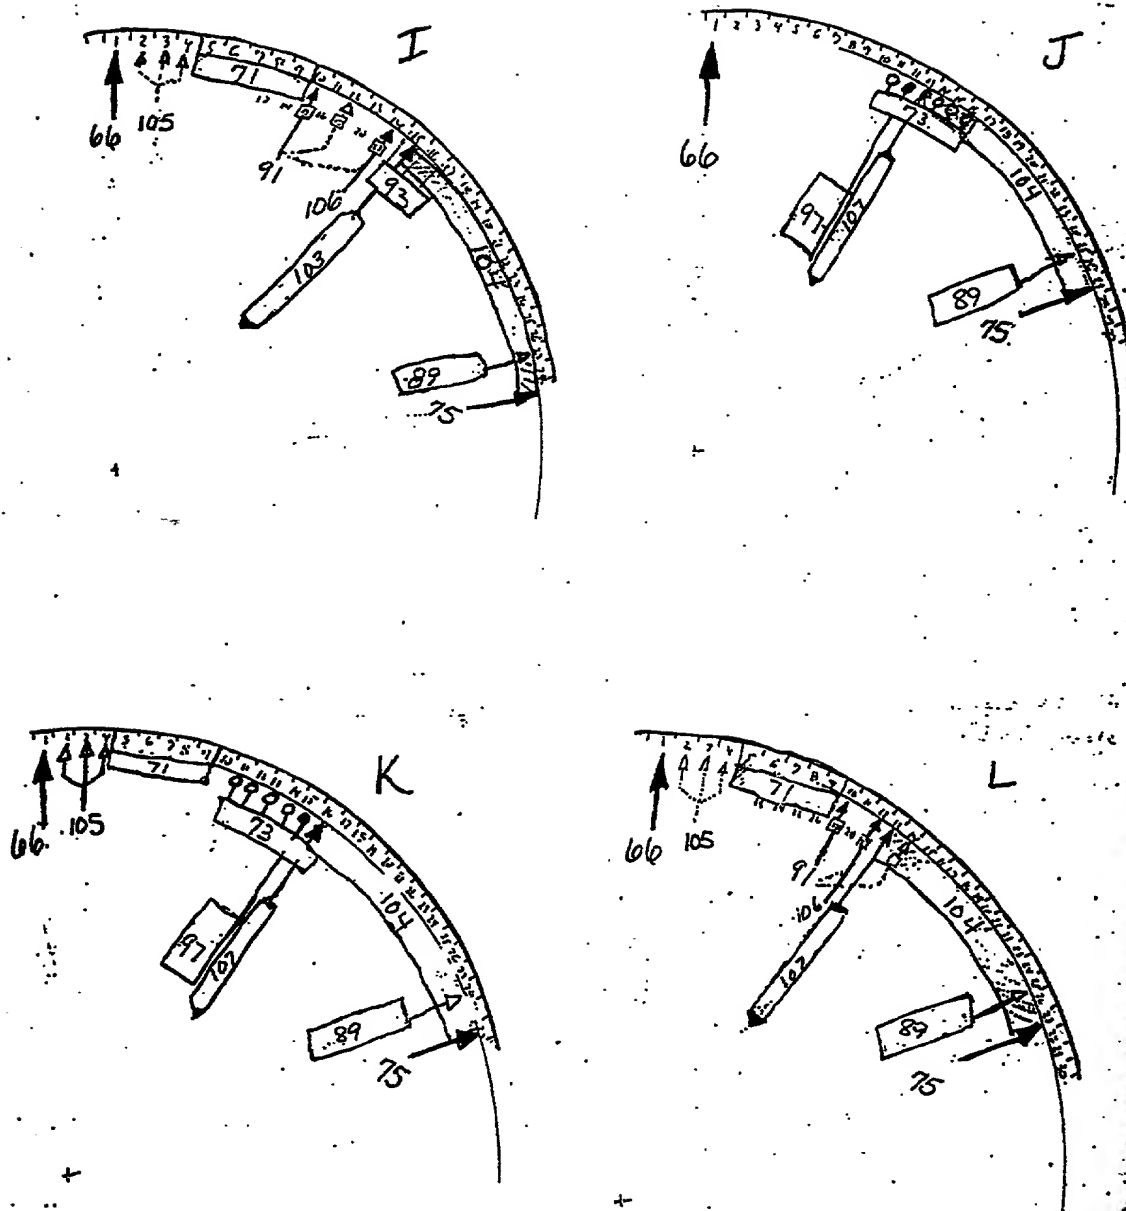


FIG. 21

23/42







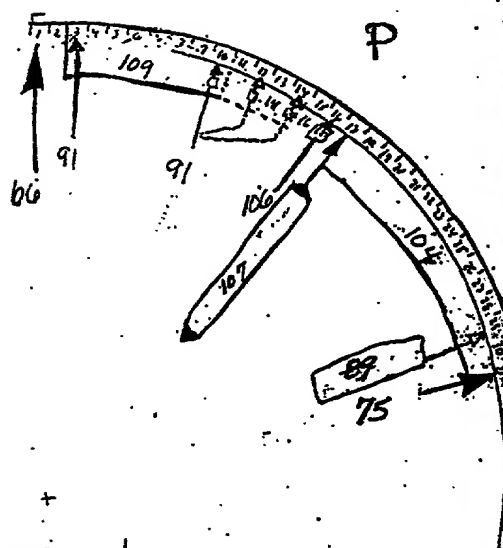



FIG. 21

24/42

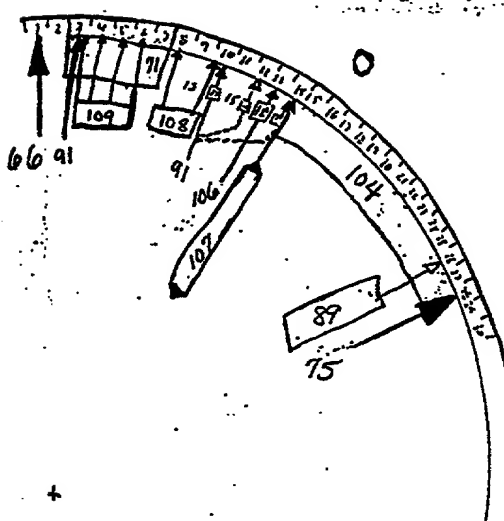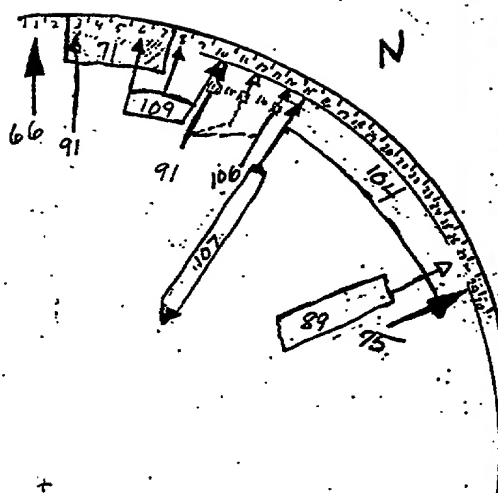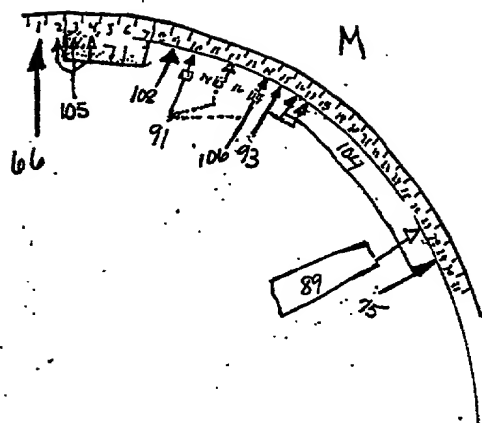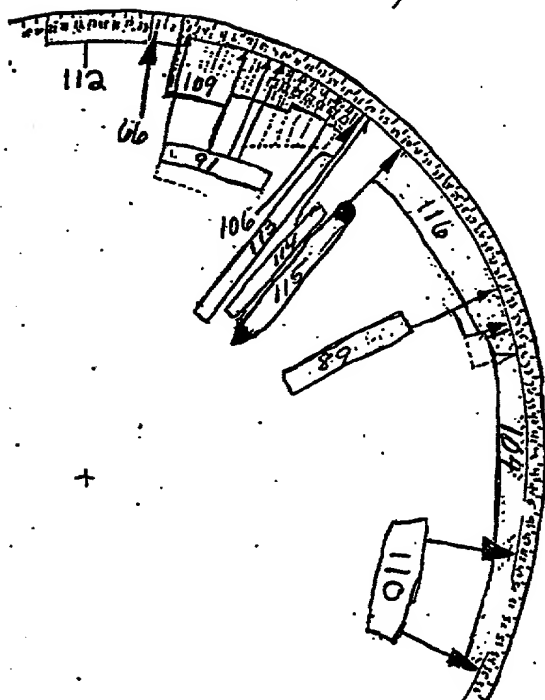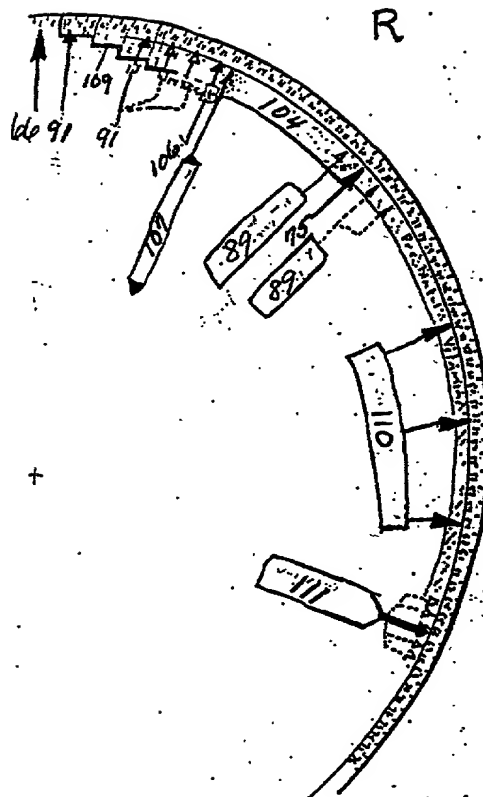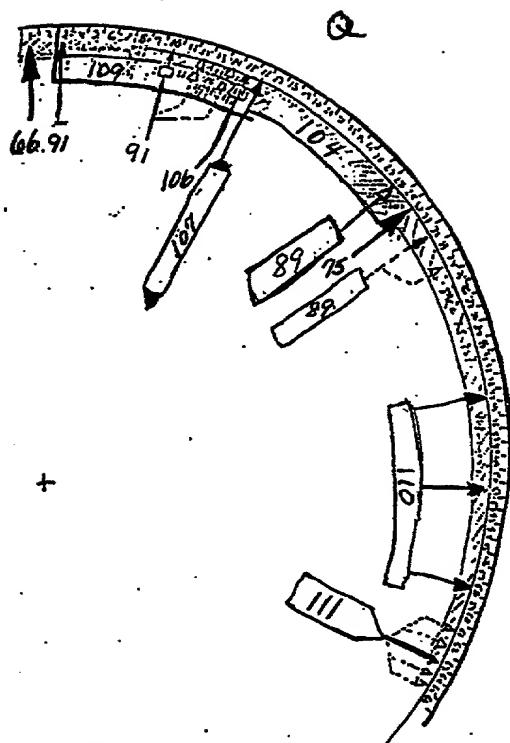


S FIG 21


25/42

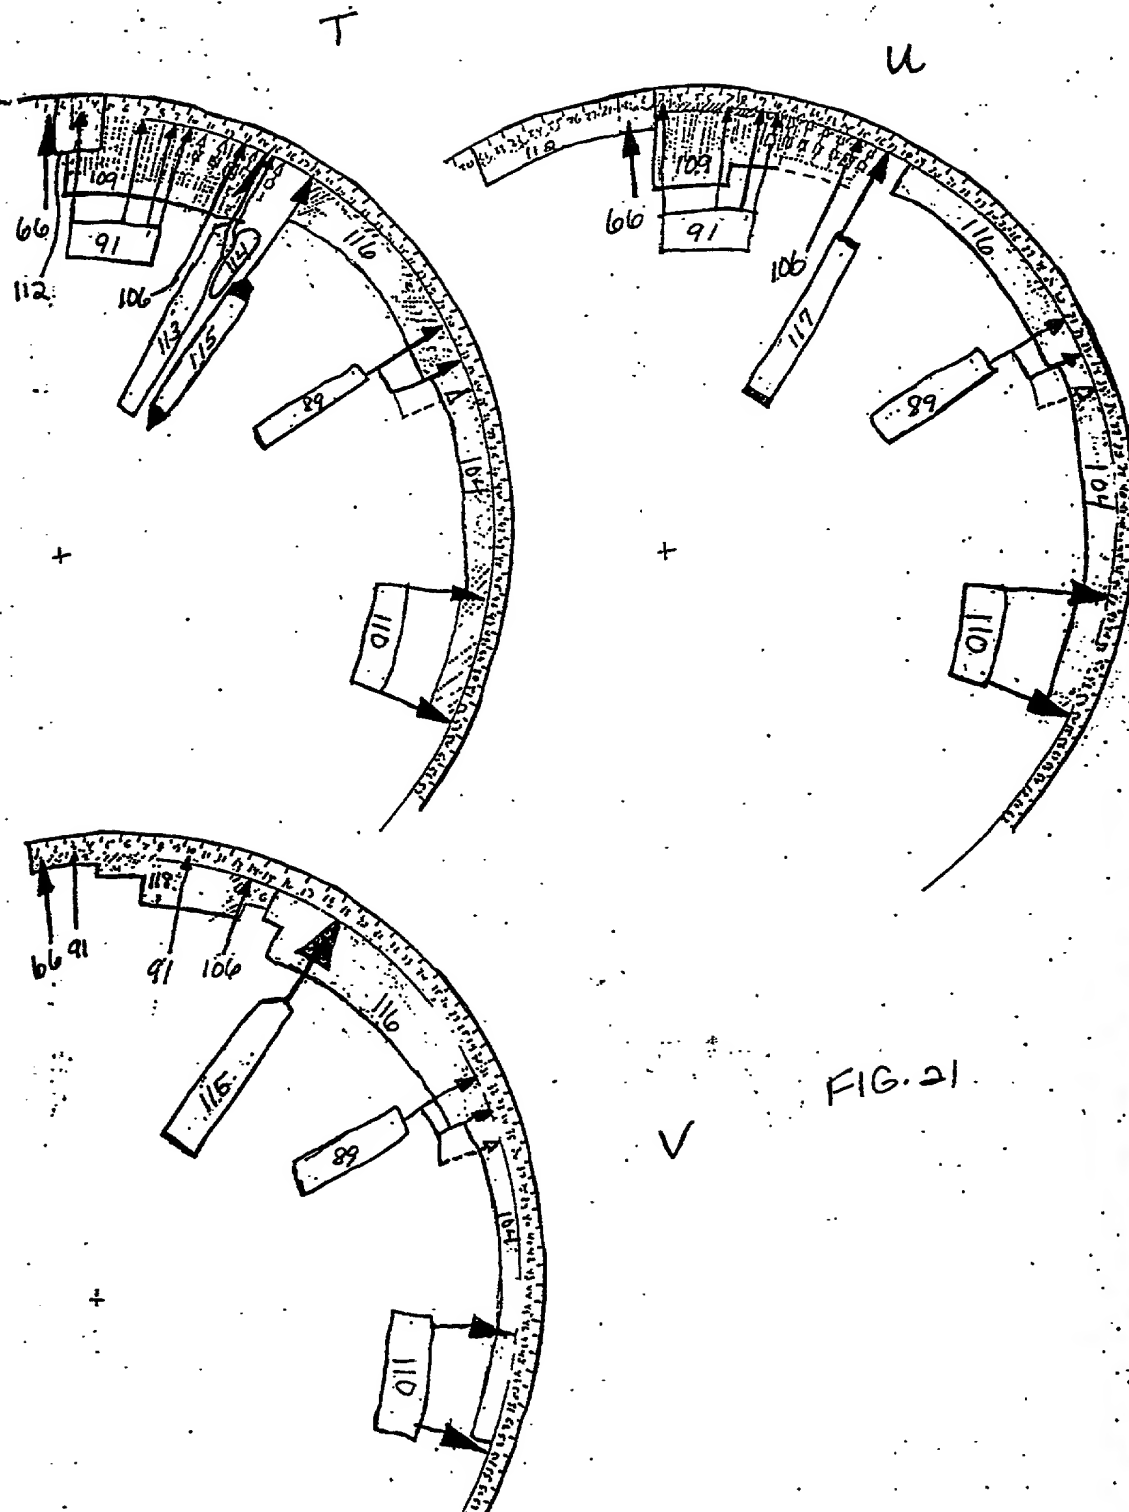


26/42

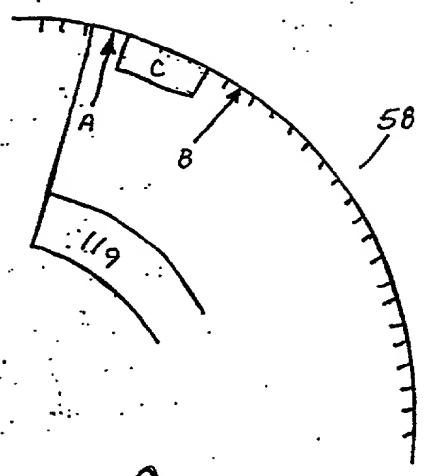


A

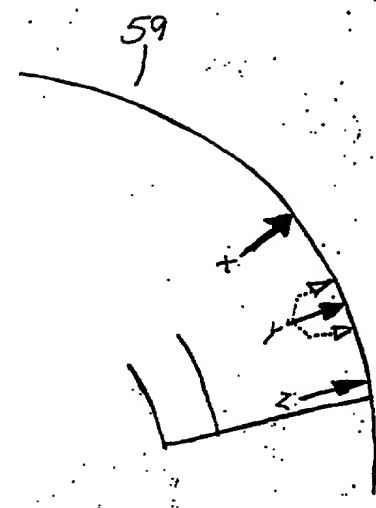

B

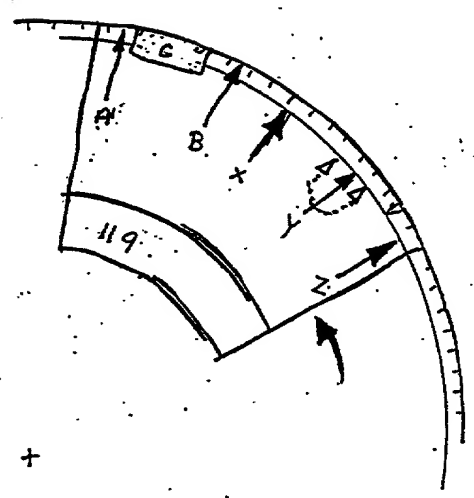

C

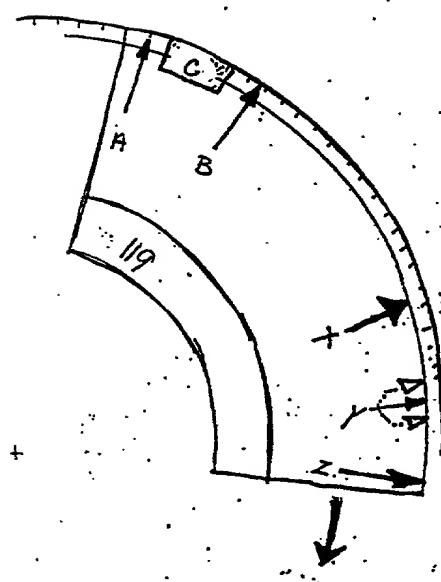

D

FIG. 22

097763250 034501

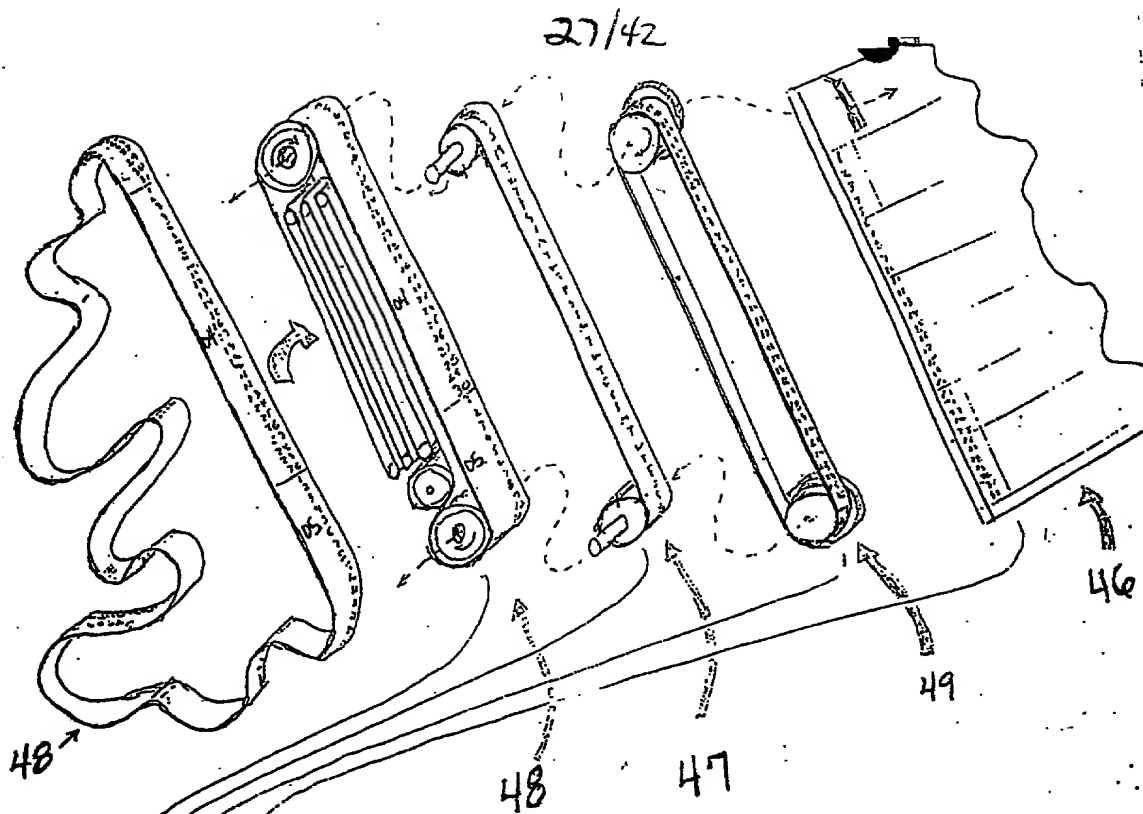
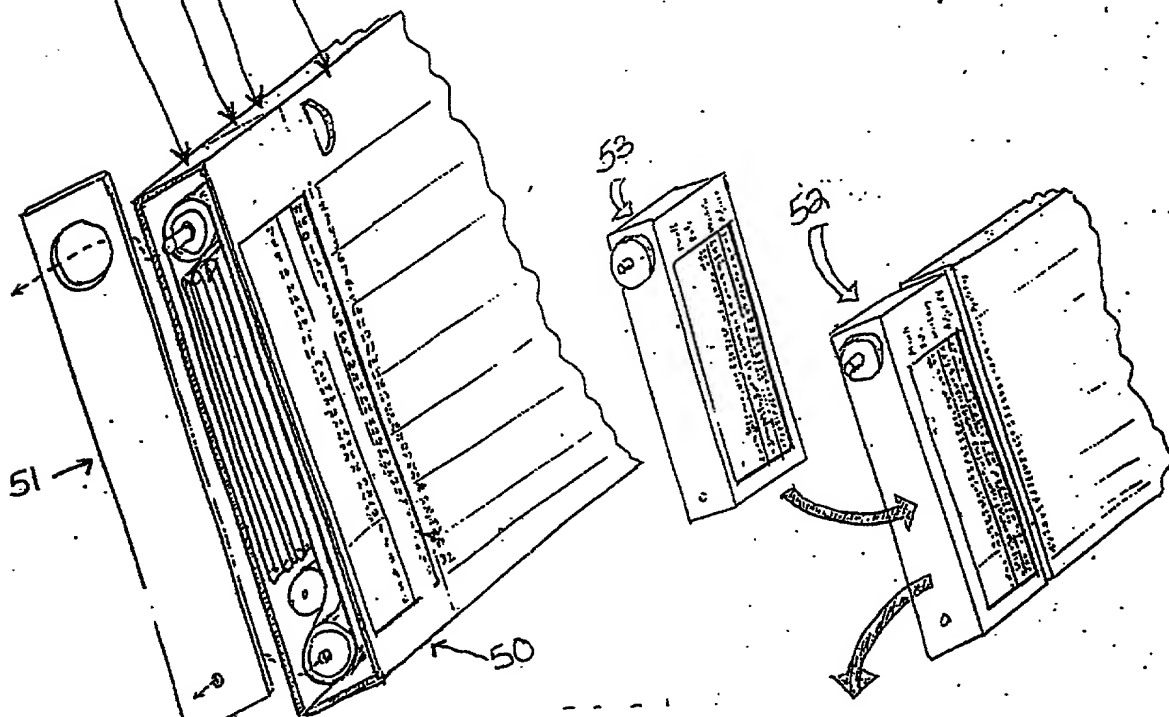


FIG. 23




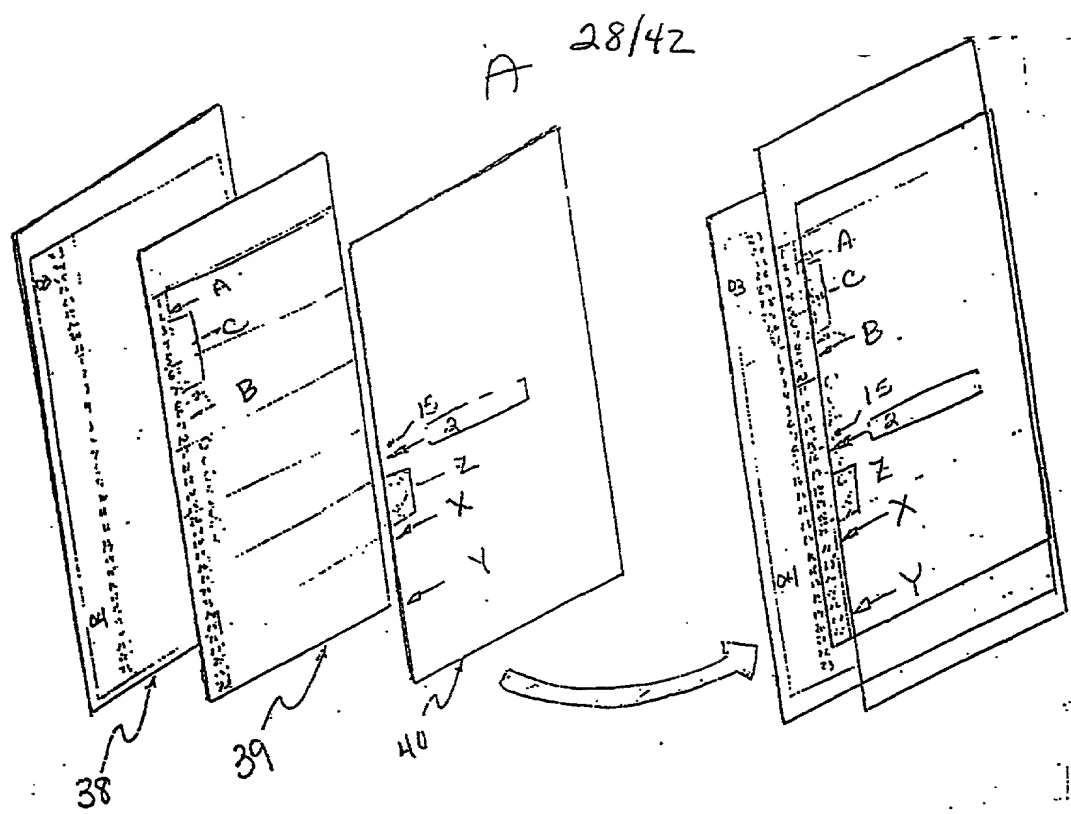



FIG. 24

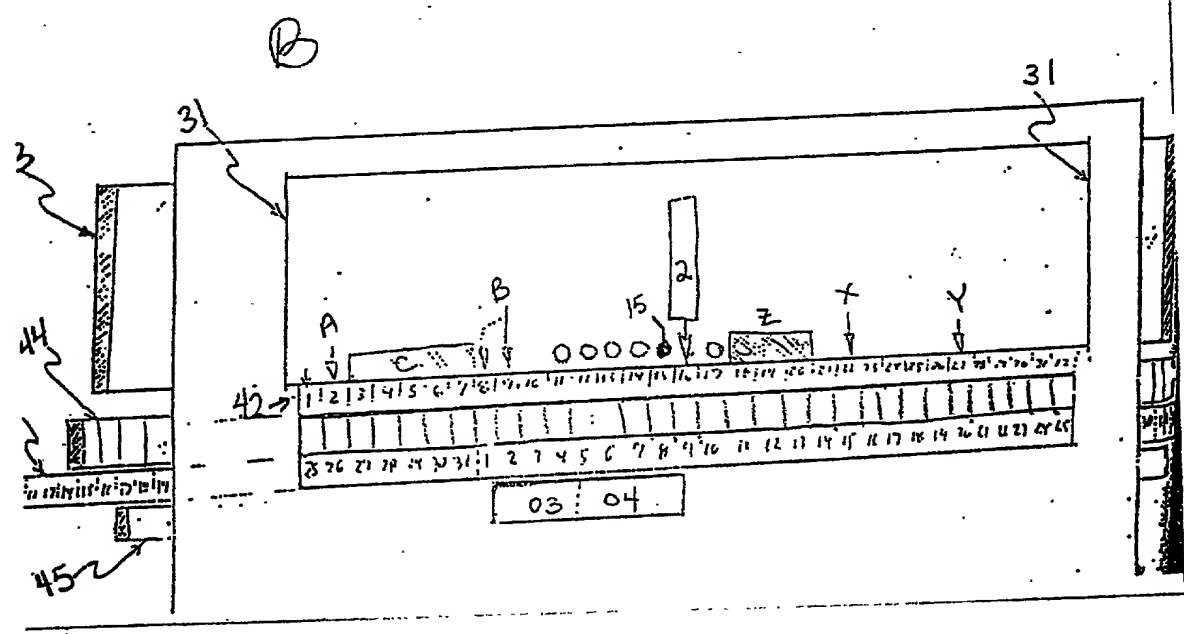

29/42



FIG. 25

POSTED 0525260

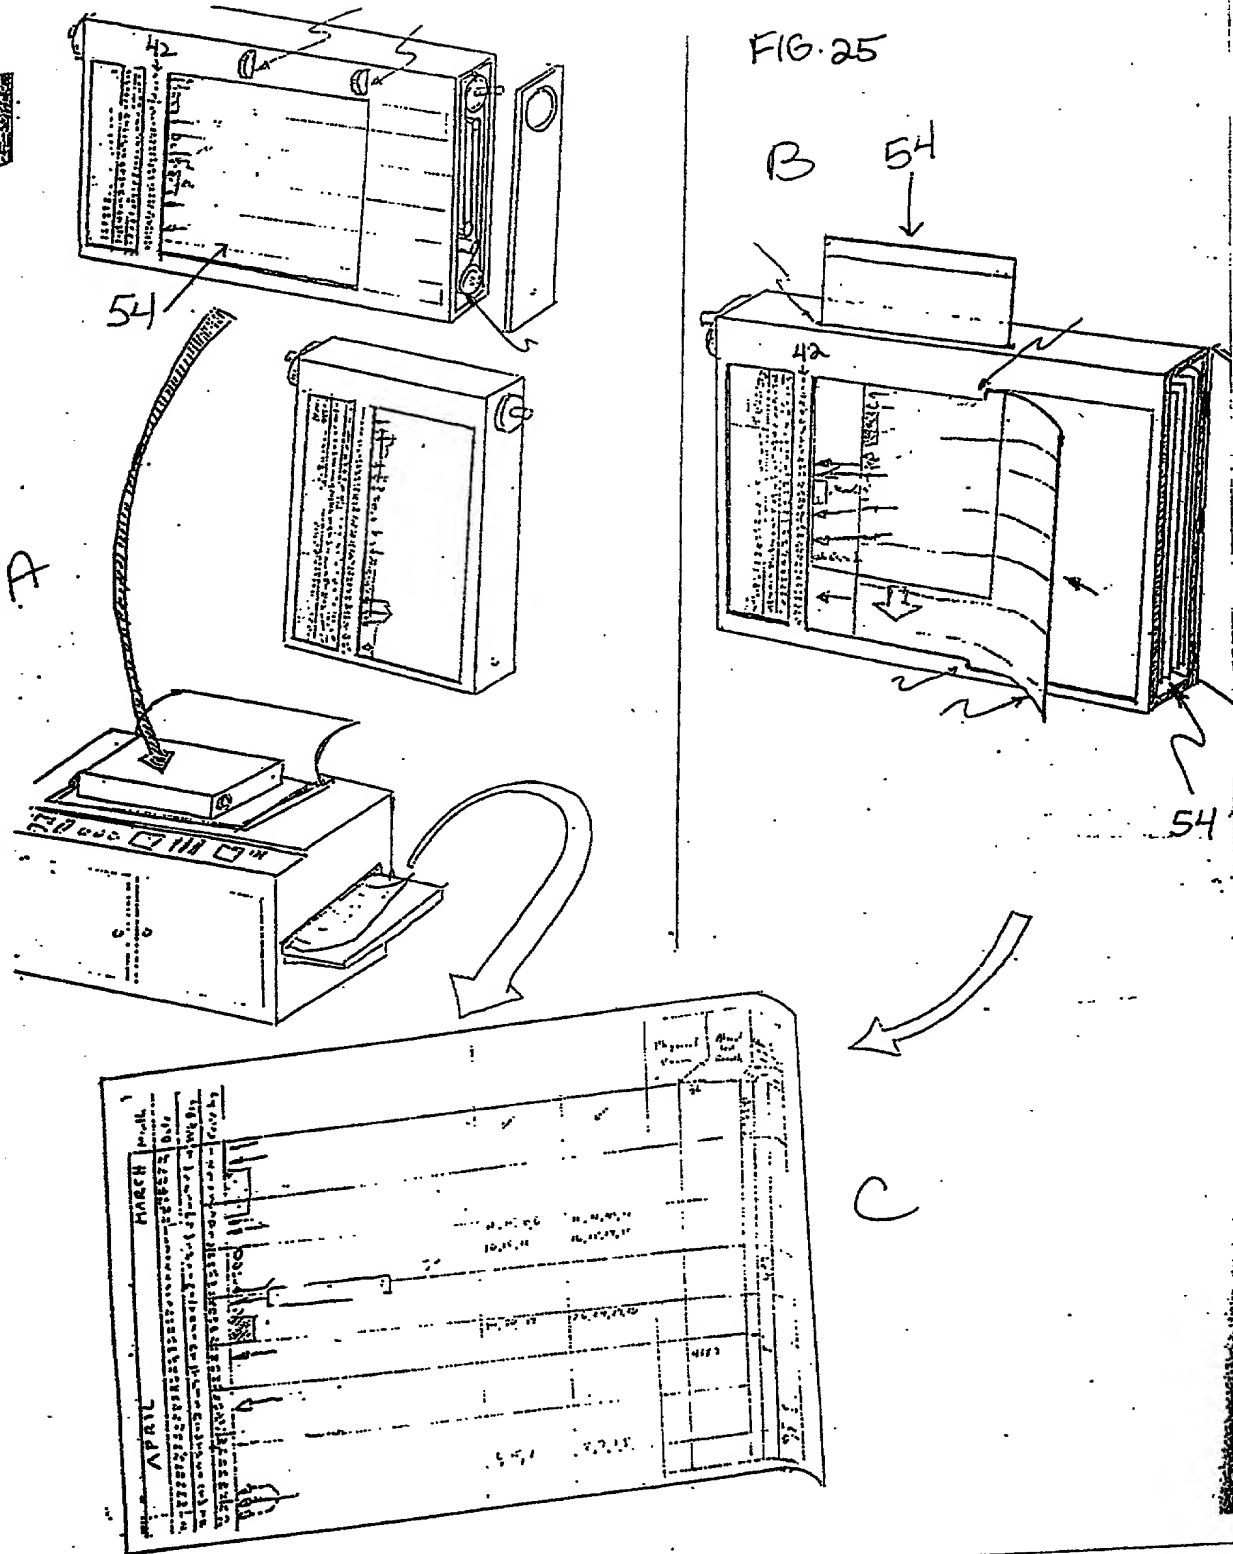


30/42

FIG. 20

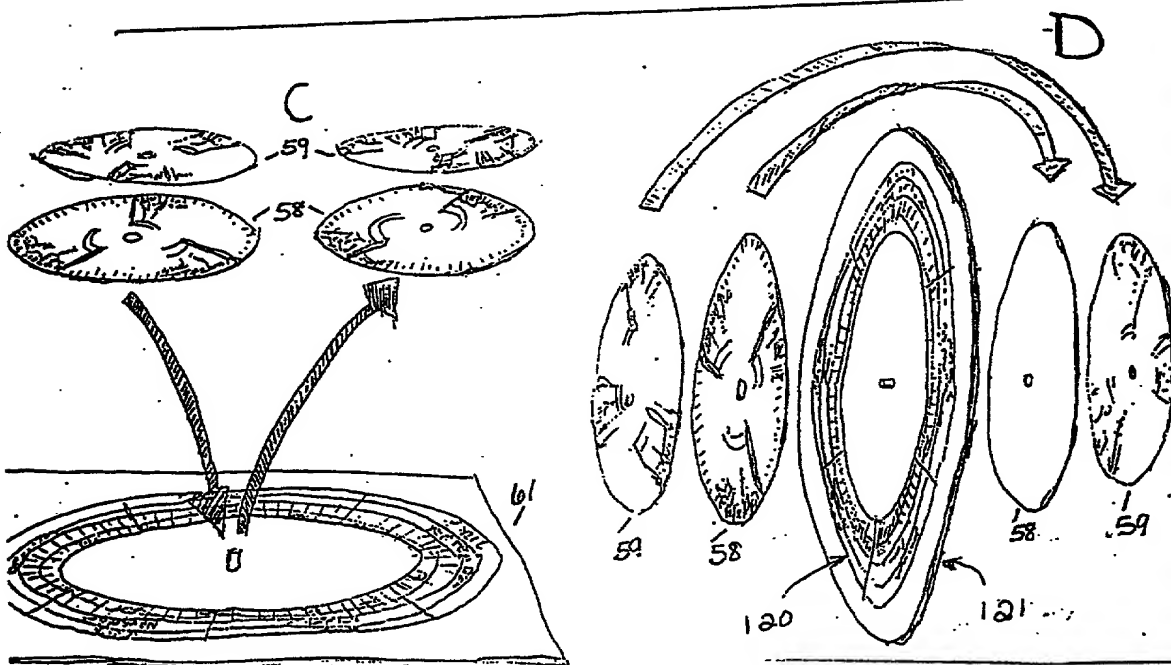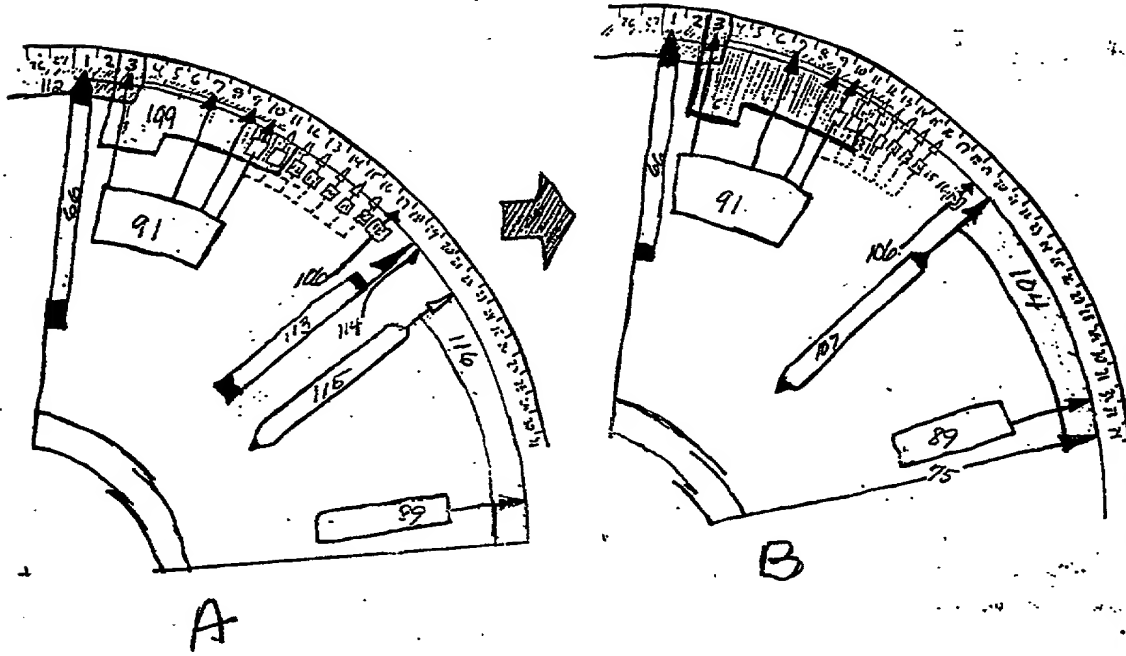


31/42


FIG. 27

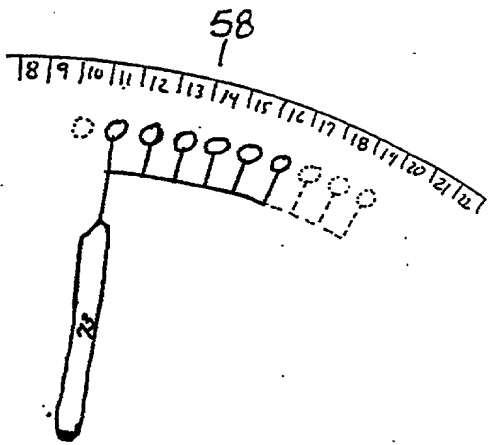


A

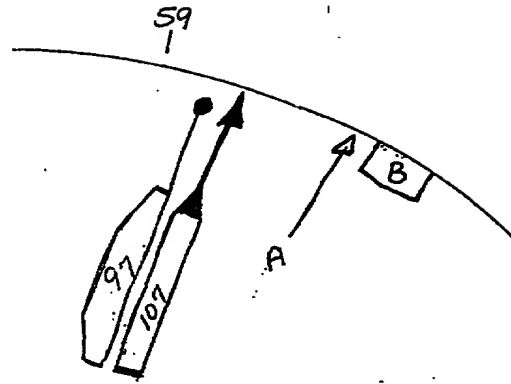

B

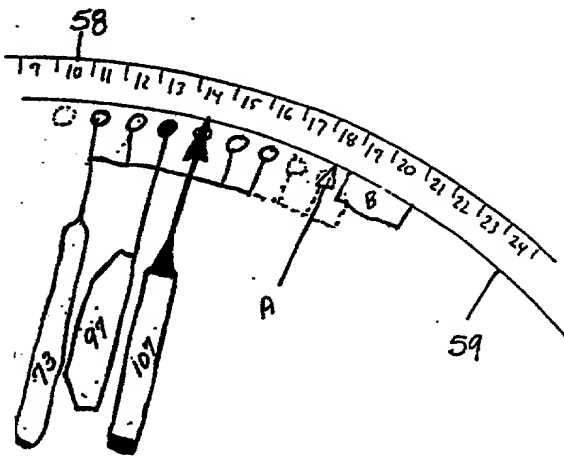


C

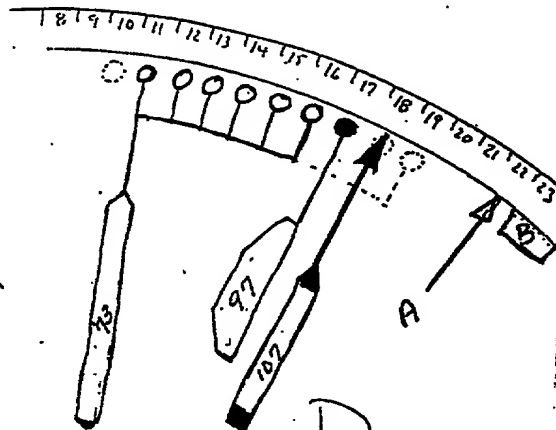


D


32/42
FIG. 28

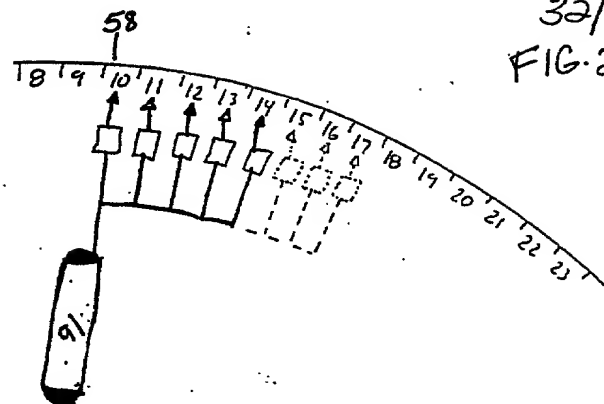


A

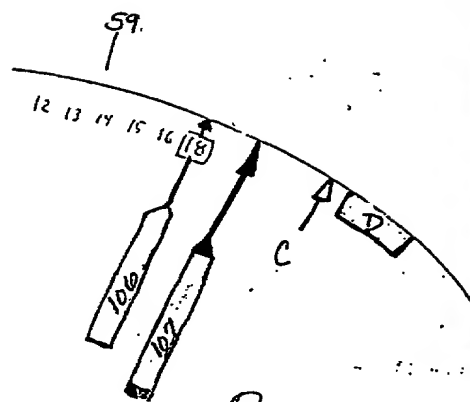



B

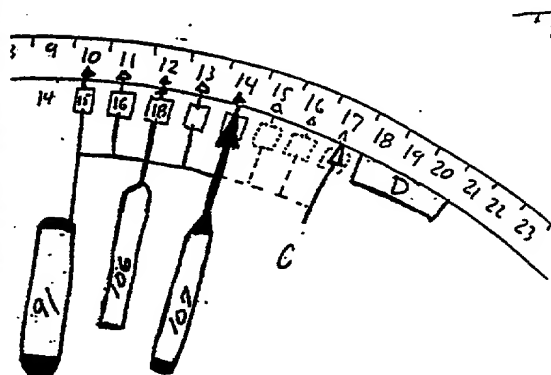

C


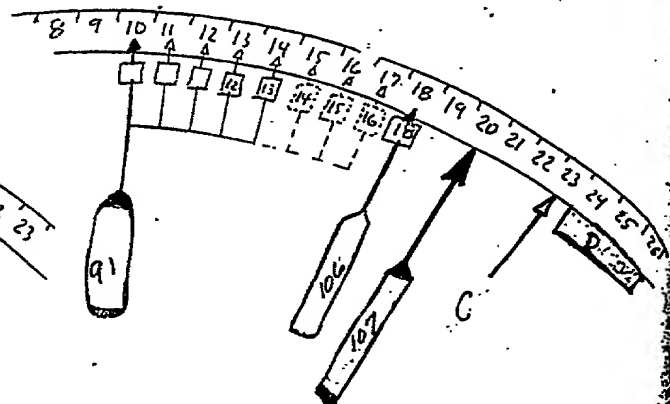


D

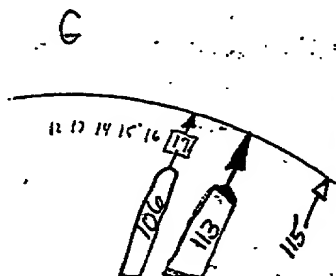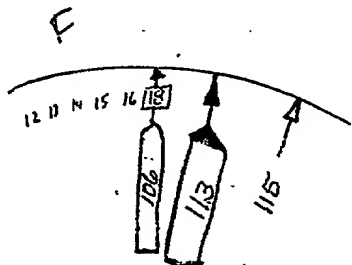



33/42

FIG. 29

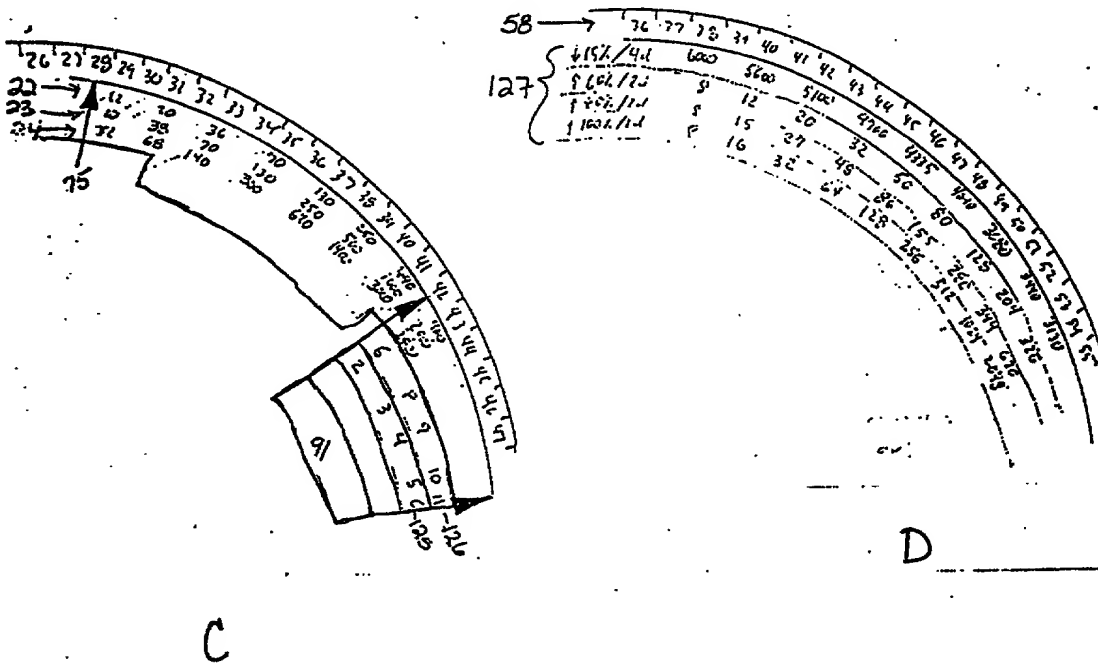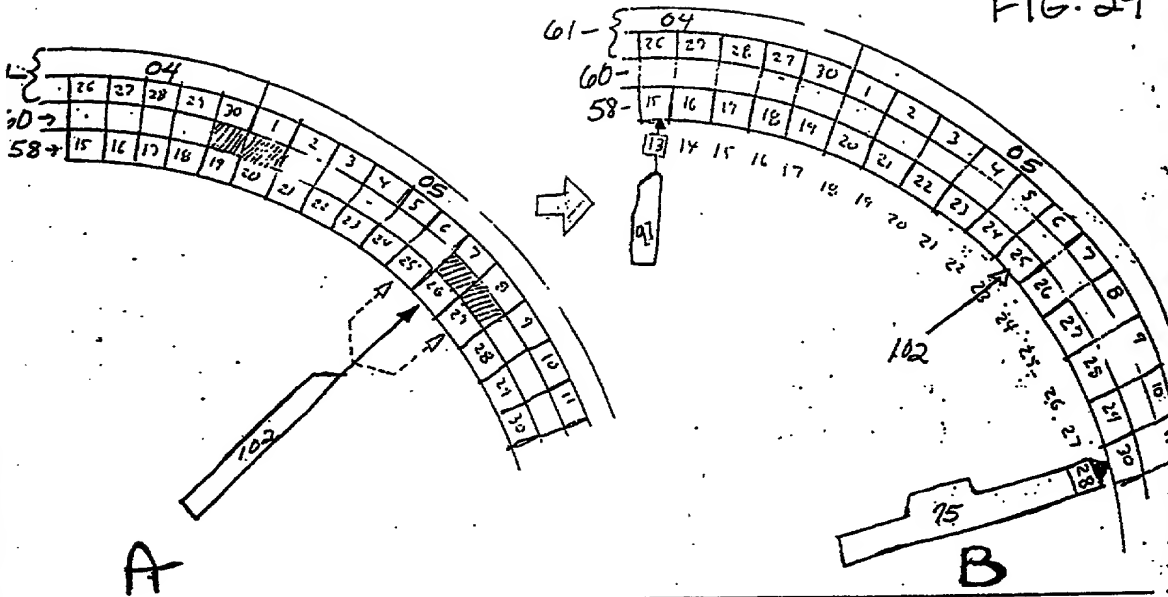


34/42

G-30

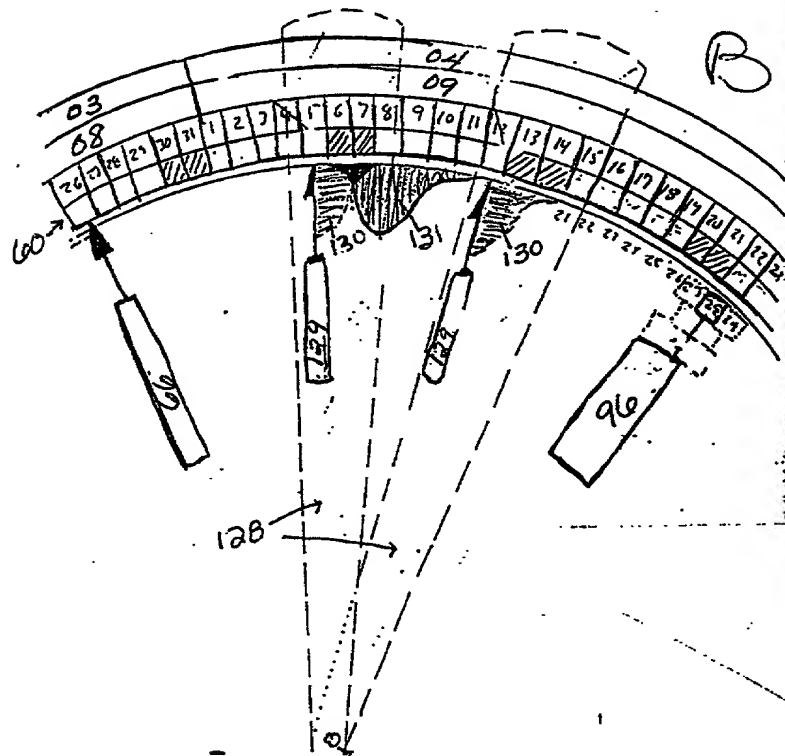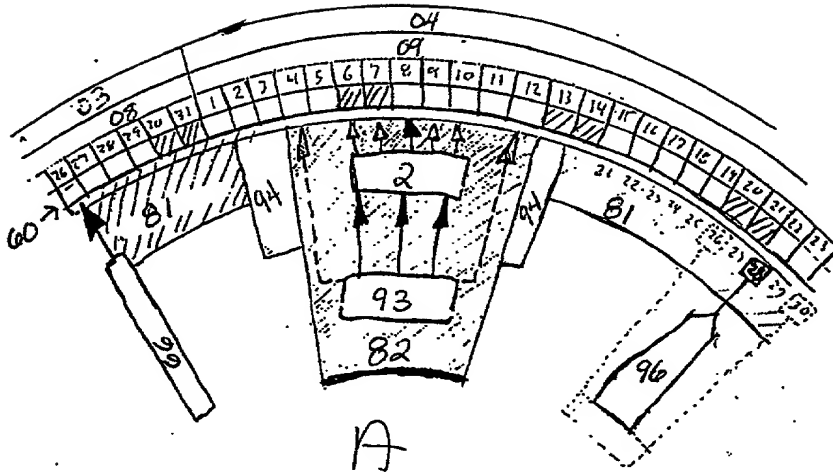


09/763250 04/01

FIG. 31

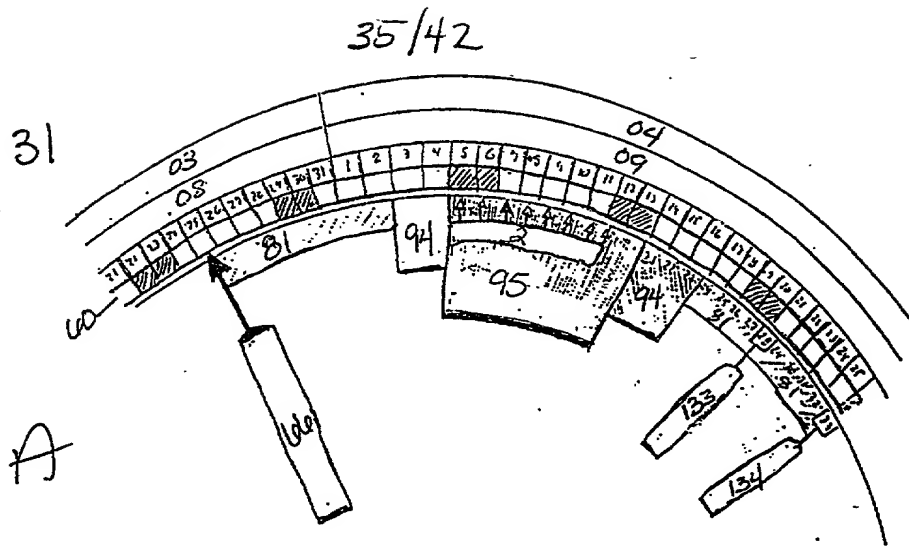

A

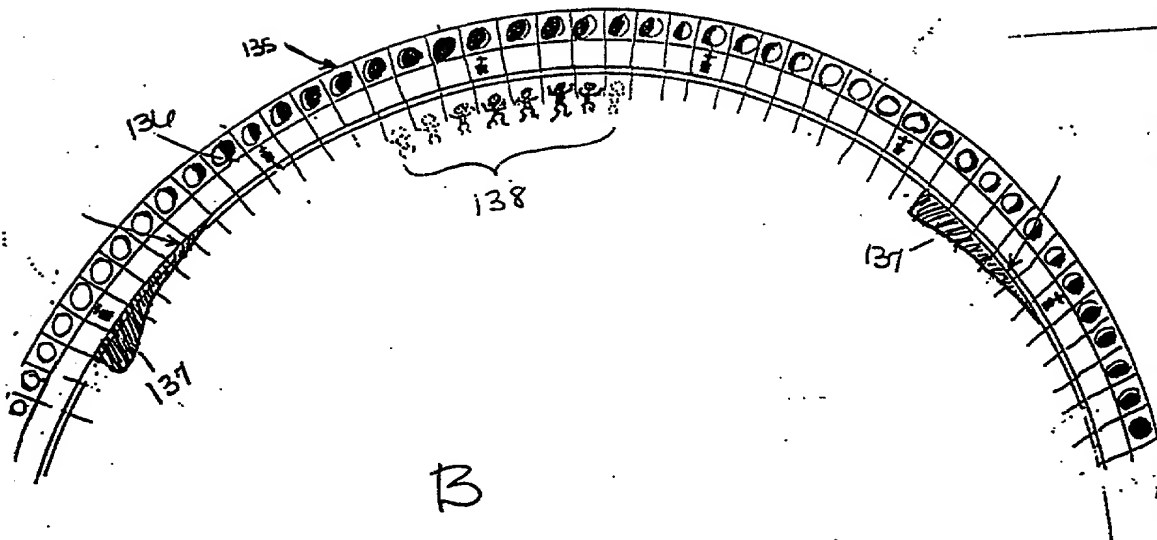

B

09/53350, 09/501

36/42

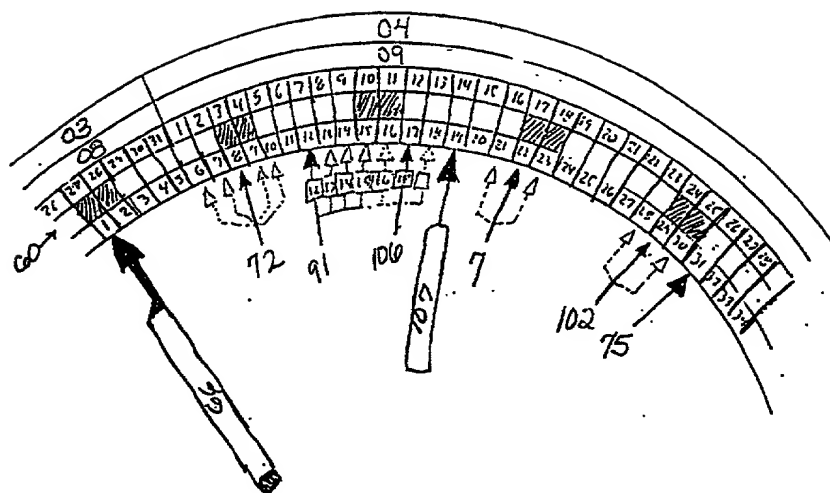


FIG. 32

37/42


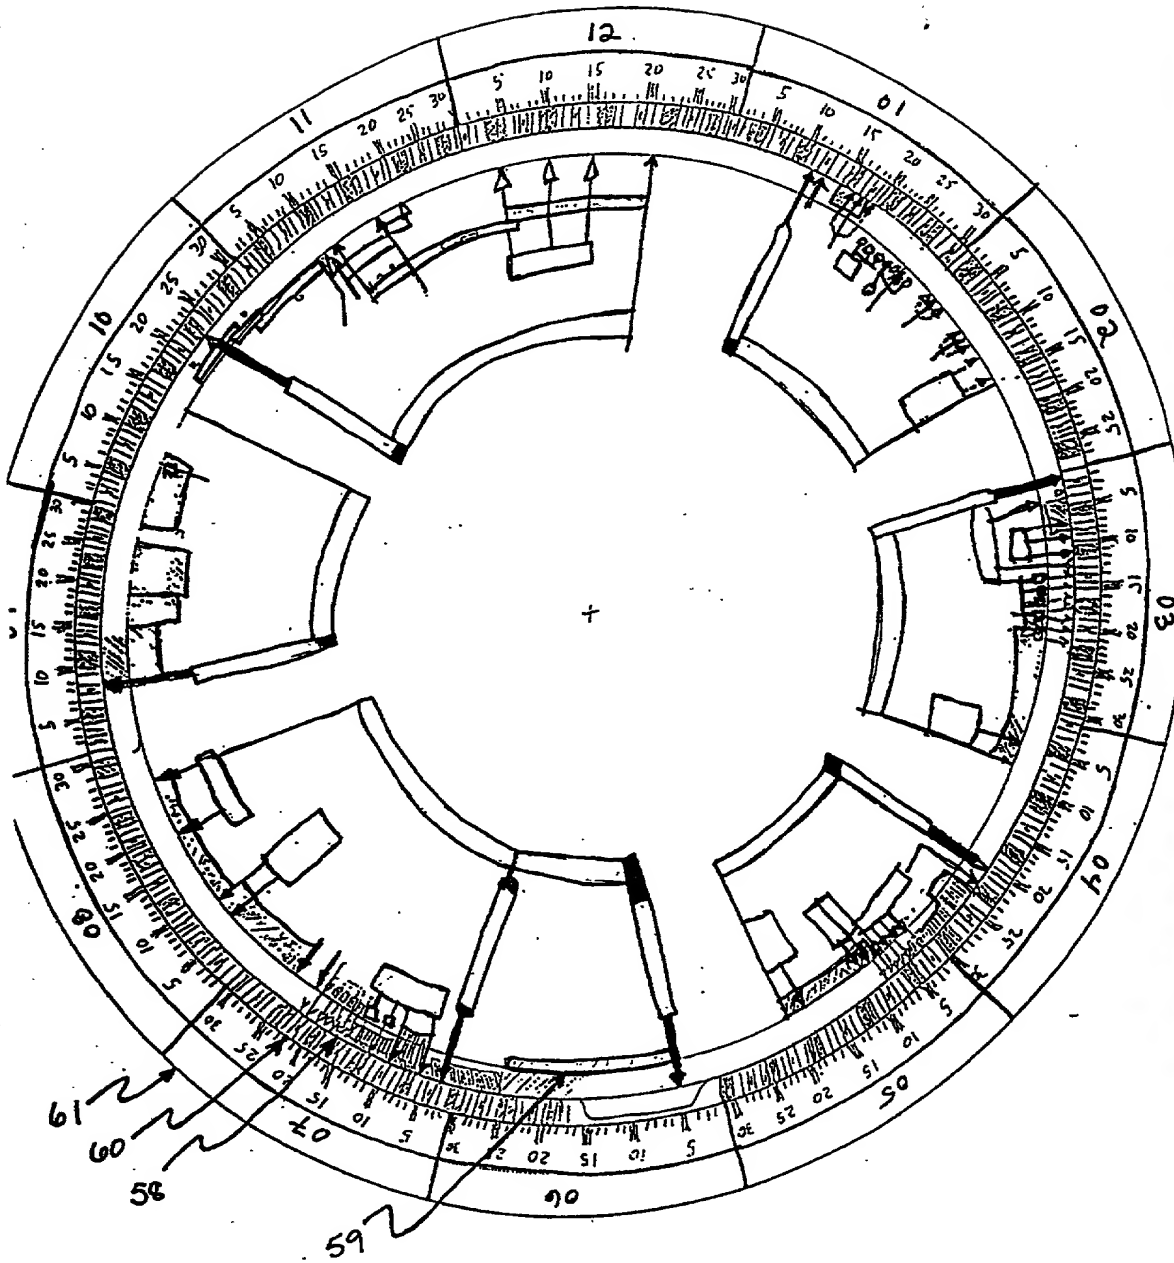





FIG. 33

38/42

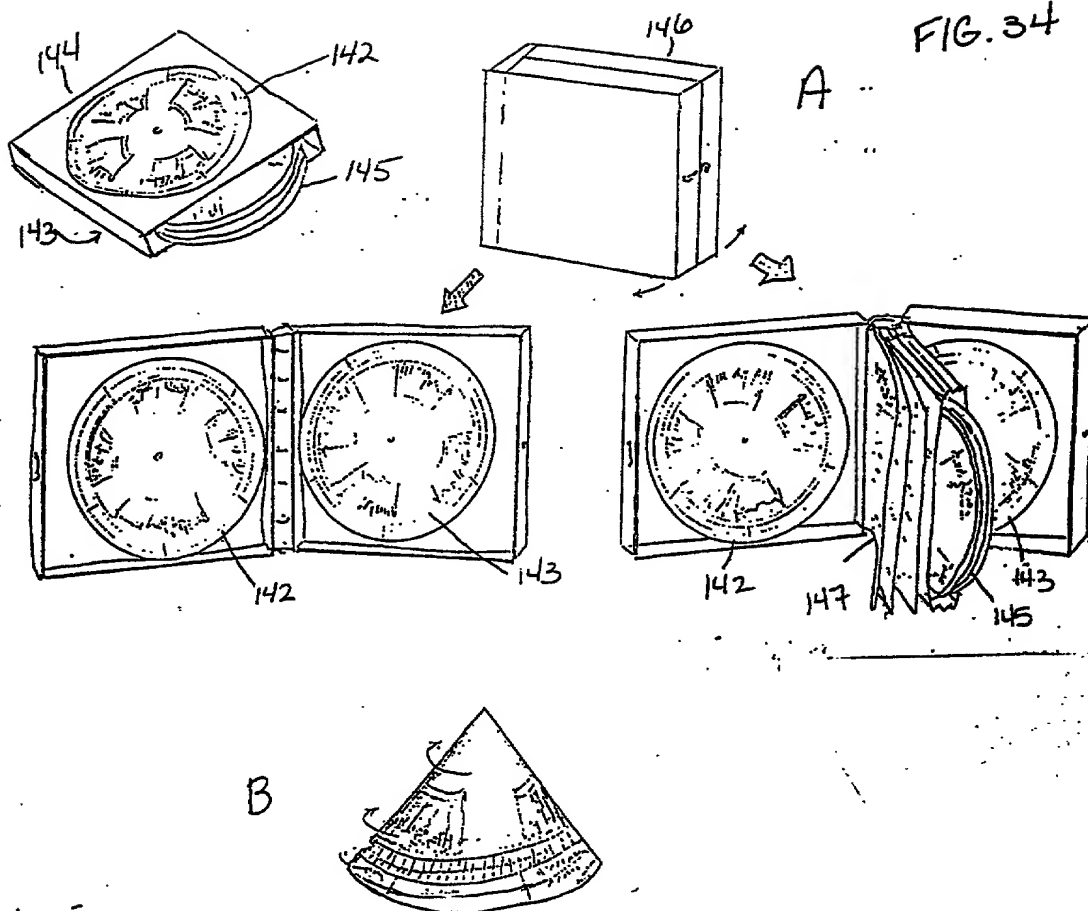

39/42

FIG. 35

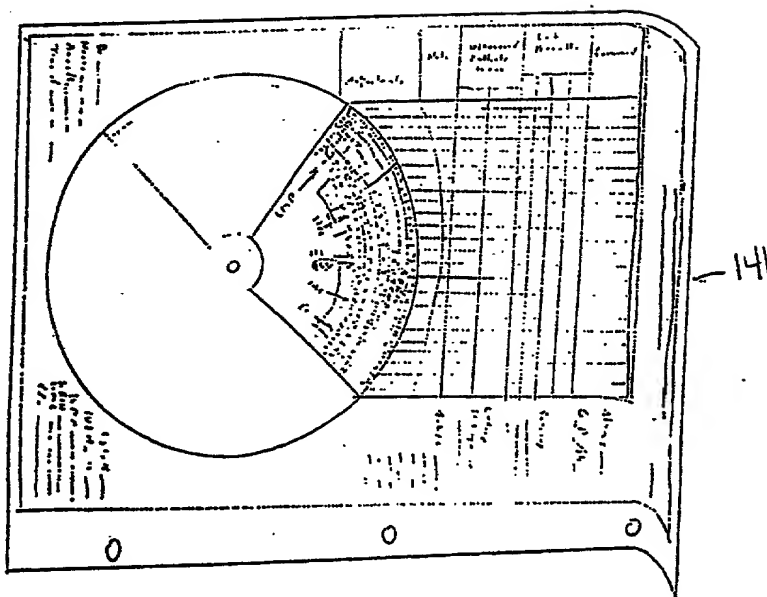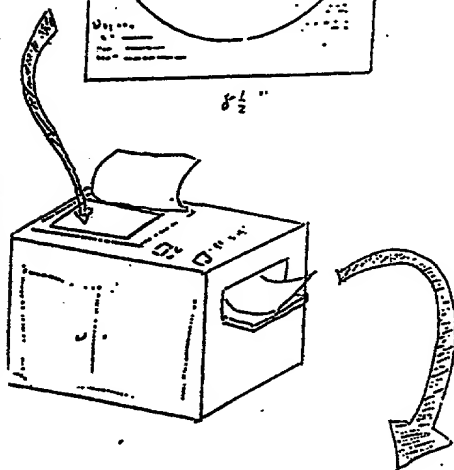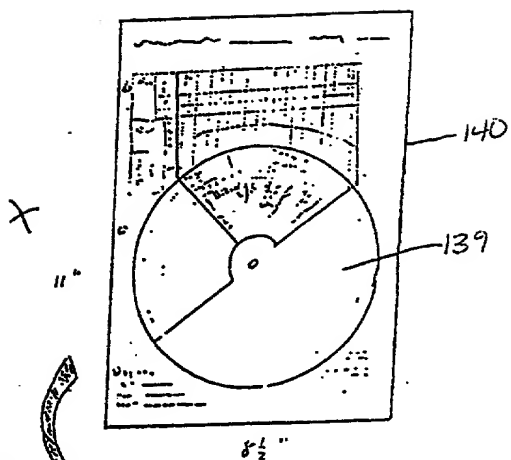

40/42

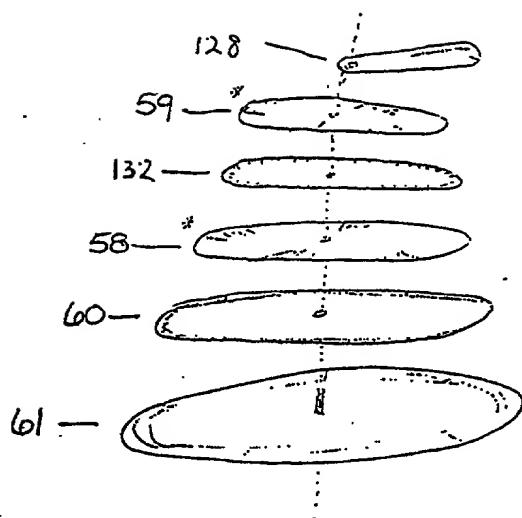


FIG. 36

09/763250-004504

41/42

A

10 → 06





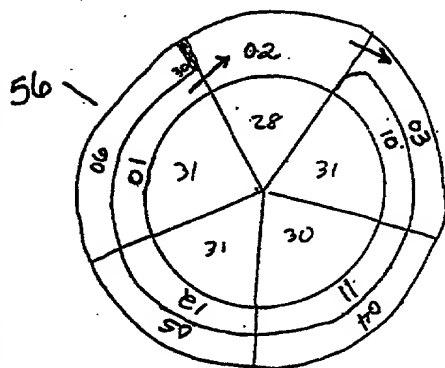


FIG. 37

3

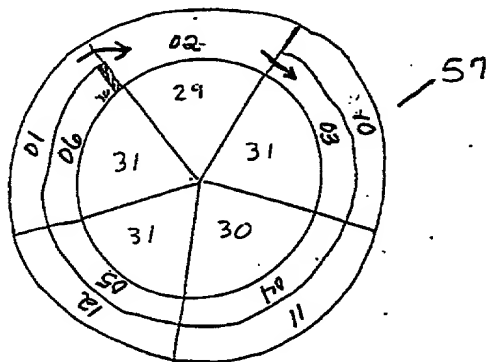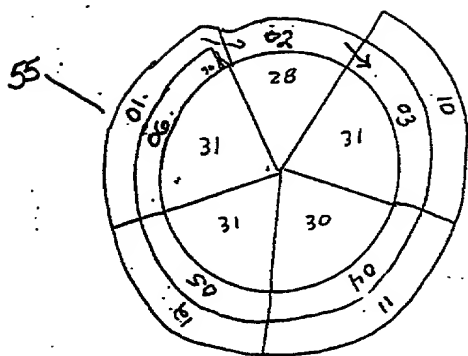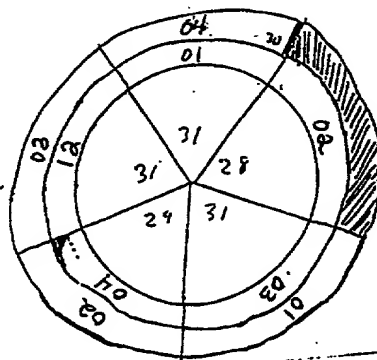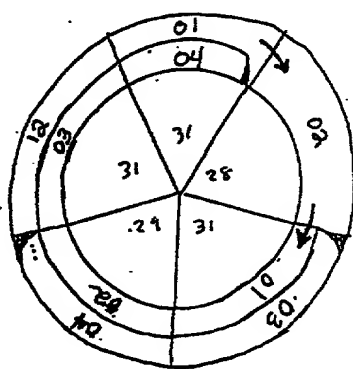

42/42

A


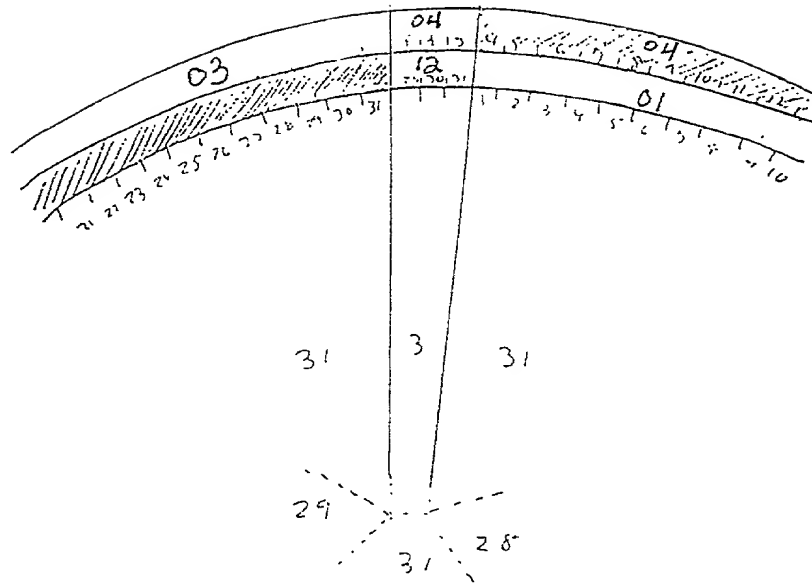


FIG. 38

B

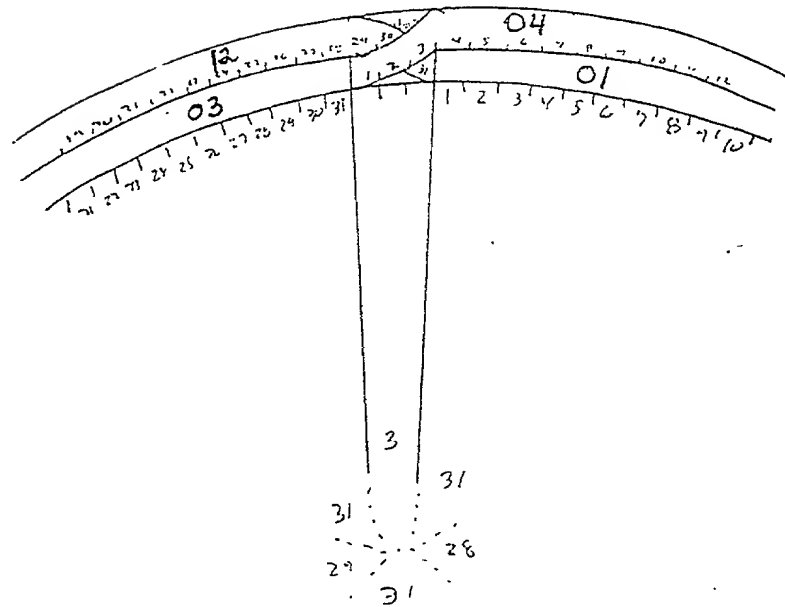

OPPEDAHL & LARSON LLP
FILE NO. HRCMP002USNP

Claim for Priority

I hereby claim foreign priority benefits under 35 U.S.C. § 119 (a)-(d) or 365(b) of any foreign application(s) for patent or inventor's certificate, or 365(a) of any PCT international application which designated at least one country other than the United States of America, listed below and have also identified below any foreign applications for patent or inventor's certificate, or of any PCT International application having a filing date before that of the application on which priority is claimed.

EARLIEST FOREIGN APPLICATION(S), FILED WITHIN TWELVE MONTHS (6 MONTHS FOR DESIGN) PRIOR TO SAID APPLICATION					
COUNTRY	APPLICATION NO	DATE OF FILING (day/month/year)	DATE OF ISSUE (day/month/year)	PRIORITY CLAIMED	CERTIFIED COPY ATTACHED
				YES <input type="checkbox"/> NO <input type="checkbox"/>	YES <input type="checkbox"/> NO <input type="checkbox"/>

FOREIGN APPLICATION(S), IF ANY, FILED MORE THAN 12 MONTHS (6 MONTHS FOR DESIGN) PRIOR TO SAID APPLICATION			
COUNTRY	APPLICATION NO	DATE OF FILING (day/month/year)	DATE OF ISSUE (day/month/year)

Provisional Application

I hereby claim the benefit under 35 U.S.C § 119(e) of any United States provisional application(s) listed below.

60/139,693


(application number)

15 June 1999

(filing date)

I hereby declare that all statements made herein of my own knowledge are true and that all statements made on information and belief are believed to be true; and further that these statements are made with the knowledge that willful false statements and the like so made are punishable by fine or imprisonment or both, under Section 1001 of Title 18 of the United States Code and that such willful false statements may jeopardize the validity of the application or any patent issued thereon.

1-00

NAME OF SOLE OR FIRST INVENTOR	LAST NAME <u>CRAIG</u>	FIRST NAME <u>RANDALL</u>	MIDDLE NAME <u>H</u>
RESIDENCE & CITIZENSHIP	CITY OF RESIDENCE <u>CHANDLER</u>	STATE OR COUNTRY OF RESIDENCE <u>AZ</u> <i>AK</i>	COUNTRY OF CITIZENSHIP <u>USA</u>
POST OFFICE ADDRESS <u>3200 N. Dobson Road, #F7</u>		CITY <u>Chandler</u>	STATE/COUNTRY ZIP CODE <u>AZ 85224</u>
DATE <u>2-14-01</u>		SIGNATURE 	

- [] Signature for additional joint inventor attached. Number of Pages ____.
- [] Signature by Administrator(trix) or legal representative for deceased or incapacitated inventor. Number of Pages ____.
- [] Signature for inventor who refuses to sign or cannot be reached by person authorized under 37 CFR § 1.47. Number of Pages ____.

0274330 034504

OPPEDAHL & LARSON LLP
FILE NO. HRCMP002USNP

**COMBINED DECLARATION
AND POWER OF ATTORNEY**

As a below named inventor, I hereby declare that:

My citizenship, residence and post office address are as listed below next to my name.

I believe I am the original, first and [x] sole/[] joint inventor of the subject matter which is claimed and for which a patent is sought on the invention entitled: Apparatus For Calculating Time Periods and Future Dates the specification of which

(a) [] is attached hereto.

(b) [] was filed on _____ as Application Serial No. _____ and was amended on _____.

(c) [x] was described and claimed in International Application No. PCT/US99/27771 filed on 22 November 1999 and amended on _____.

Acknowledgment of Duty of Disclosure

I hereby state that I have reviewed and understood the content of the above identified specification, including the claims, as amended by any amendment referred to above. I acknowledge the duty to disclose information which is material to the patentability of the subject matter claimed in this application in accordance with Title 37, Code of Federal Regulations § 1.56(a).

35 U.S.C. § 120

I hereby claim the benefit under Title 35, United States Code, § 120 of any United States application(s) or 385(c) of any PCT international application designating the United States of America, listed below and, insofar as the subject matter of each of the claims of this application is not disclosed in the prior United States or PCT international application in the manner provided by the first paragraph of 35 U.S.C. § 112, I acknowledge the duty to disclose material information as defined in 37 CFR § 1.56 which became available between the filing date of the prior application and the national or PCT international filing date of this application:

(Application Serial No.)	(Filing Date)	(Status)(patented,pending,abandoned)	(Patent No. if applicable)
--------------------------	---------------	--------------------------------------	----------------------------

(Application Serial No.)	(Filing Date)	(Status)(patented,pending,abandoned)	(Patent No. if applicable)
--------------------------	---------------	--------------------------------------	----------------------------

Power of Attorney

I hereby appoint Carl Oppedahl, PTO Reg. NO. 32,746, Marina T. Larson, PTO Reg. No. 32,038, and D'Arcy Straub, PTO Reg. NO. 47,113, of the firm of OPPEDAHL & LARSON LLP, having office at P.O. Box 5068, 256 Dillon Ridge Road, Dillon, CO 80435 as attorneys to prosecute this application and to transact all business in the Patent and Trademark Office connected therewith.

SEND CORRESPONDENCE TO:



021121

PATENT TRADEMARK OFFICE



021121

PATENT TRADEMARK OFFICE

DIRECT TELEPHONE CALLS TO:

OPPEDAHL & LARSON LLP
(970) 488-8800